







# Thermostatic Radiator Valve

HT-10R

- 2) Turn HT-10R off by pressing ON/OFF button, then long press **M** button until it show a “0 and signal icon”, then press **UP** button, when HT-10R display **3** or **signal icon stop moving**, means code pairing done. Press ON/OFF button to return, and press again to turn it on.

## Parameter setting

Turn off the thermostat, Press and hold **M** and **UP** button for 3s, until it shows the item 01, each press of **M** button will go to next item setting, adjust the range by using **UP** and **DOWN** button.

<u>Menu</u>	<u>Description</u>	<u>Range</u>	<u>Default Value</u>
01	Temp. calibration for internal sensor	-8 °C ~8 °C	0 °C
02	Set Point Max.	5 °C ~35°C	35 °C
03	Set Point Min.	5 °C ~35°C	5 °C
05	Frost Protection Temp.	5 °C ~15°C	5 °C
10	Display	0: Room temp. 1: SET temp.	0
12	Open window detect function	1: ON 0: OFF	0
13	OWD Detect Time	2~30mins	15mins
14	OWD Drop temp. select (within detect time)	2.3.4°C	2 °C
15	OWD Delay time select (Return to previous working status)	10~60min	30mins
17	Factory reset	0: No 1: Yes, and then press On/off button for 5s,wait until thermostat restart	0
18	Software version		
19	Software version		
31	Battery voltage	Unit: 10mv	
32	PID P-band select	2 °C ~10°C	7 °C
33	PID I-time select	30~90min	30min

## Mounting