


Milano







1050mm Vanity Unit

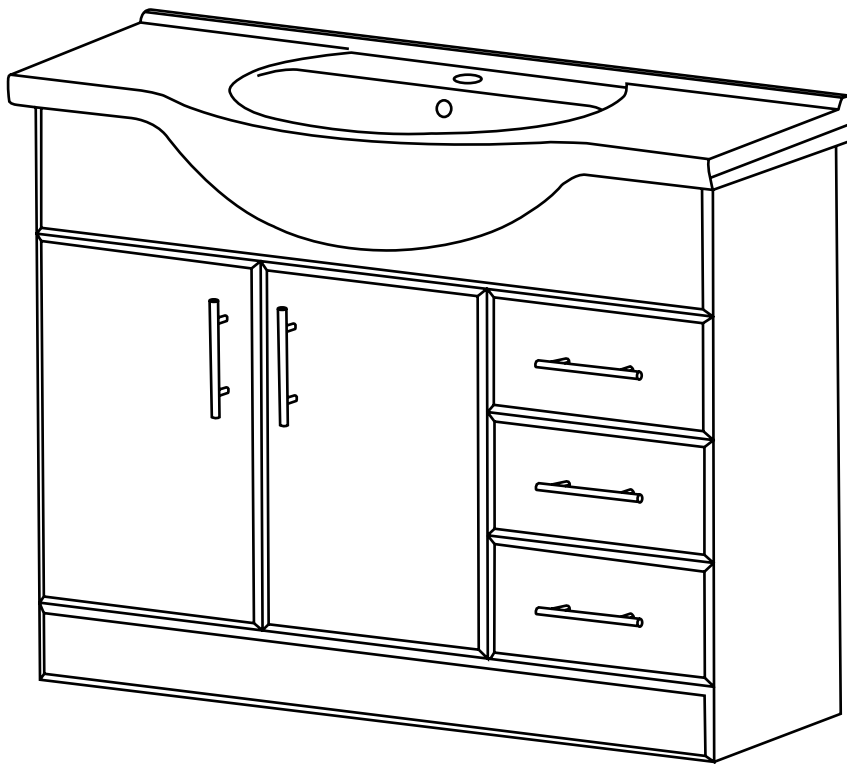


Installation Guide

Installation


Tools required for installing:

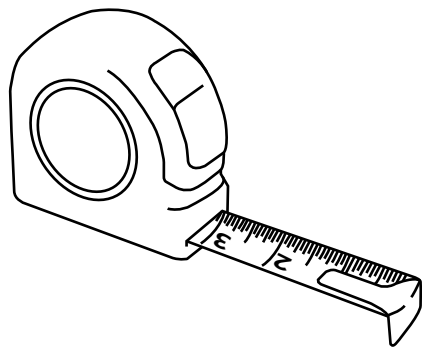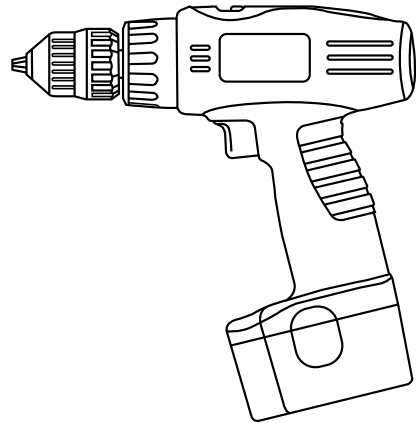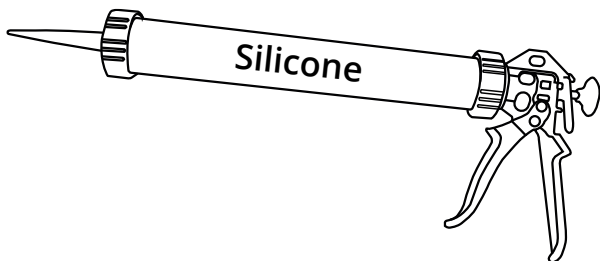


Parts included:

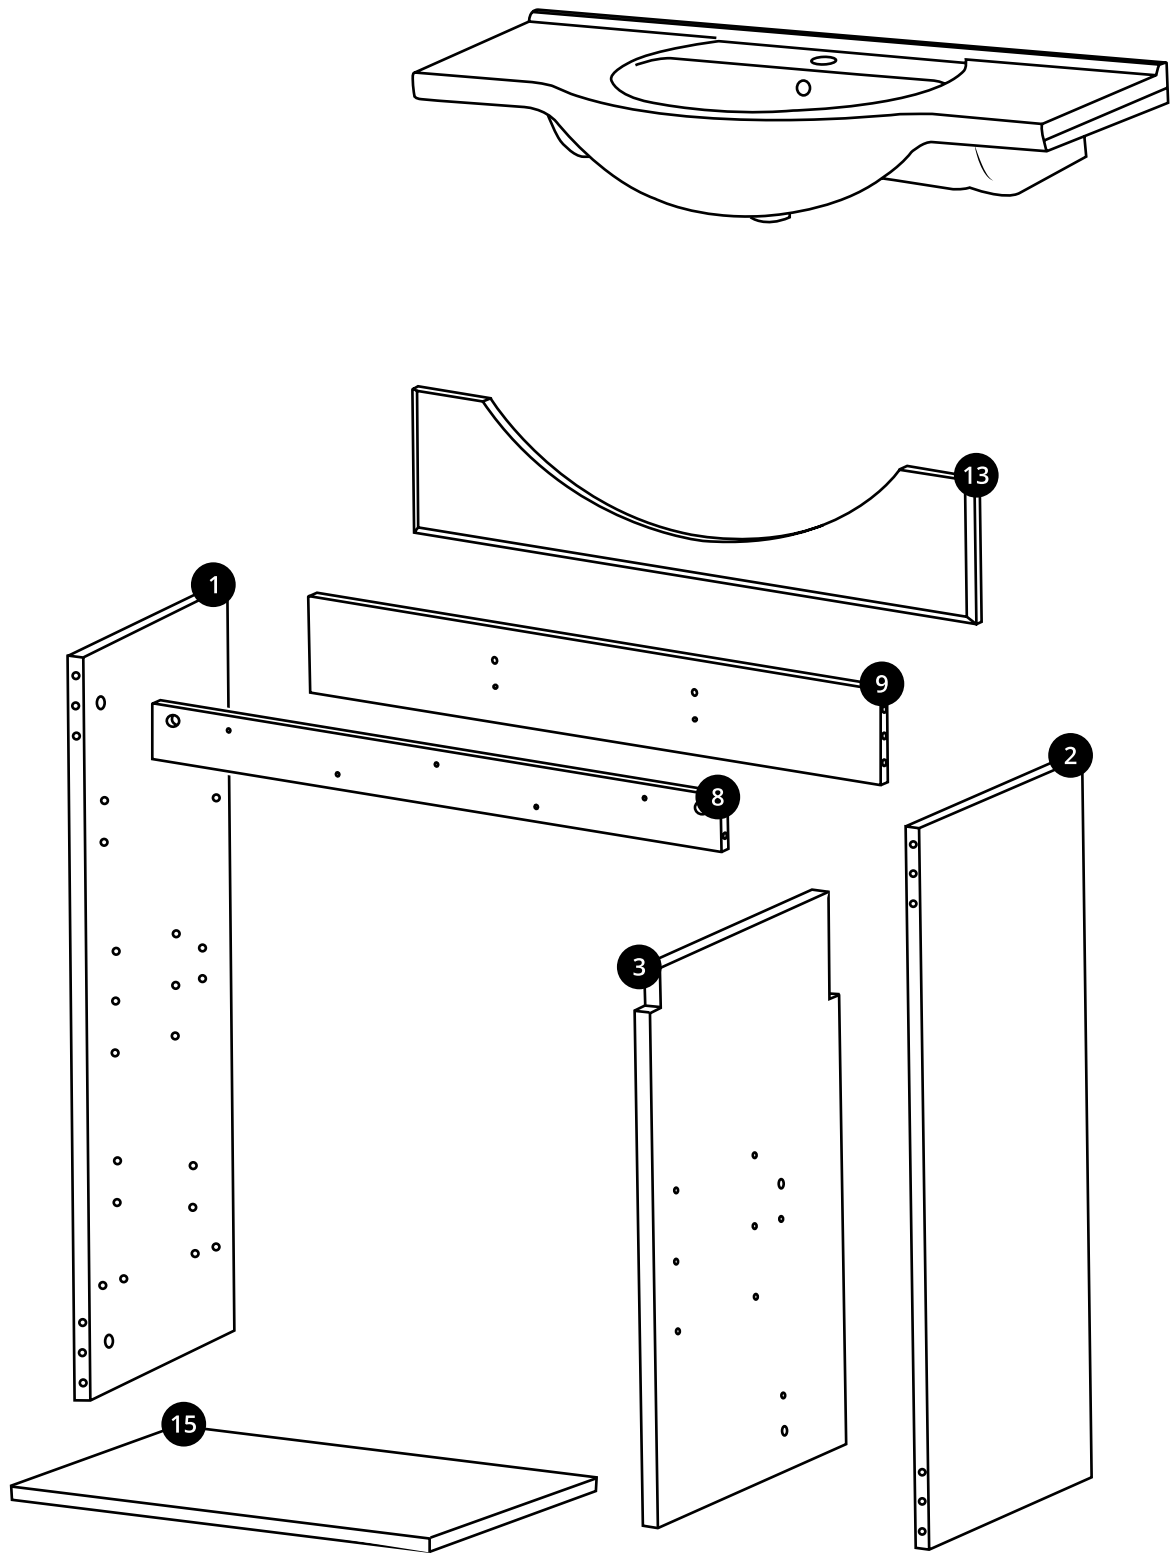


Parts included:

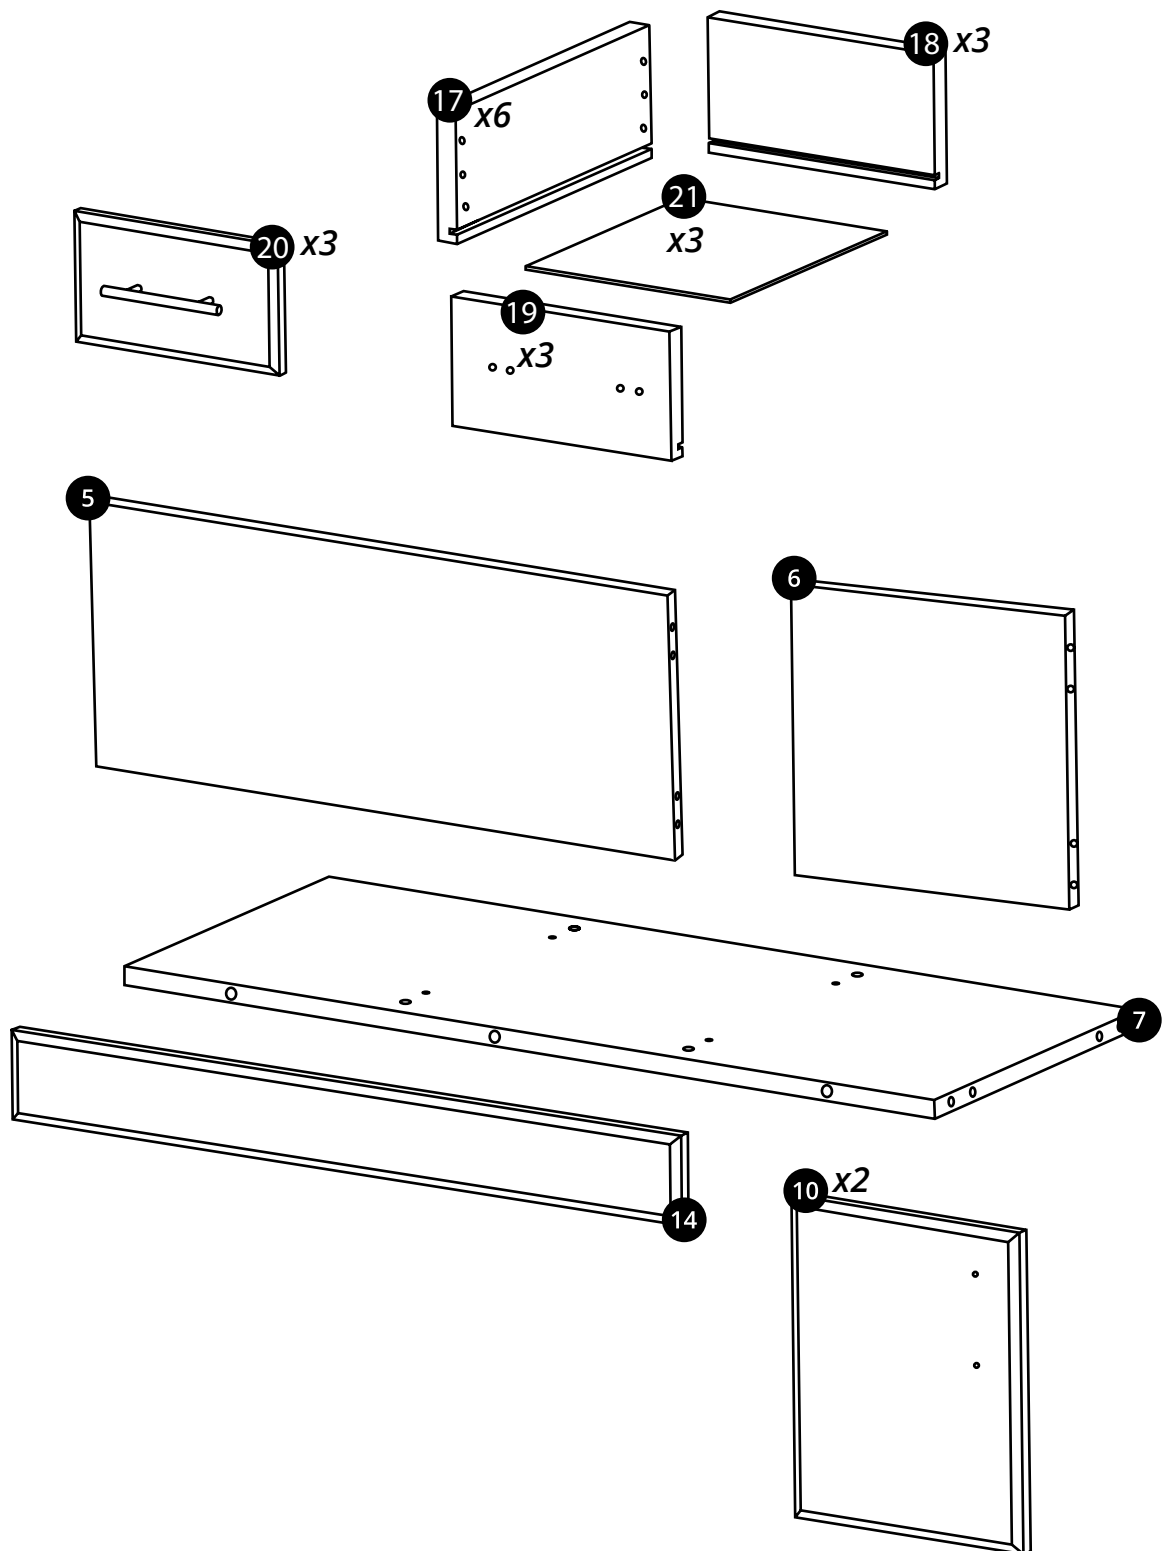


Parts included:

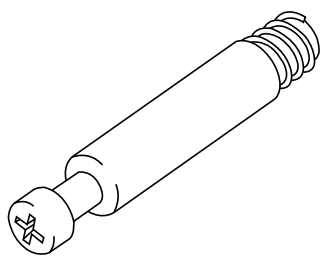


A
x20

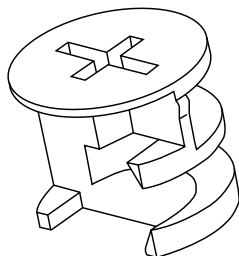

B
x20




C
x53

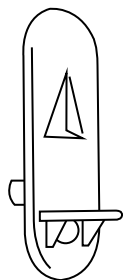


D
x4




E
x40

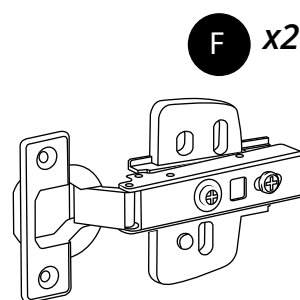


F x2

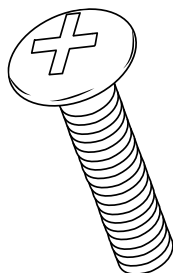


G
x4




H
x5

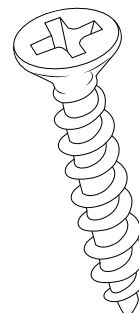


I
x10

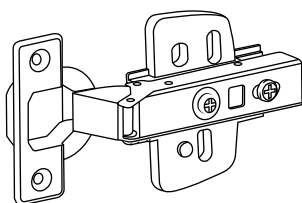


J
x2

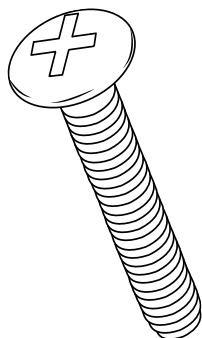



K
x6





L
x6

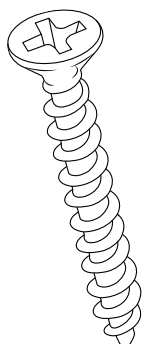



M
x16

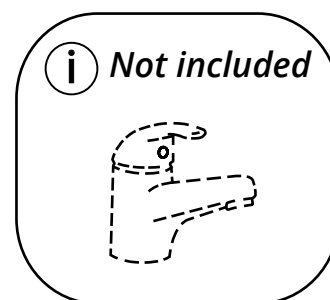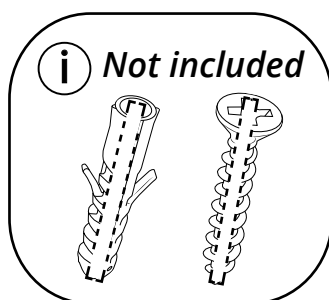


1

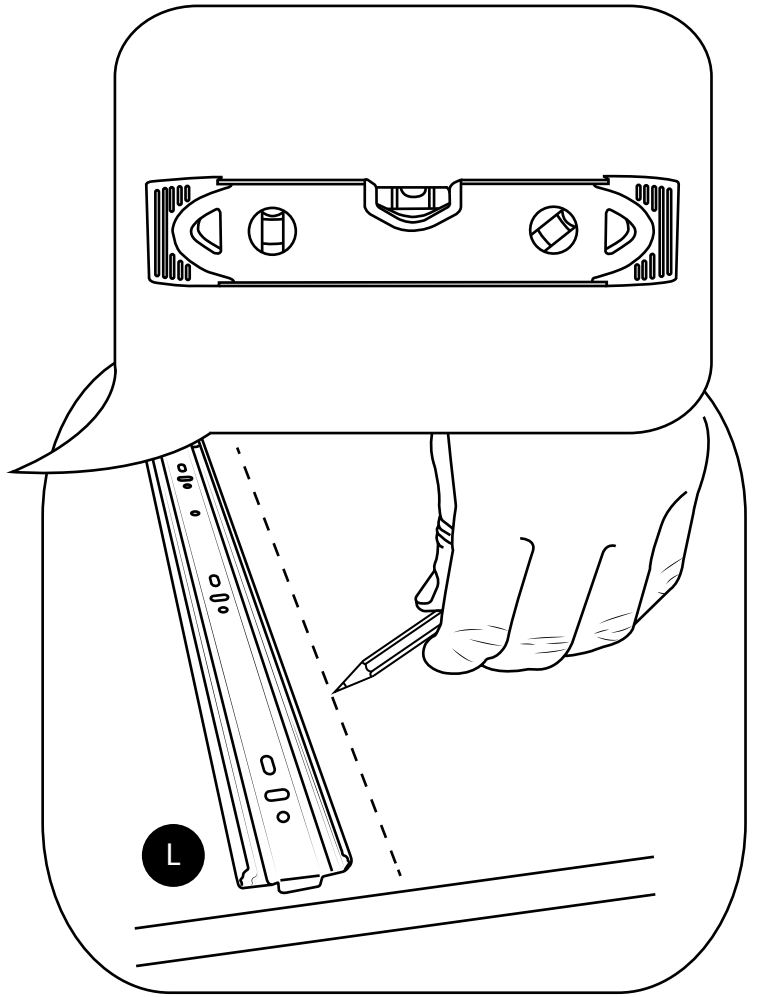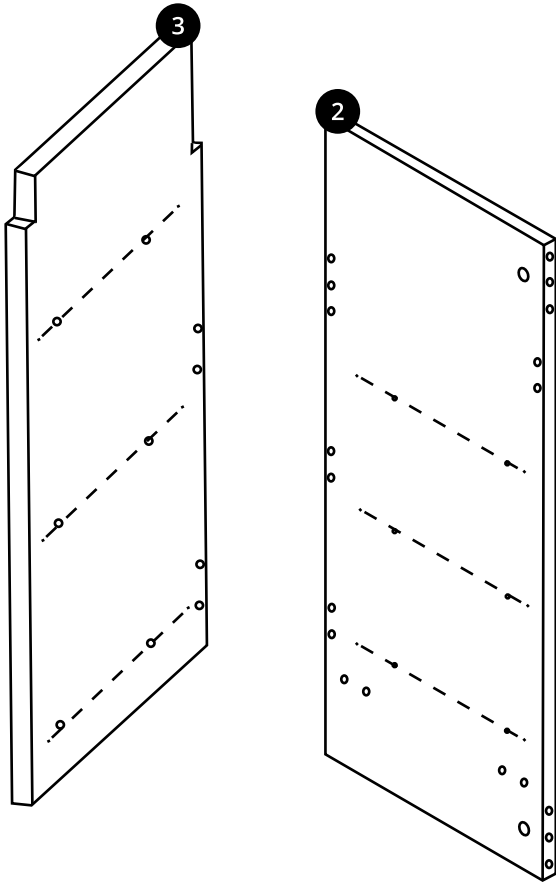


2

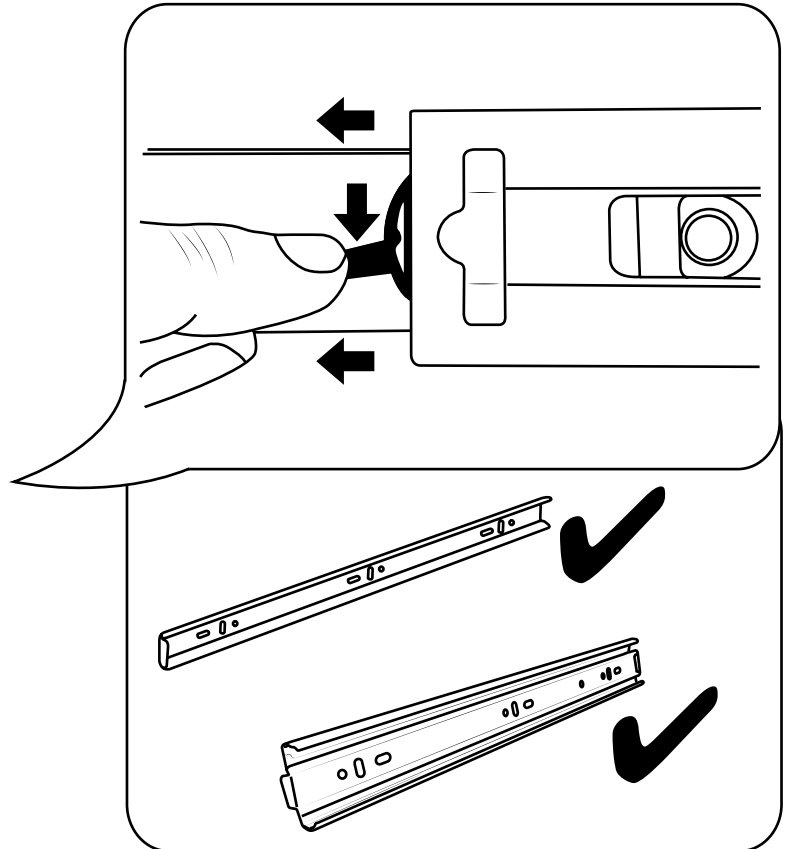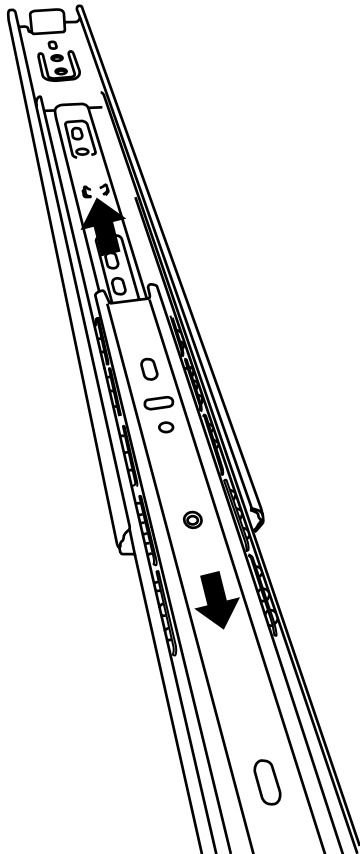


3

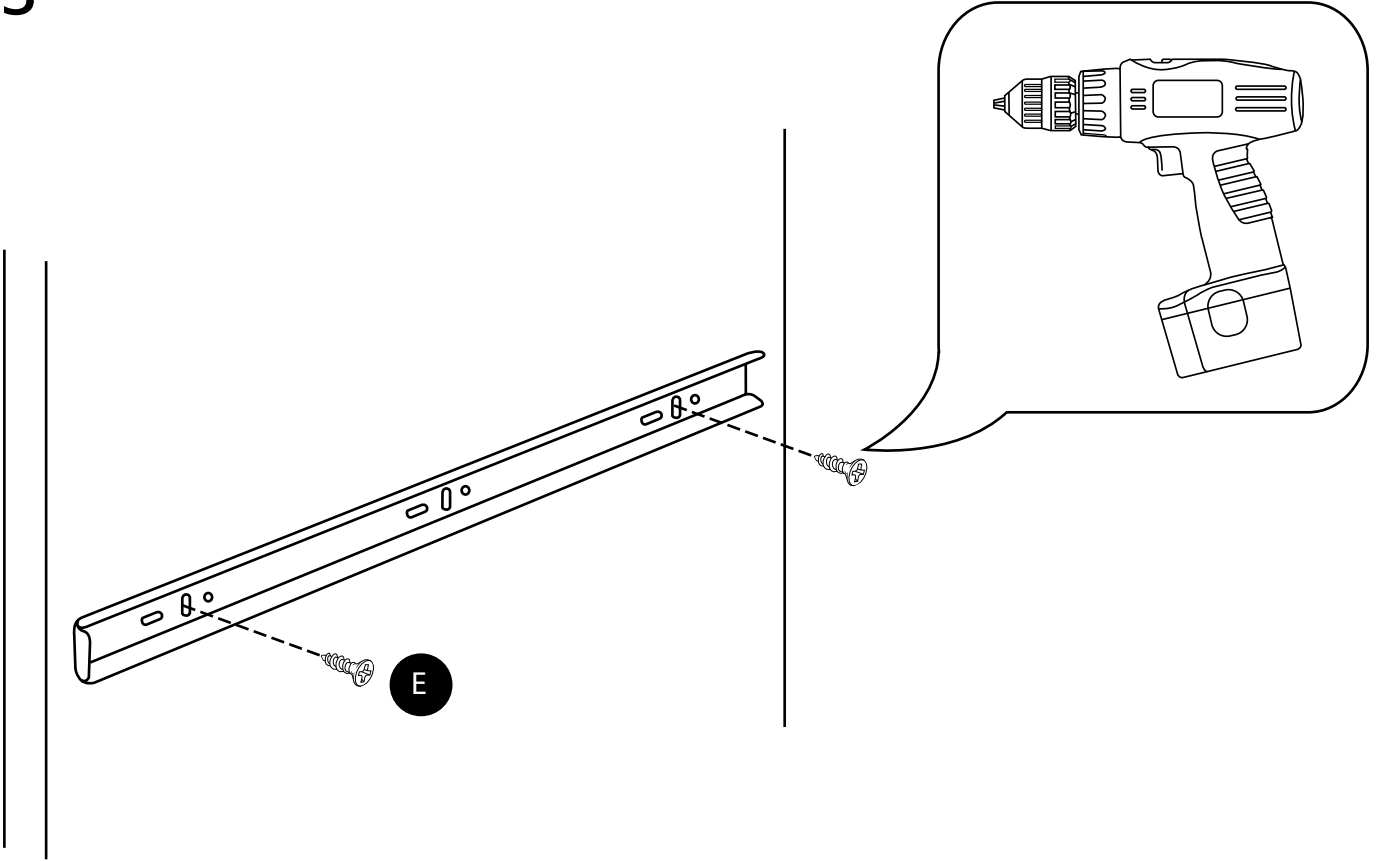


4

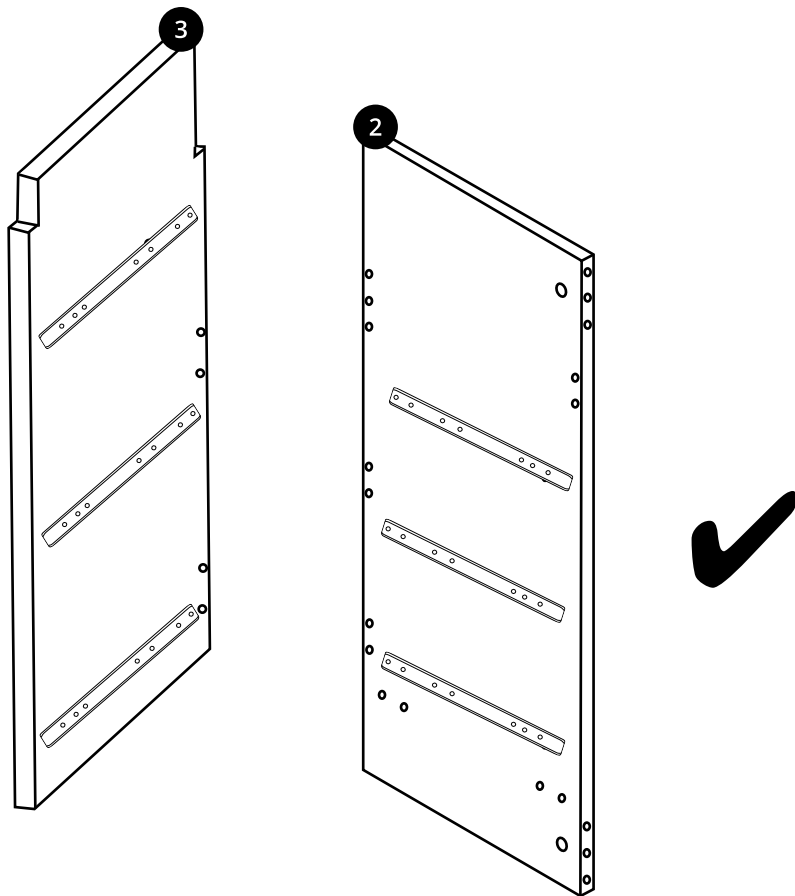


5

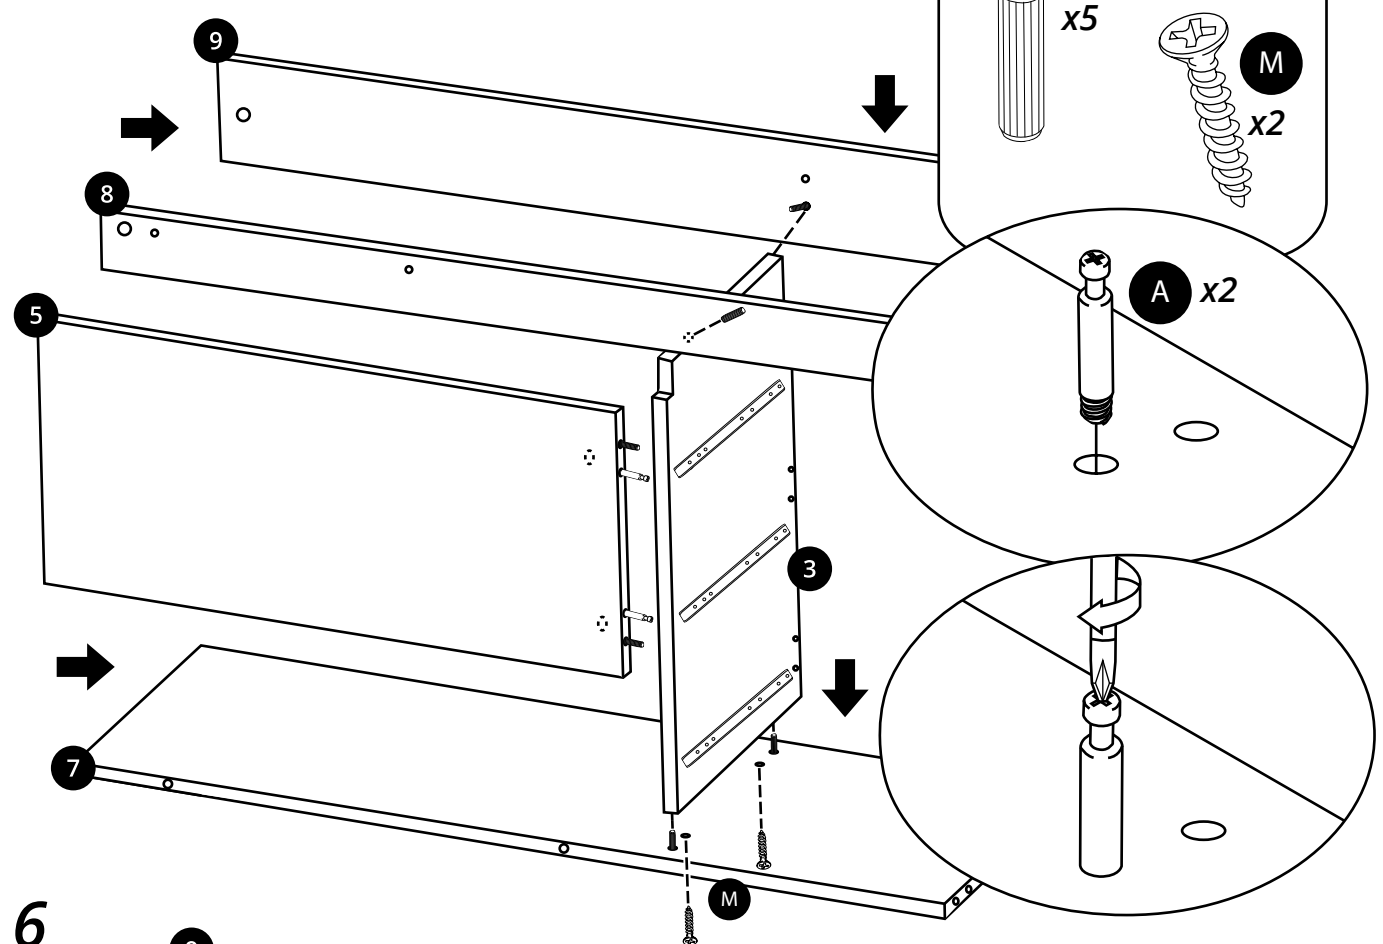


6

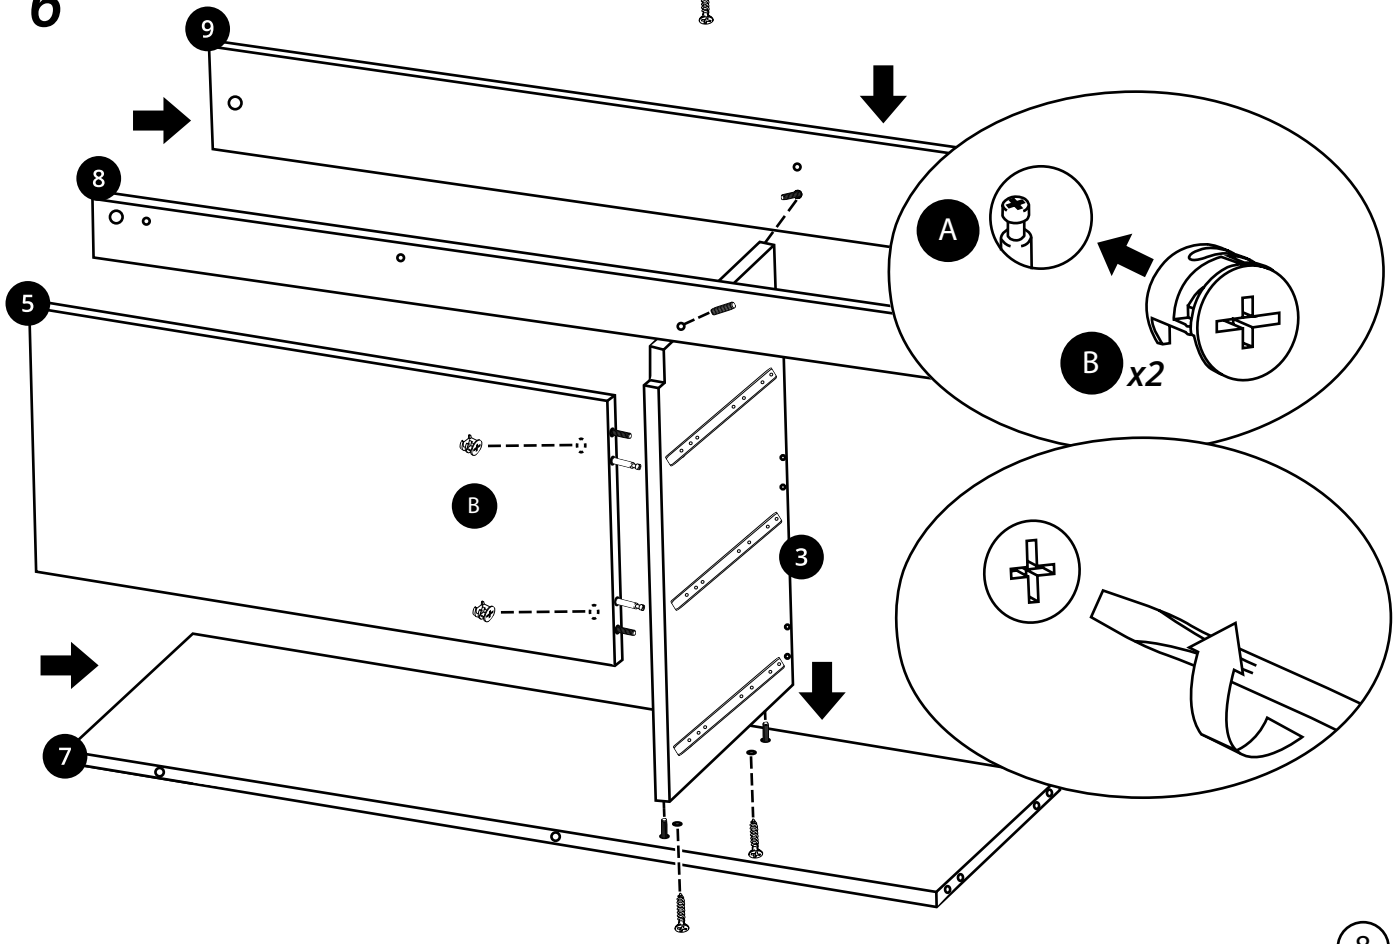


7

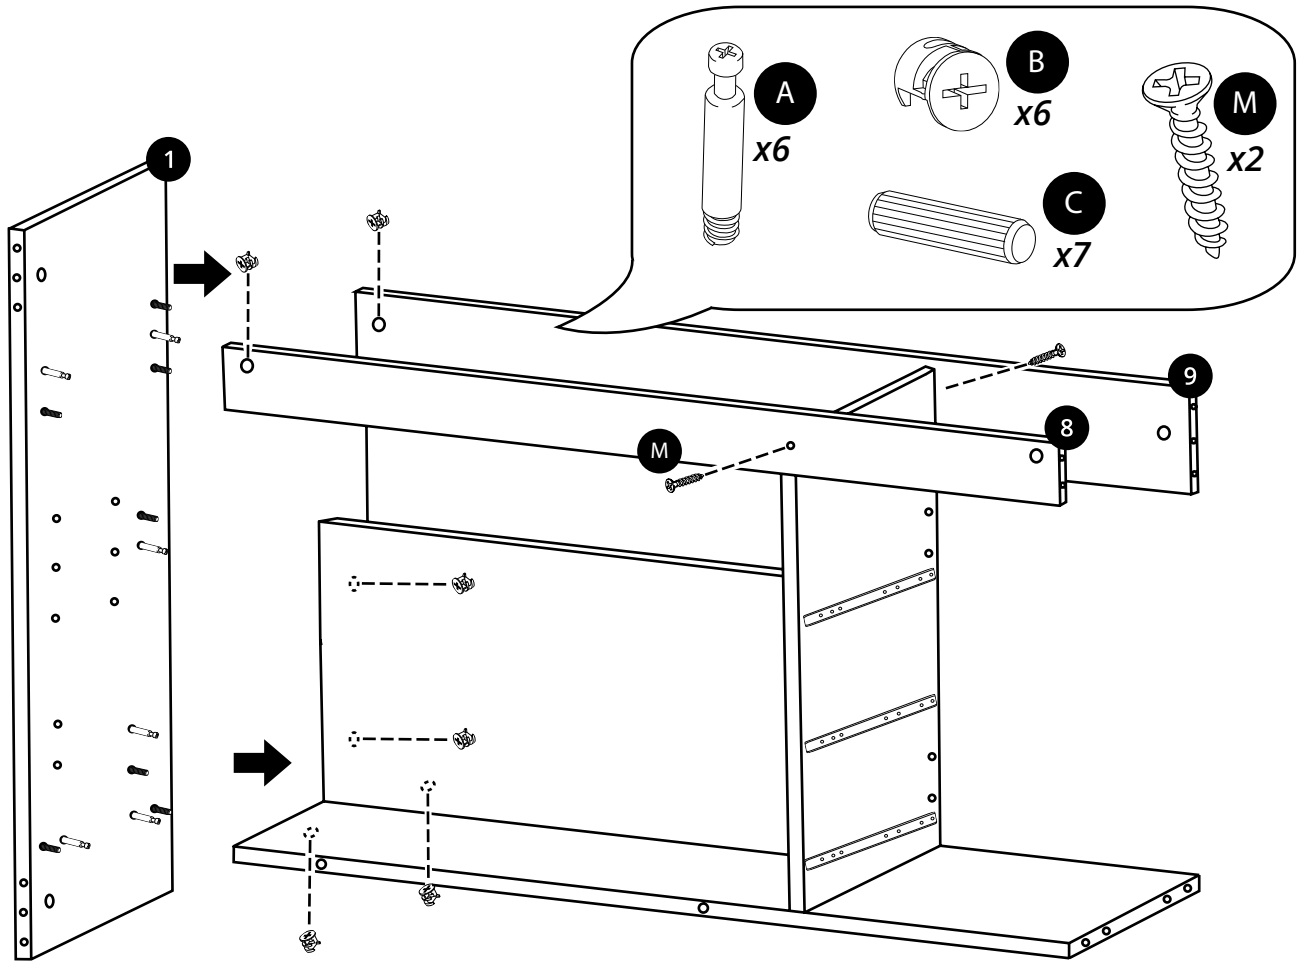


8

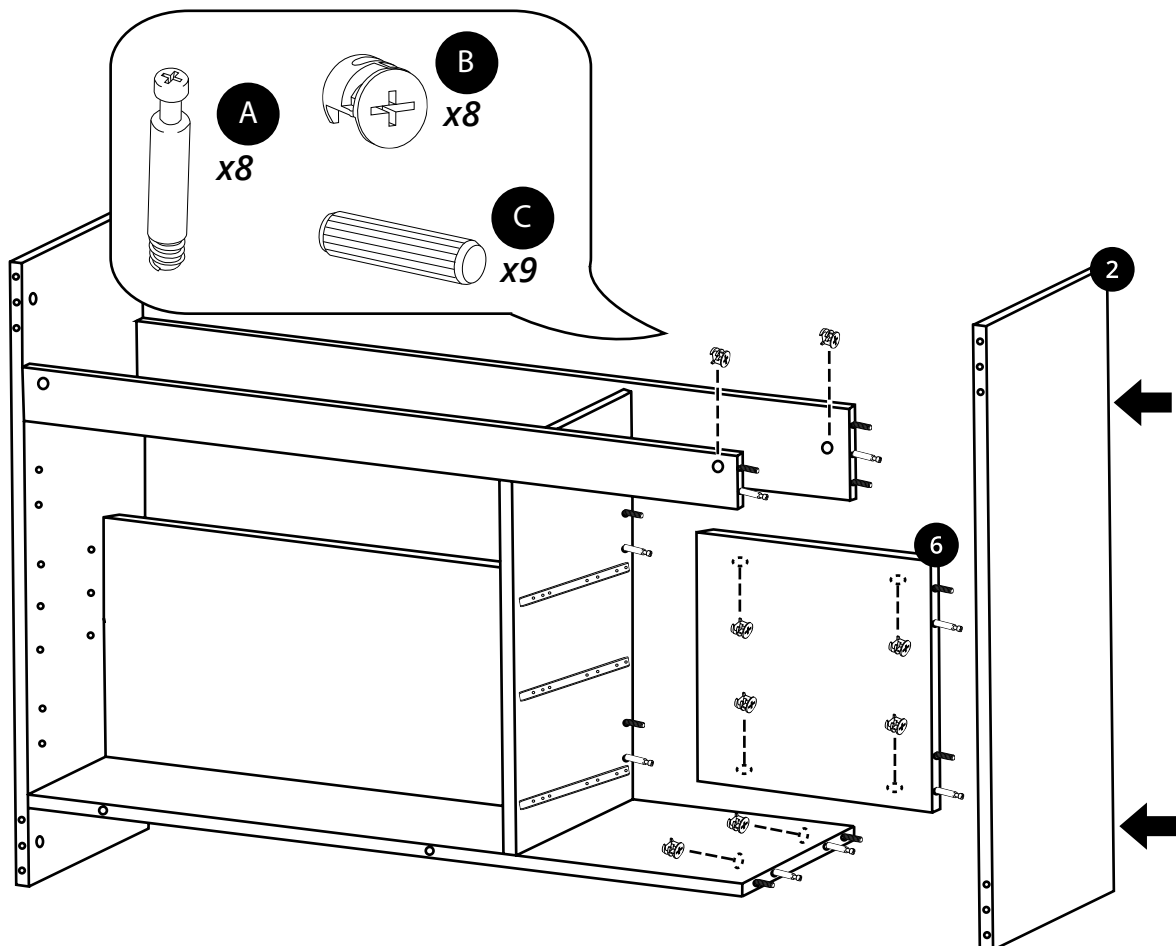





9

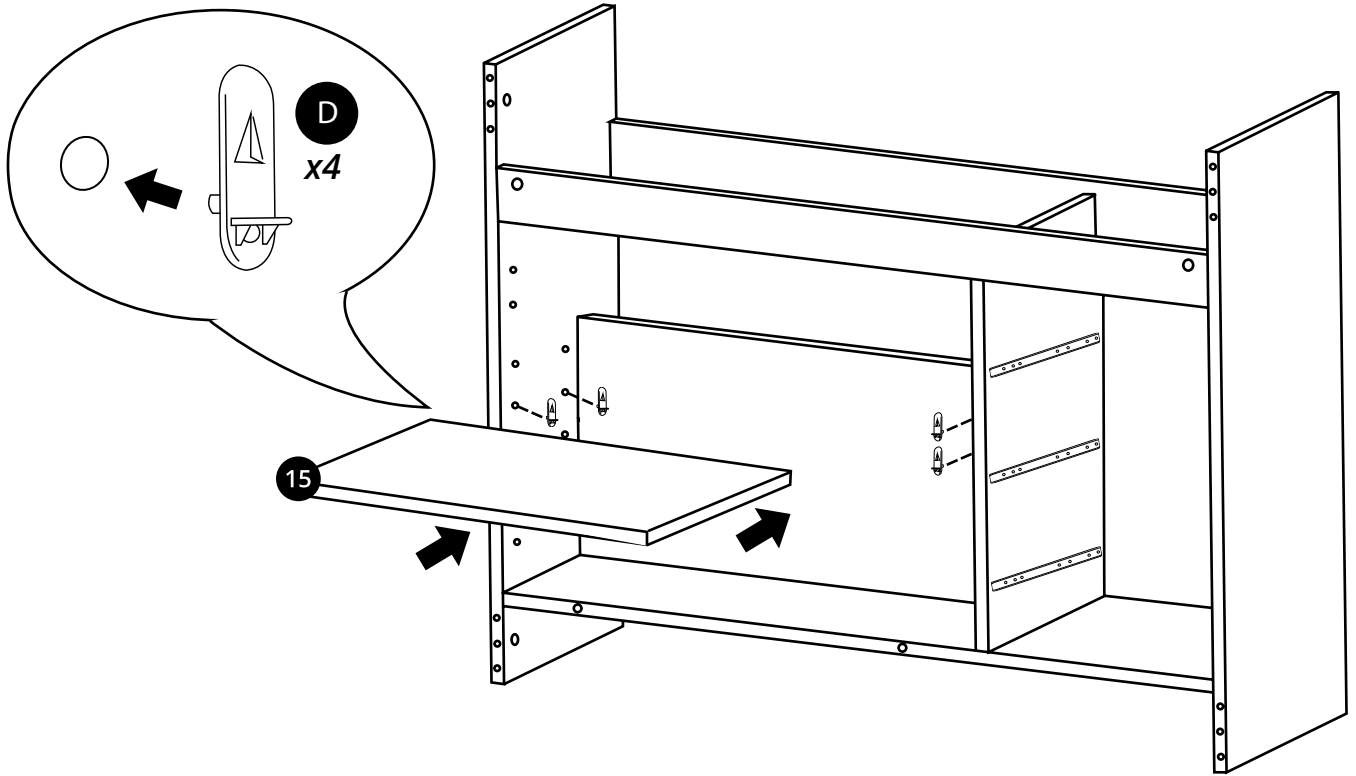




10

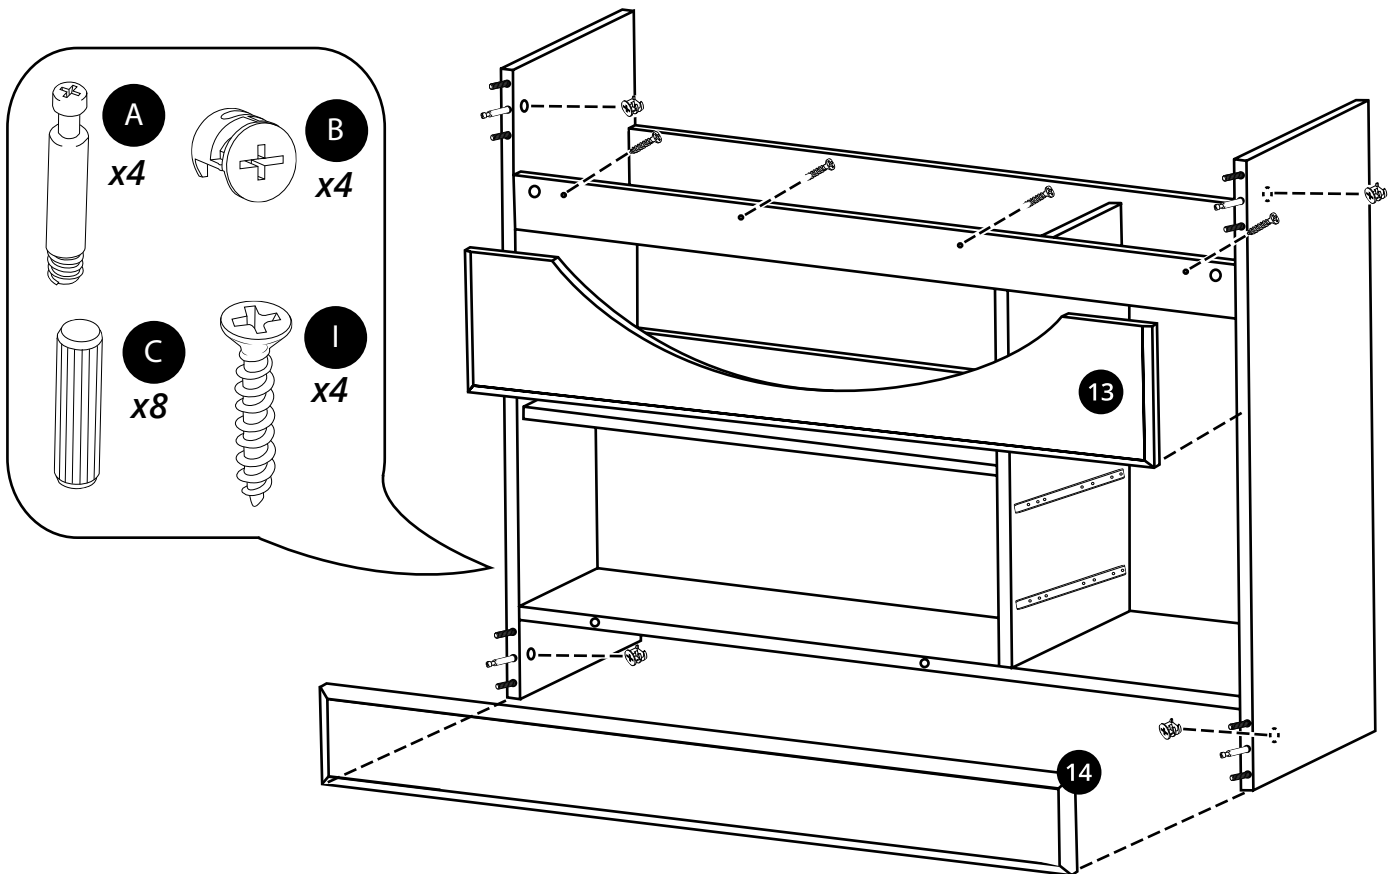


11

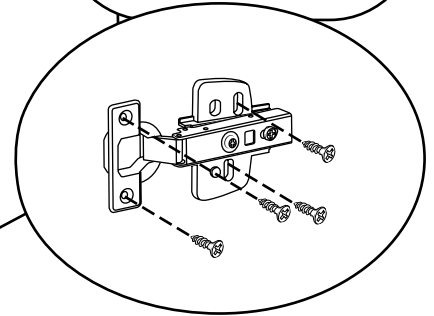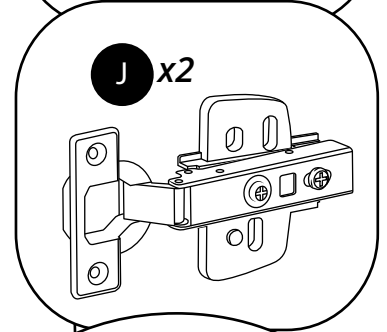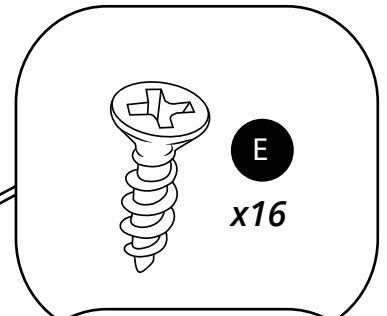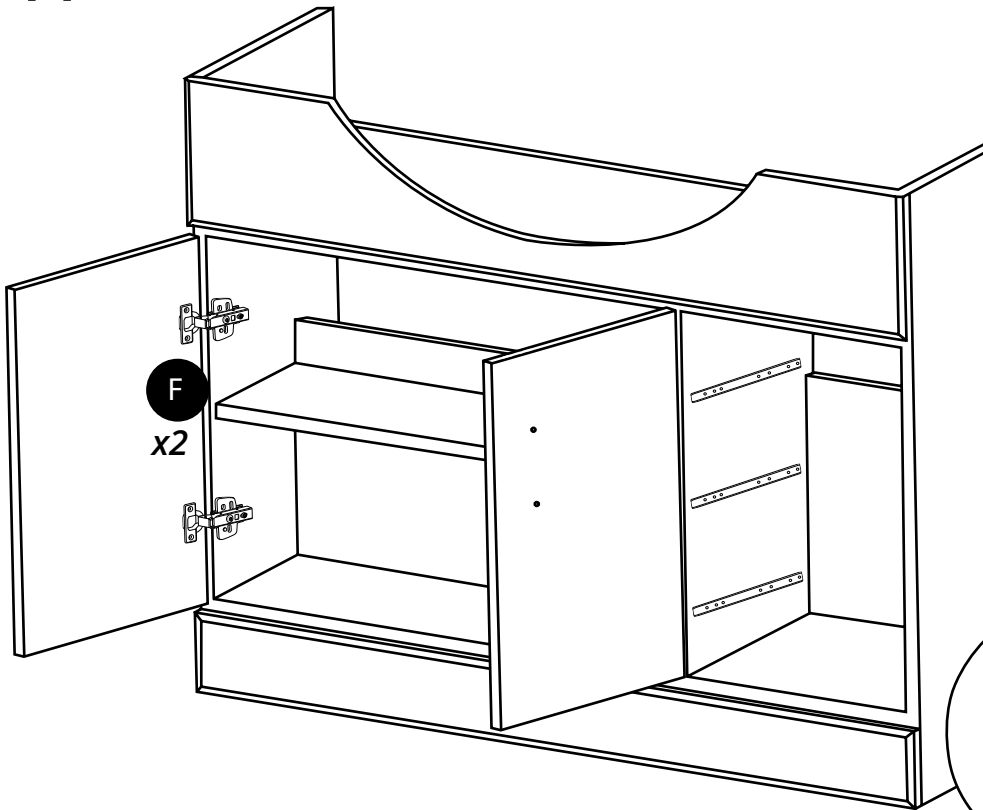


12

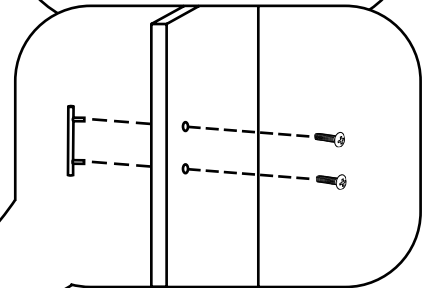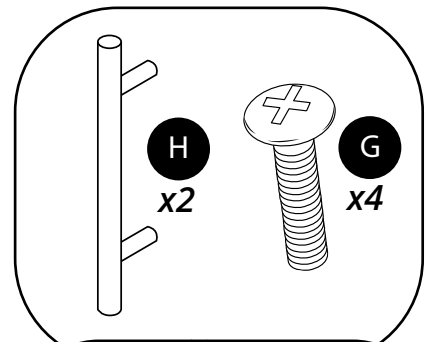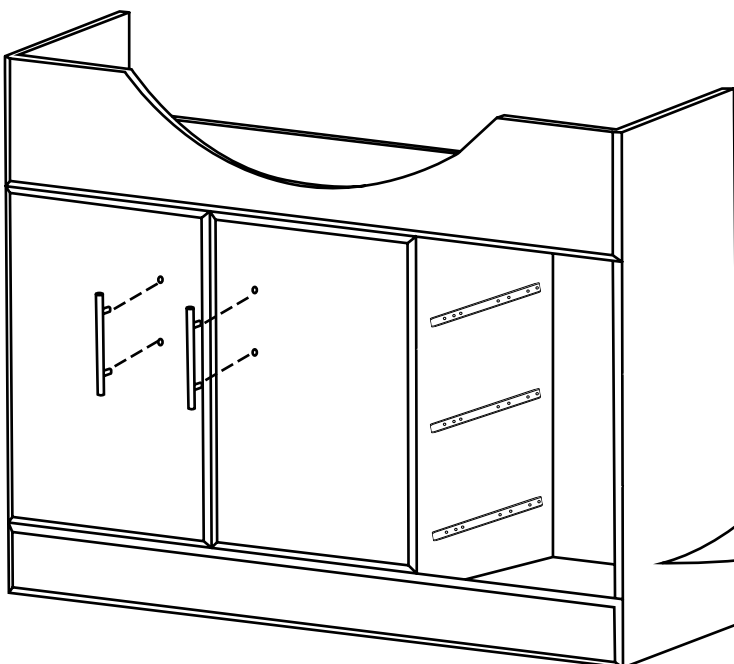


13

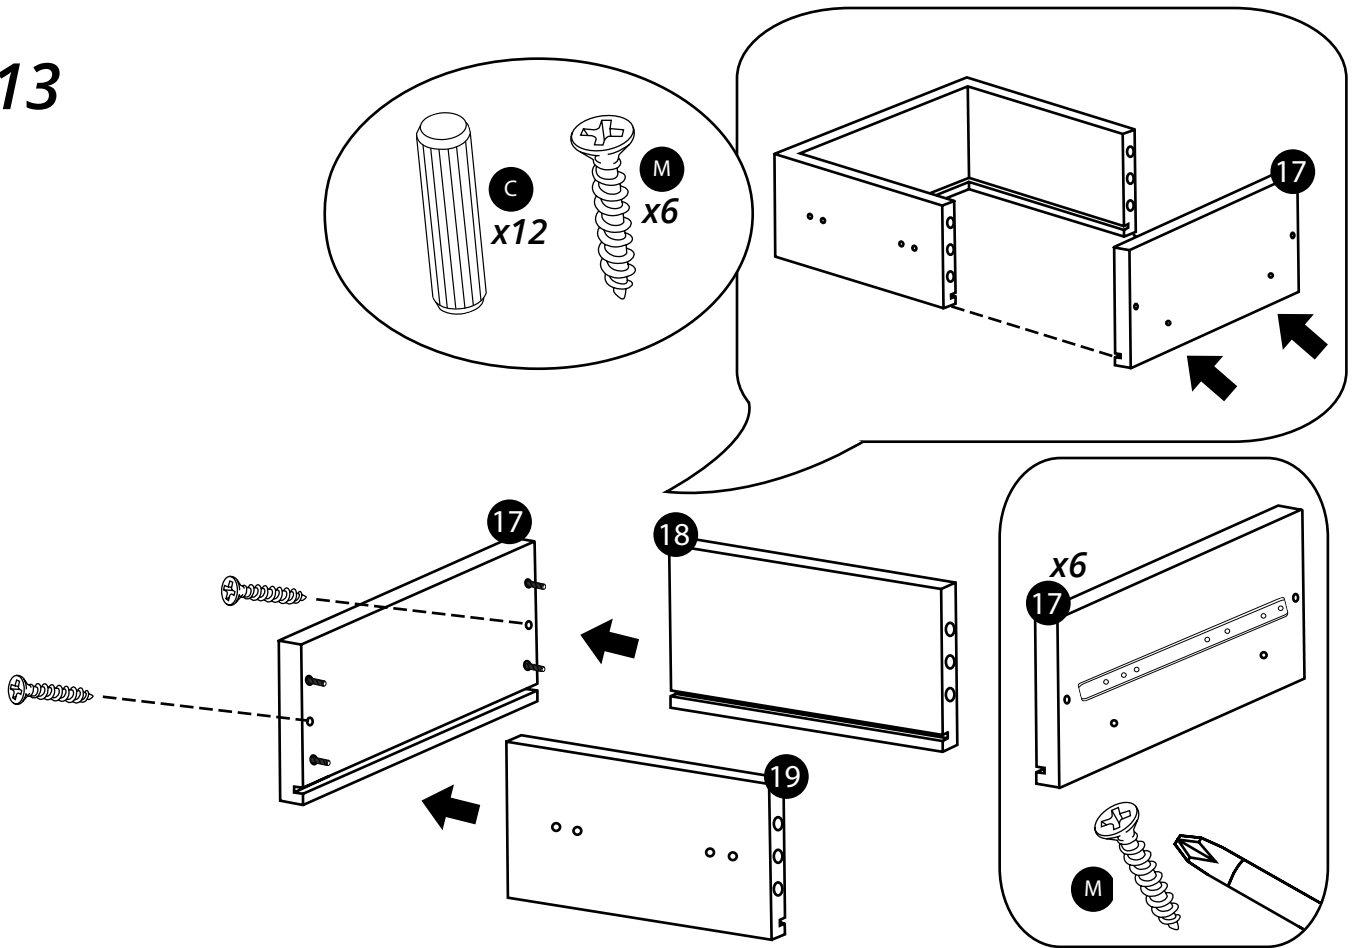


14

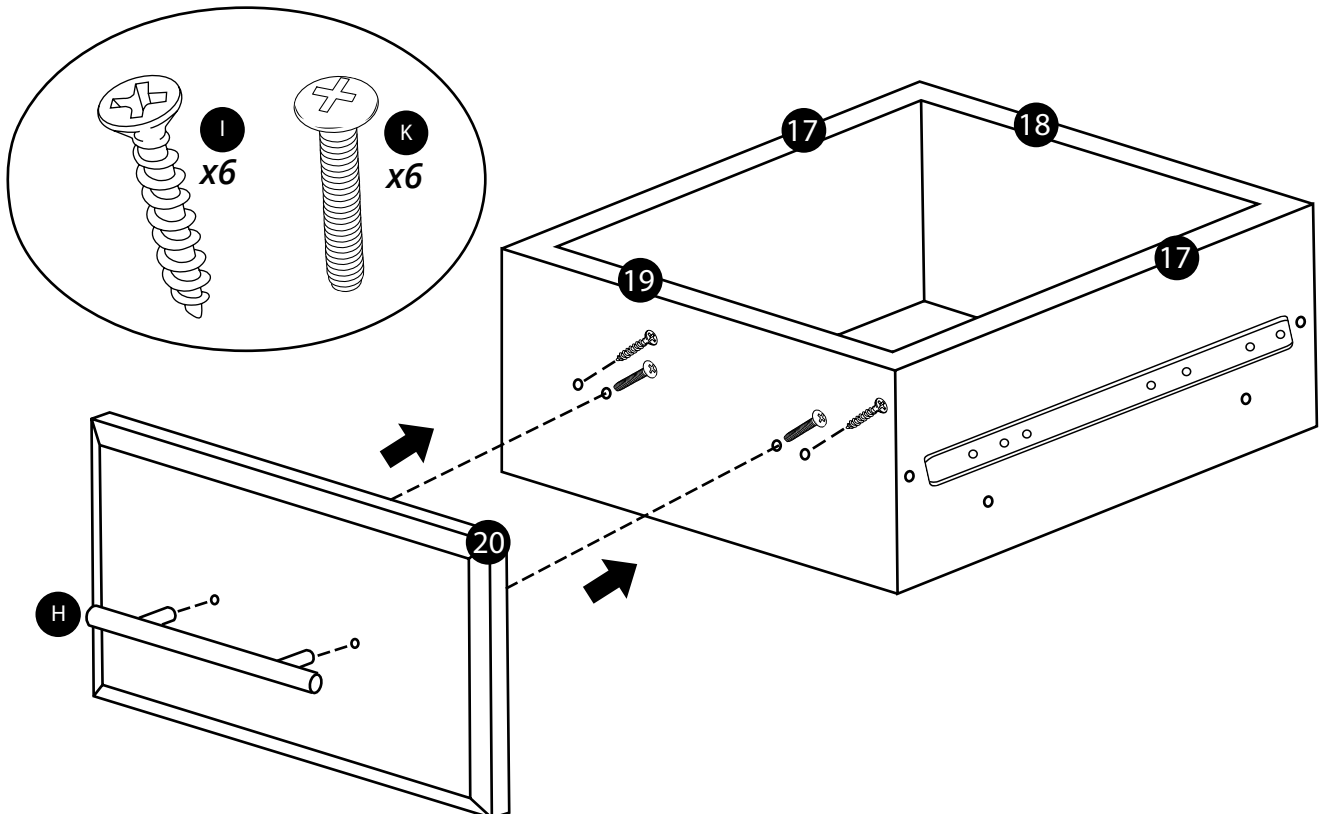


15

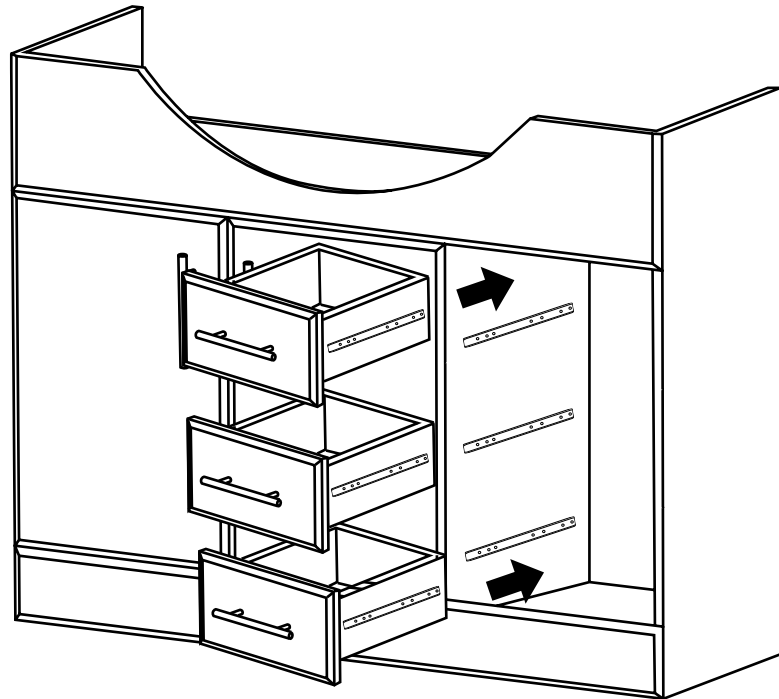


16

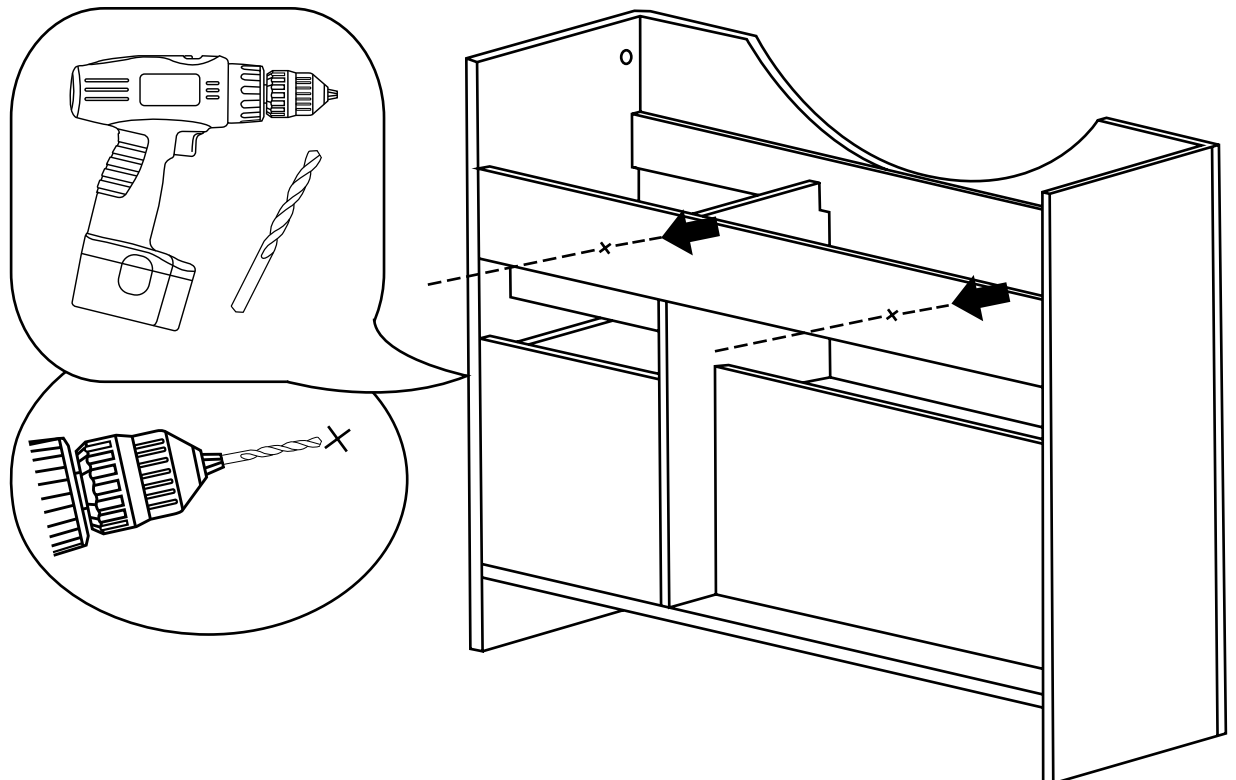


17

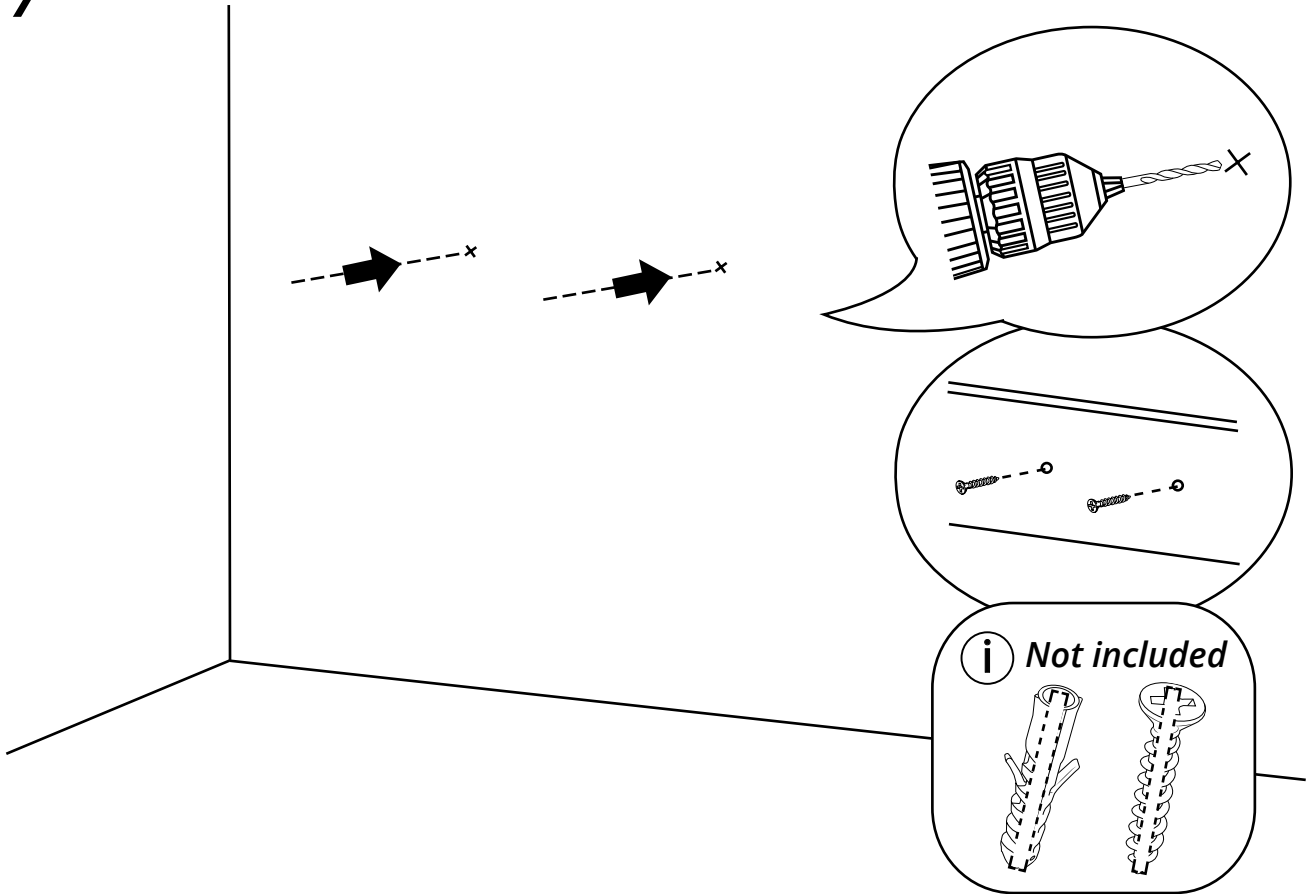

18

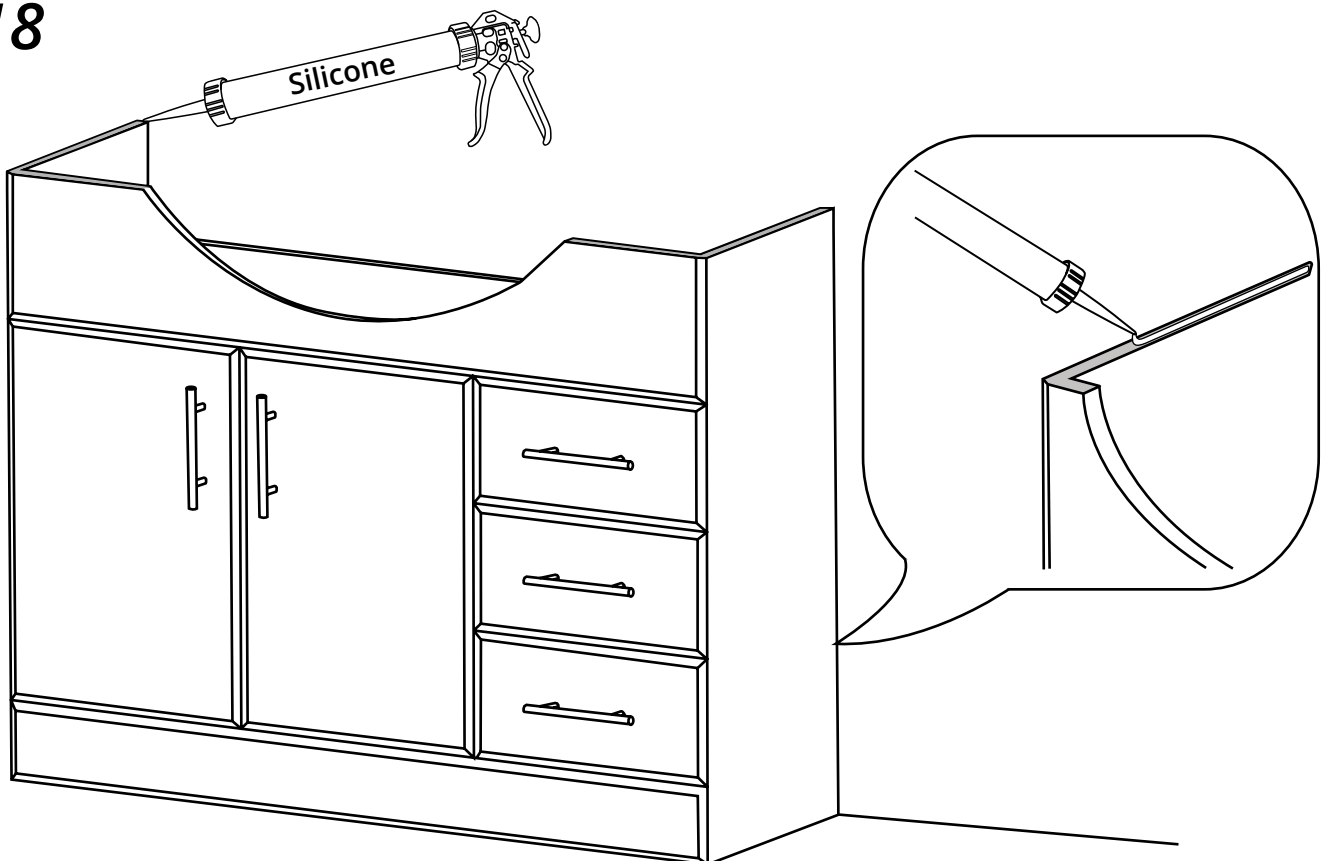

19

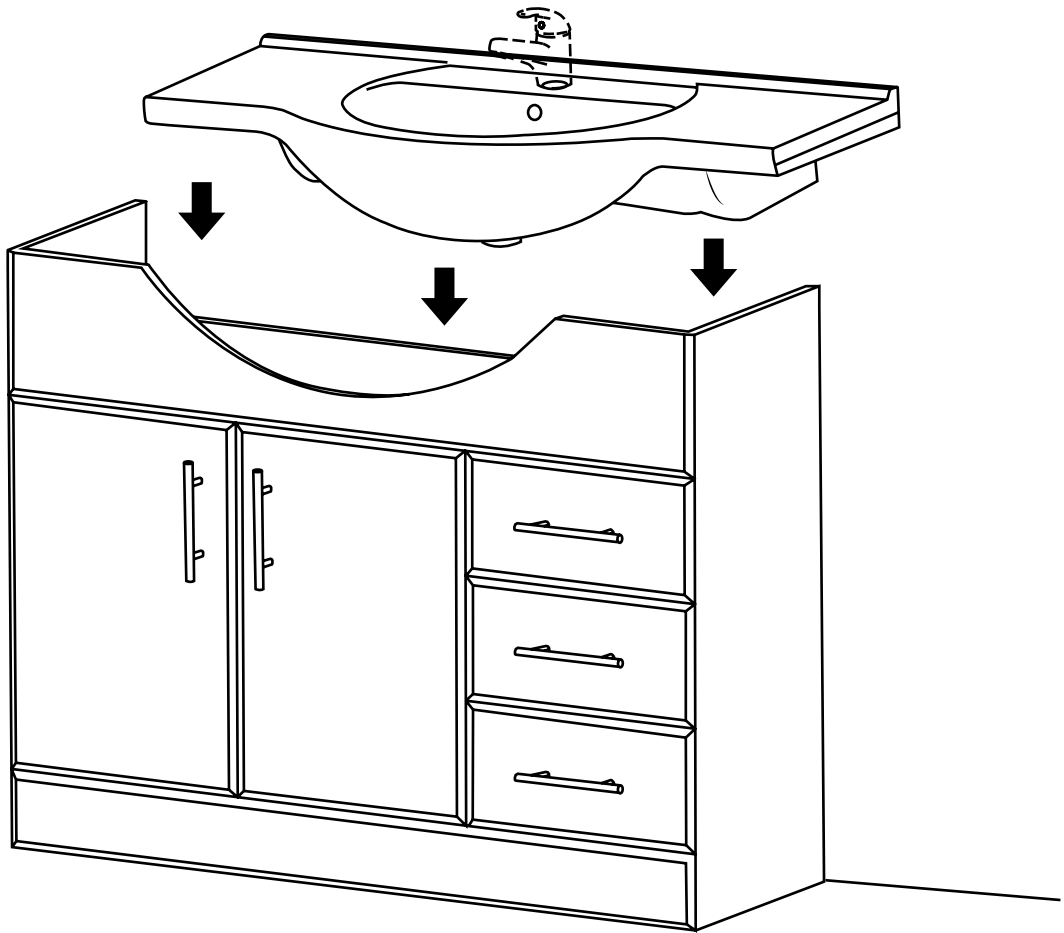

20

