


Milano






400mm Floor Standing Vanity Unit

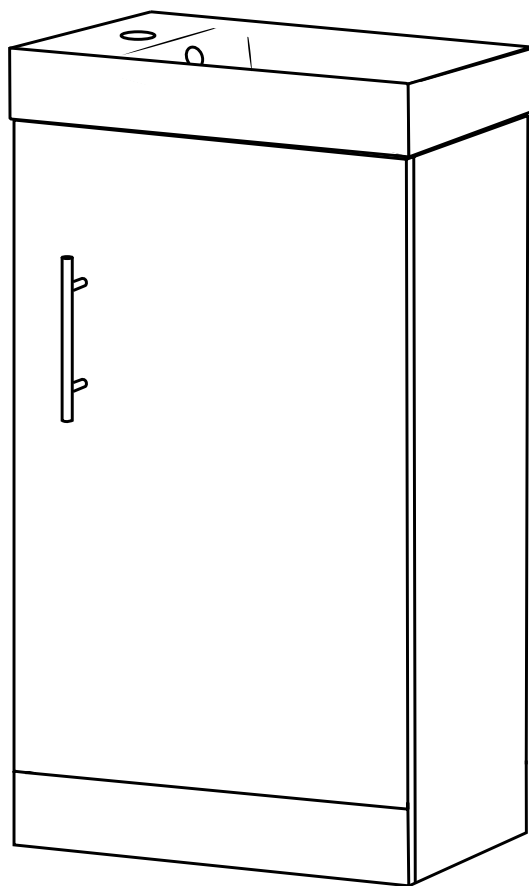


Installation Guide

Installation









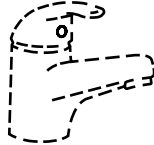
Tools required for installing:

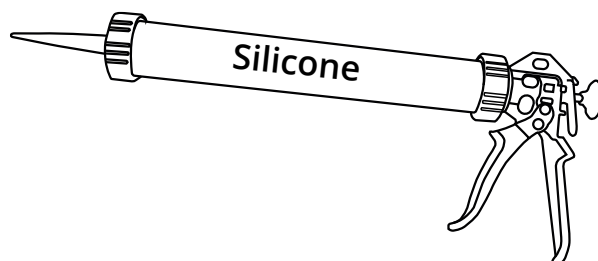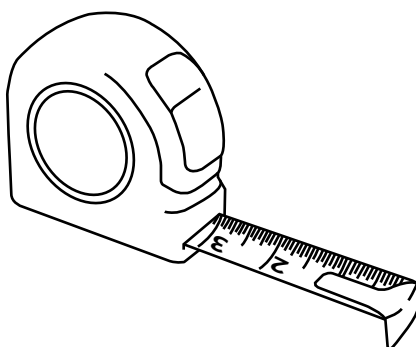


Parts included:

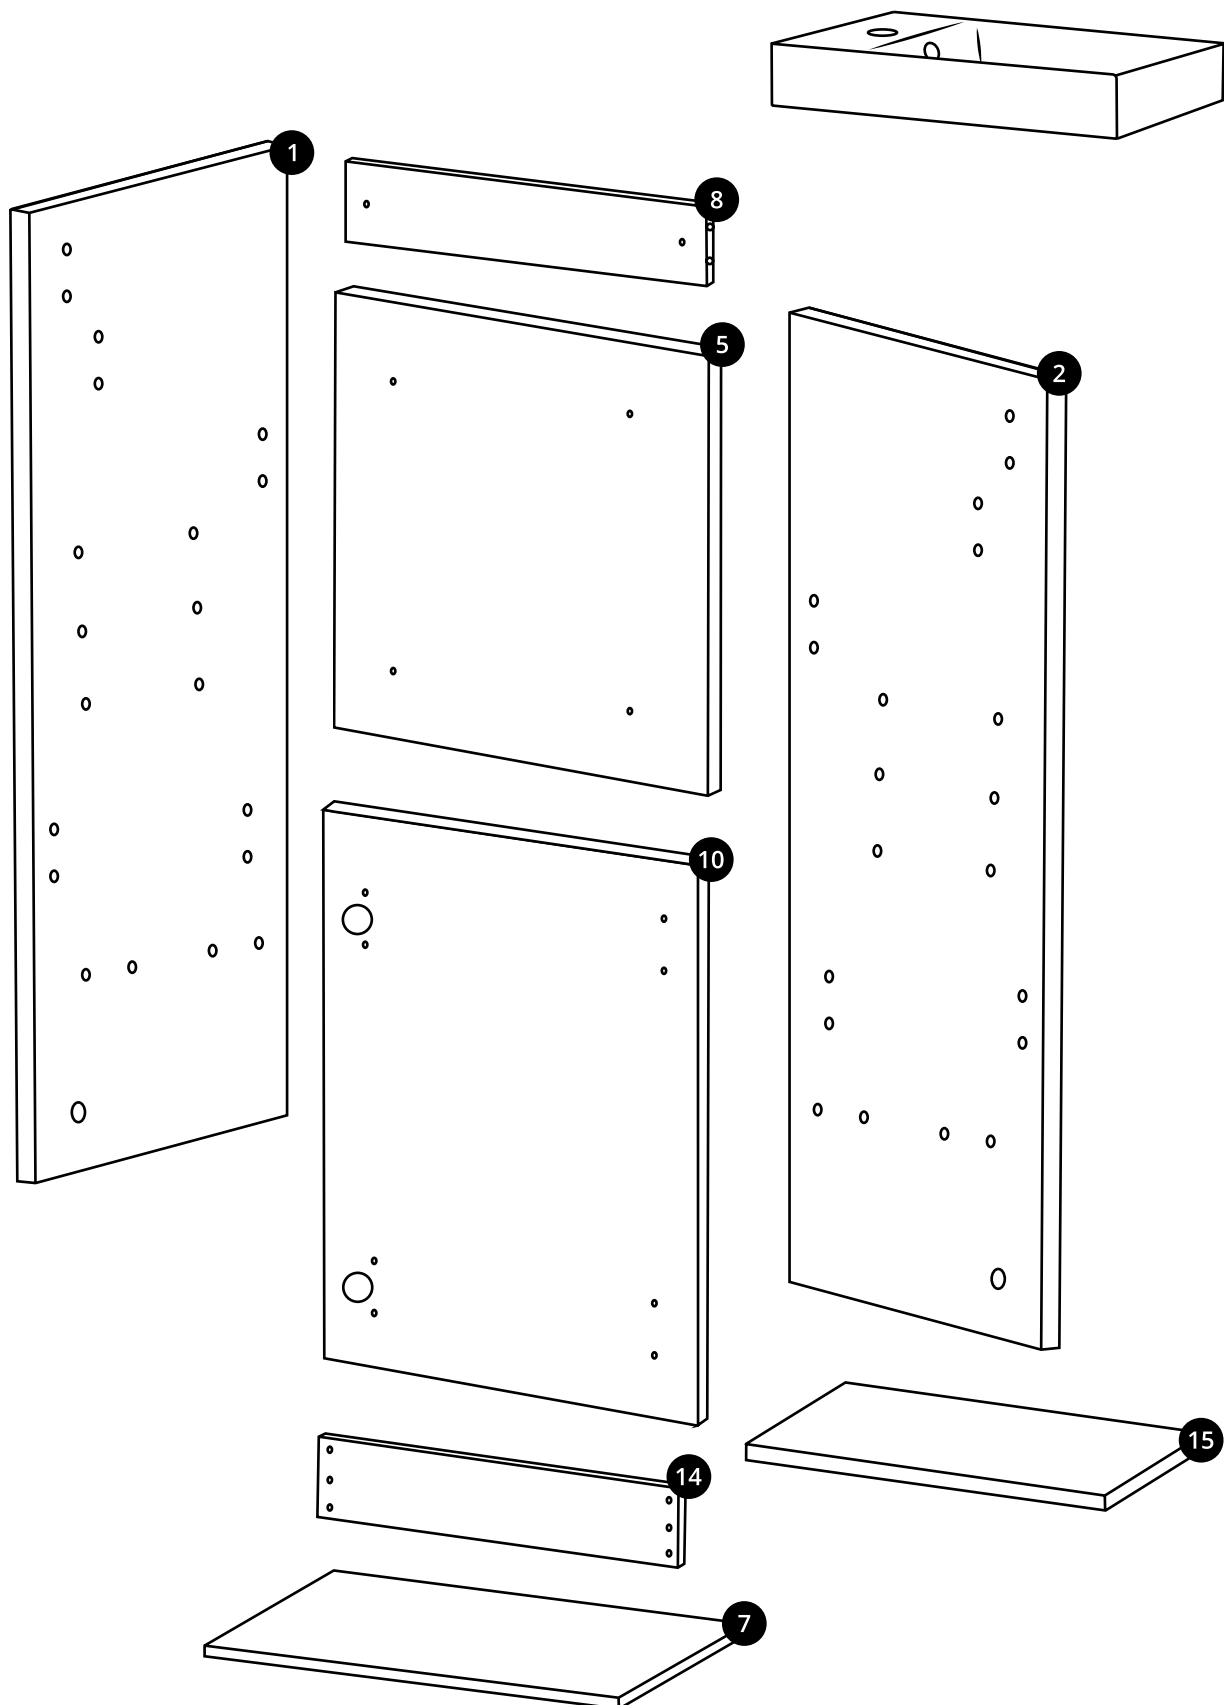


Parts included:

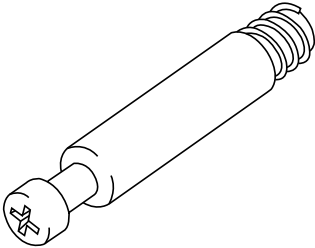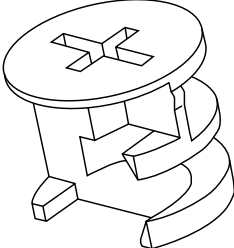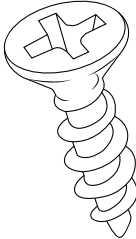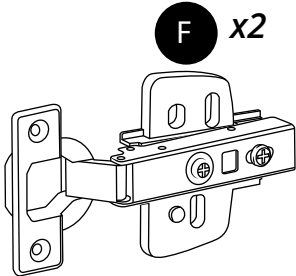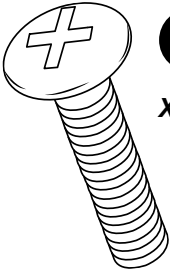 <p>A x12</p>	 <p>B x12</p>	 <p>C x14</p>
 <p>D x4</p>	 <p>E x8</p>	 <p>F x2</p>
 <p>G x2</p>	 <p>H x1</p>	<div><p>i Not included</p></div>


1

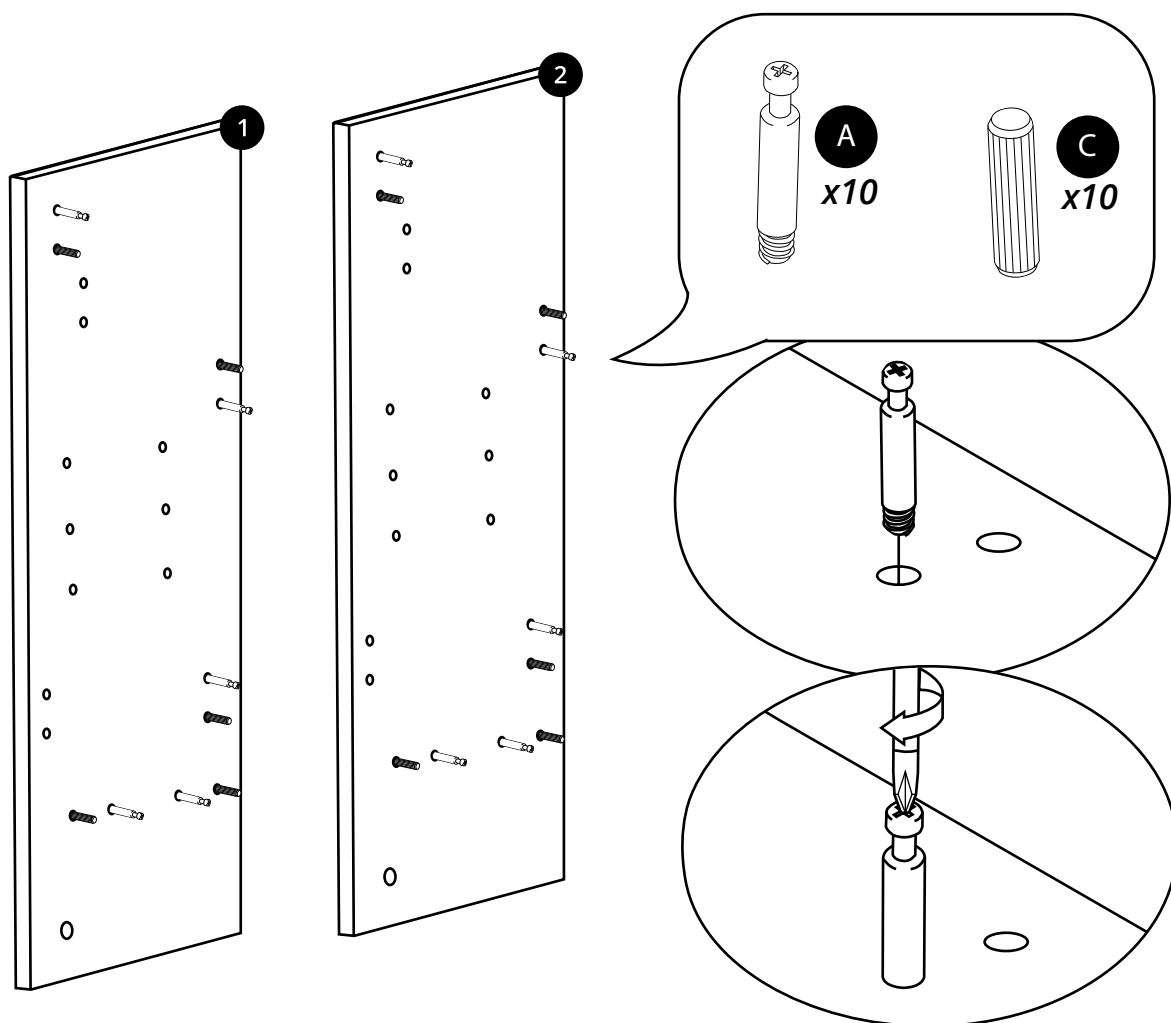


2

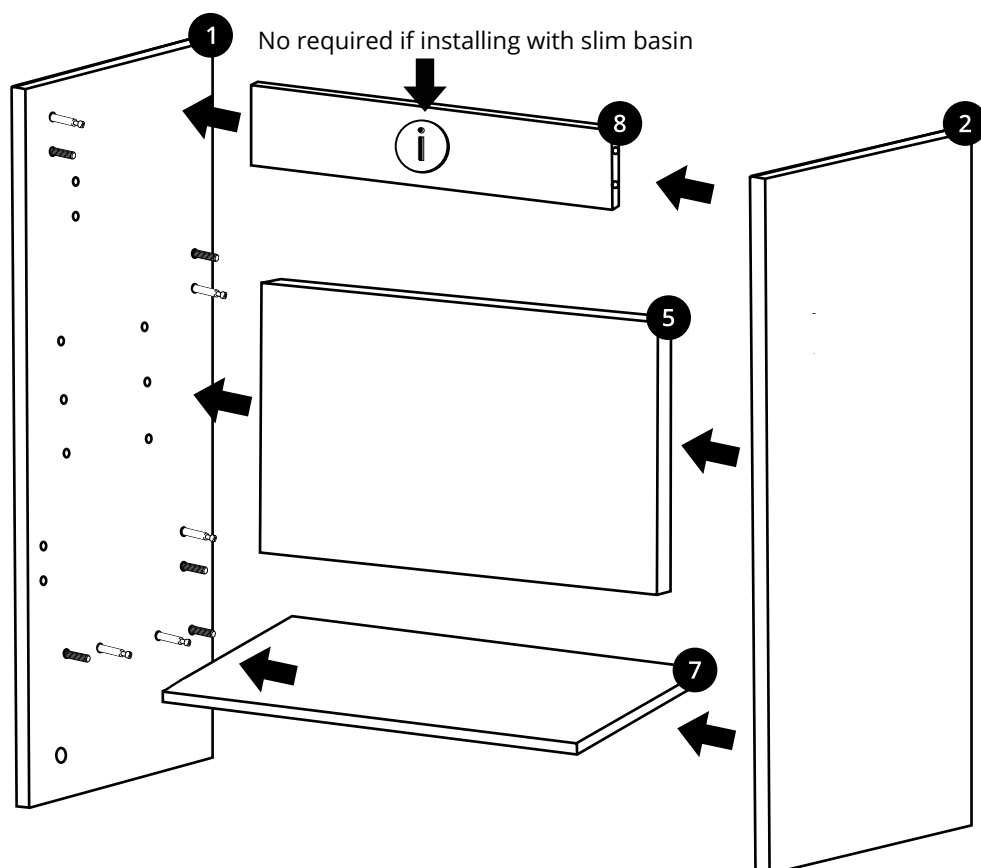


3

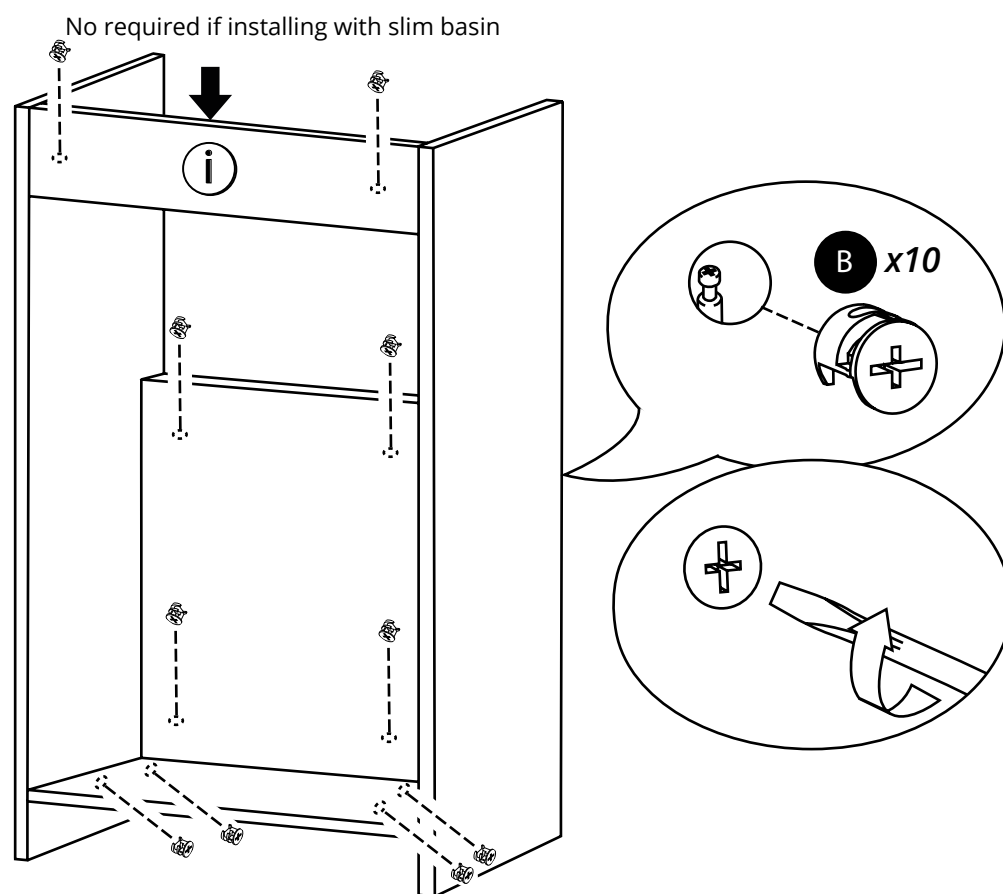


4

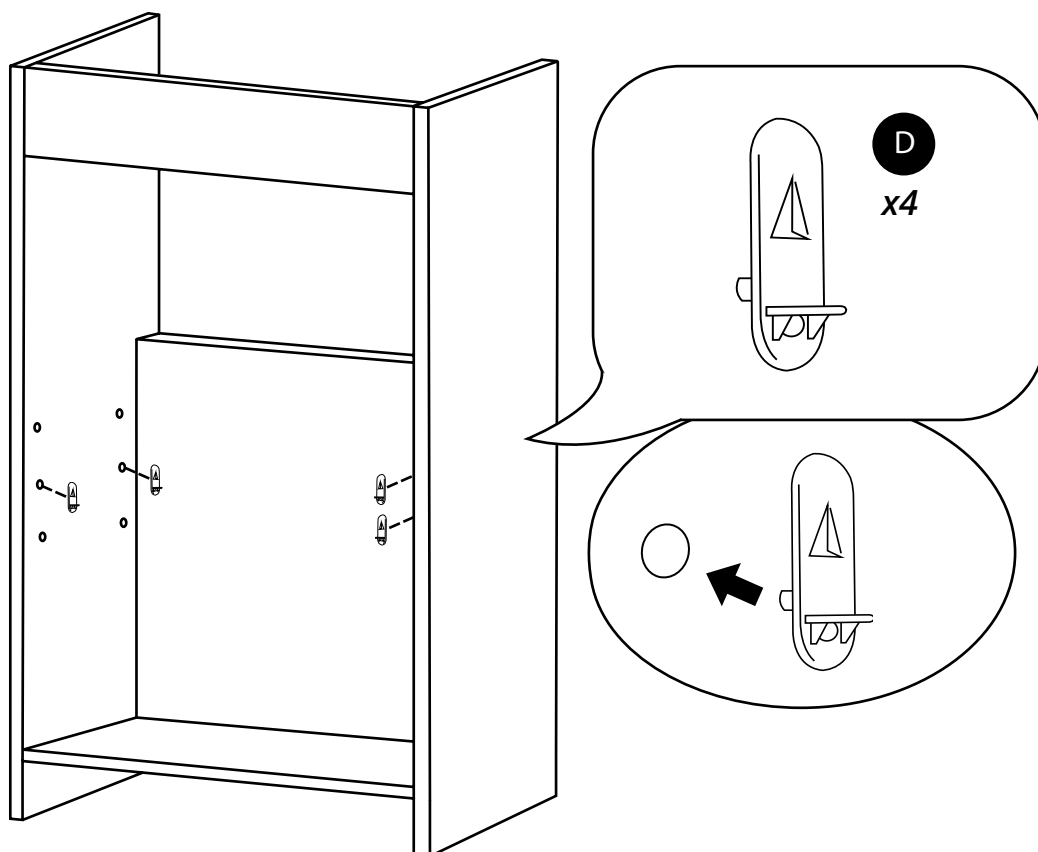


5

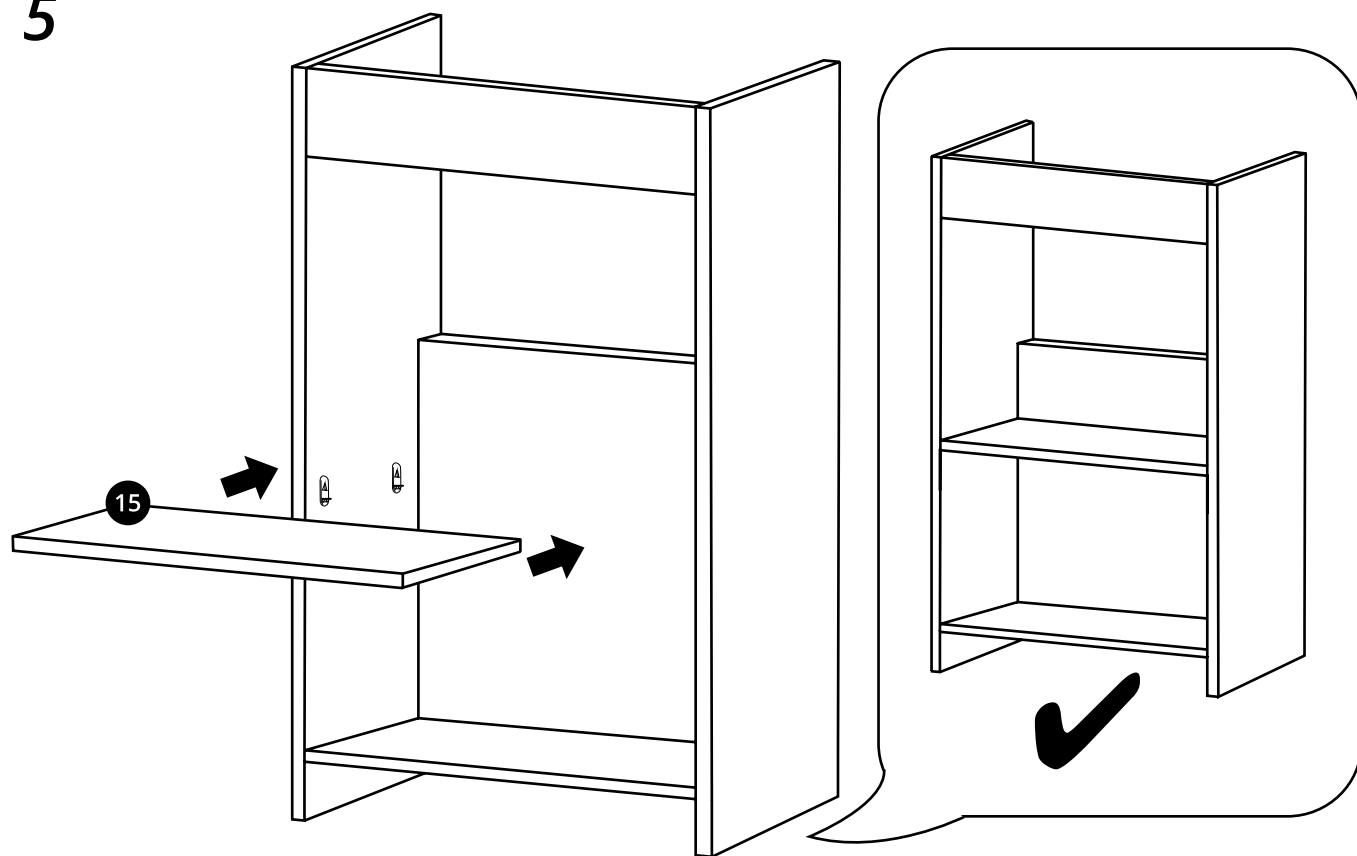


6









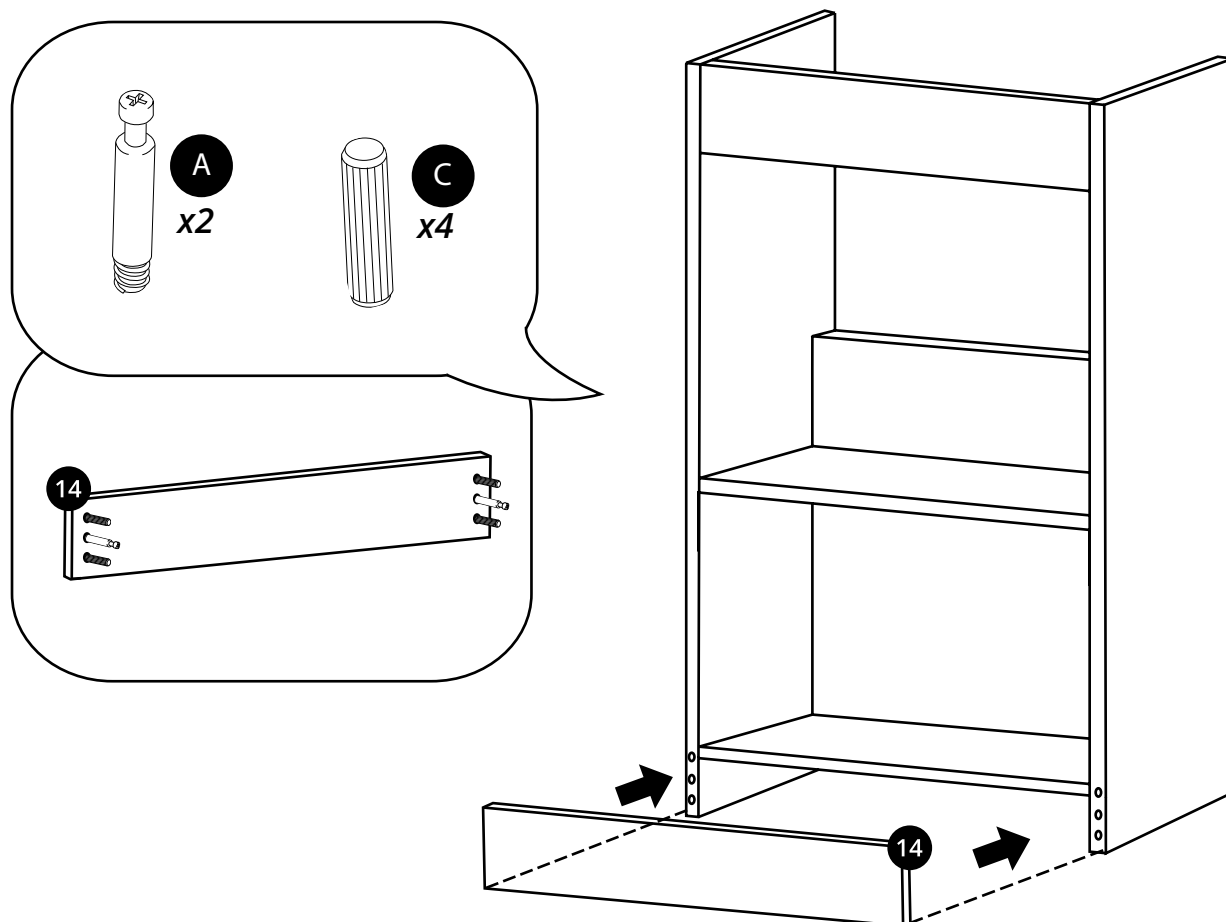


7

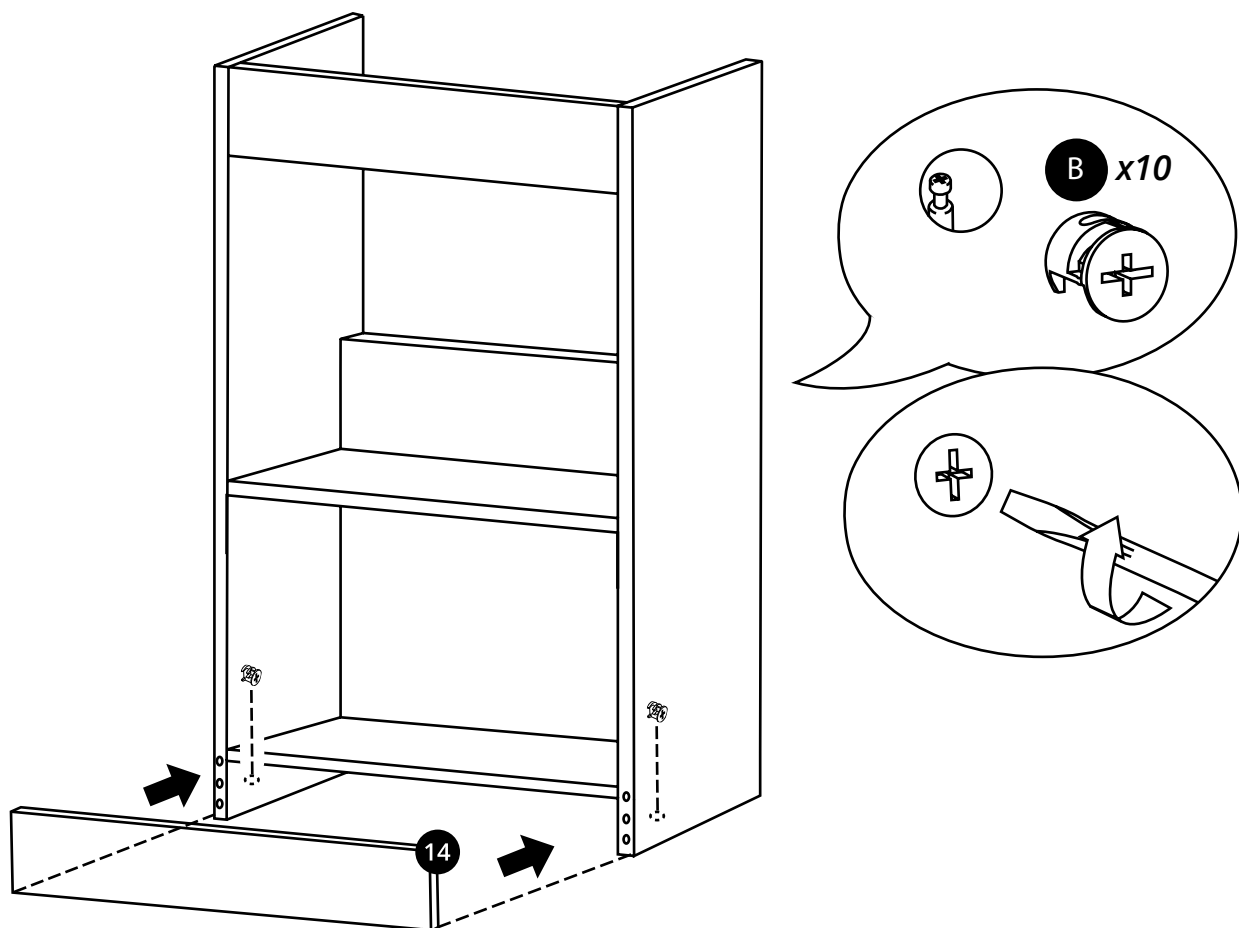


8

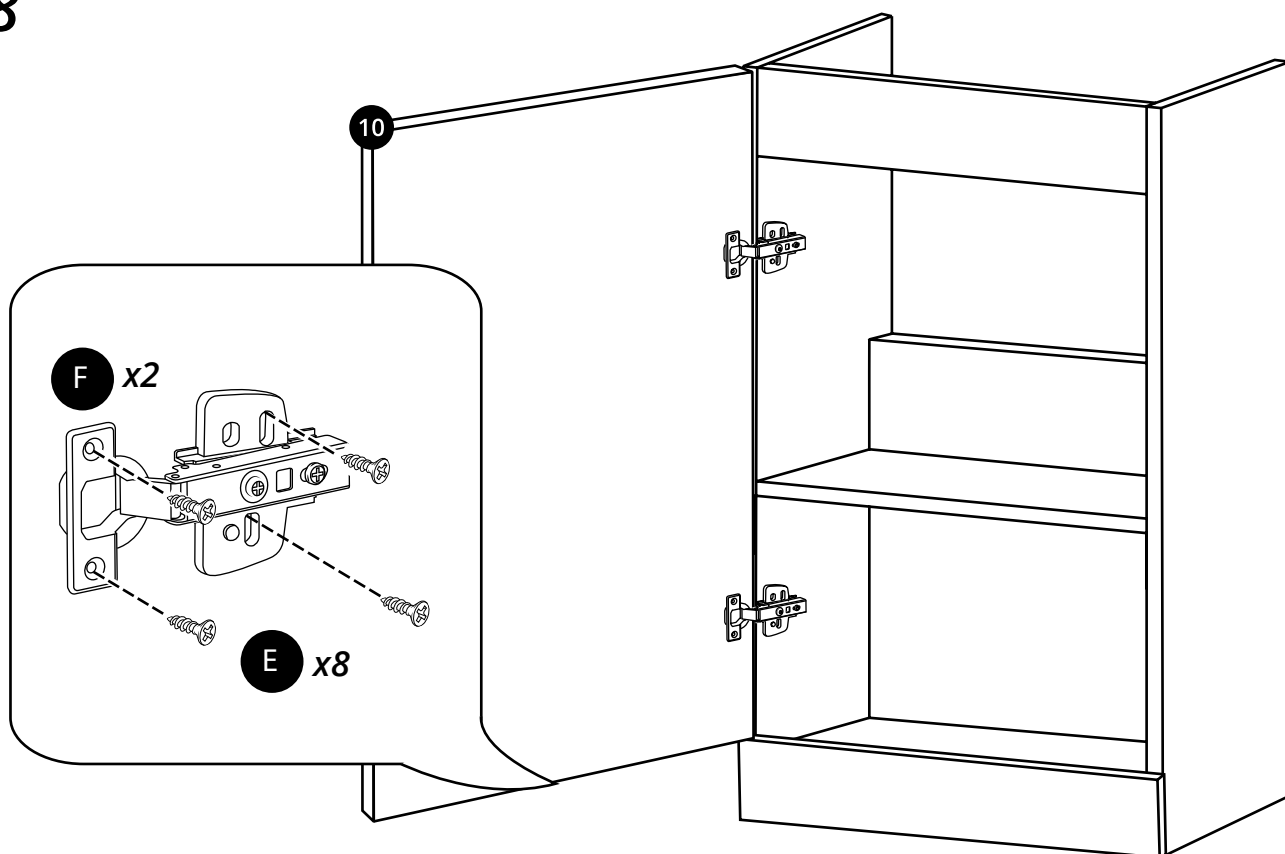


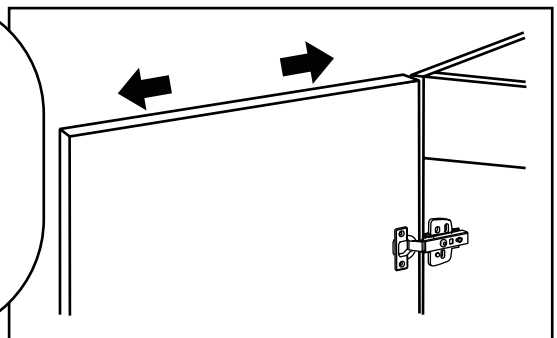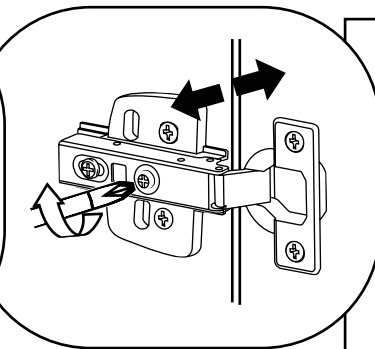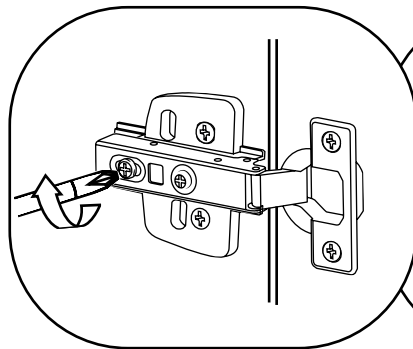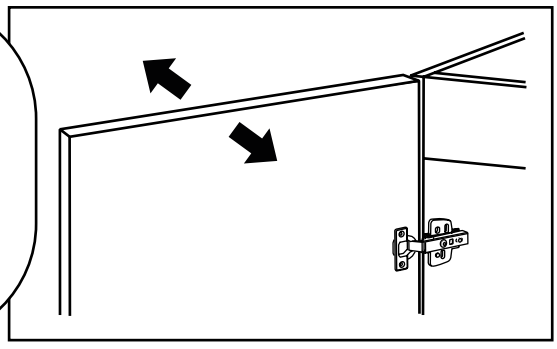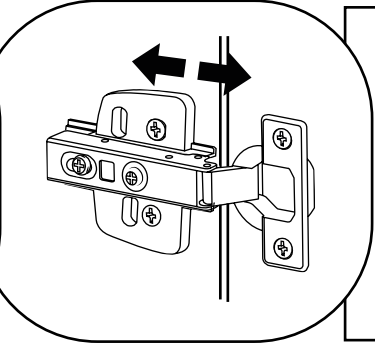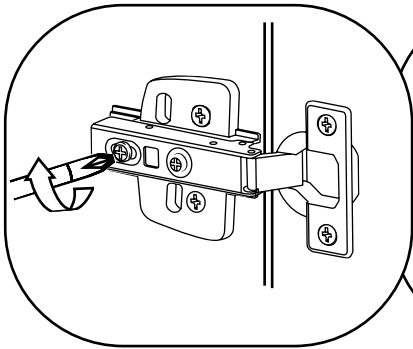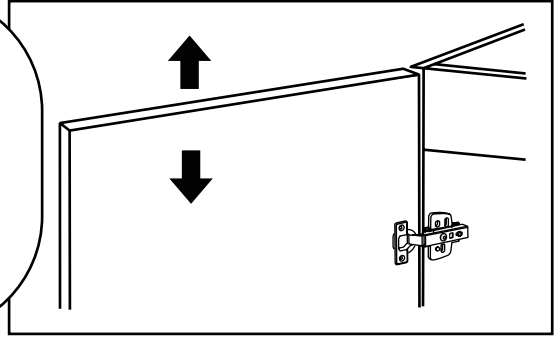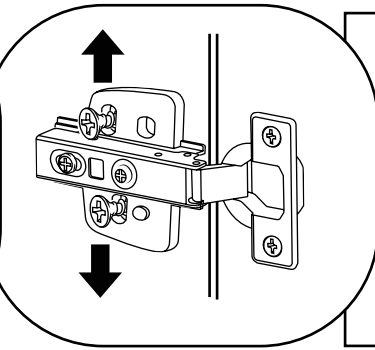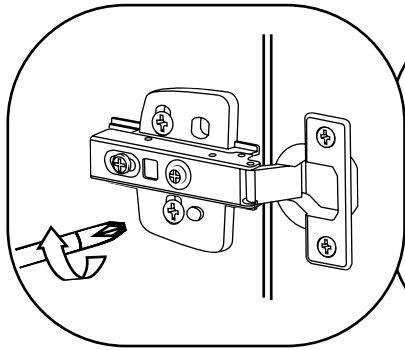


9

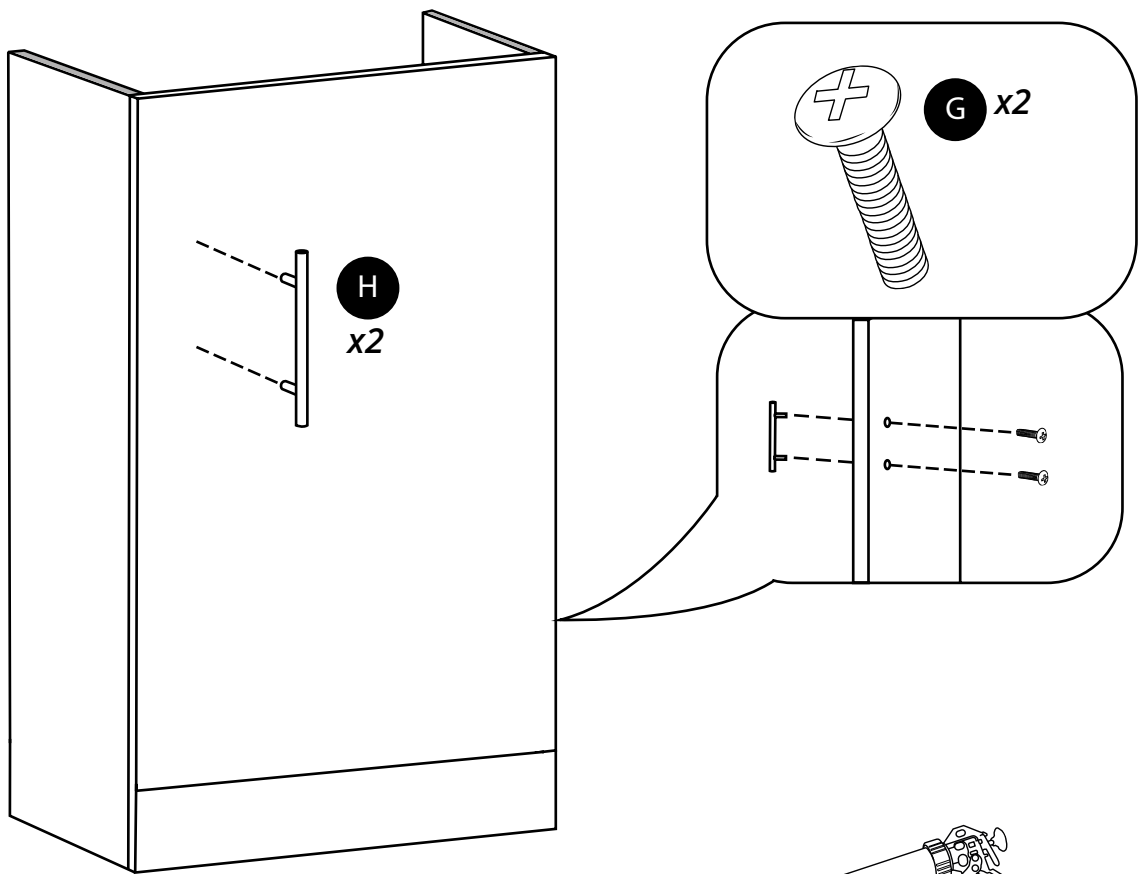

10

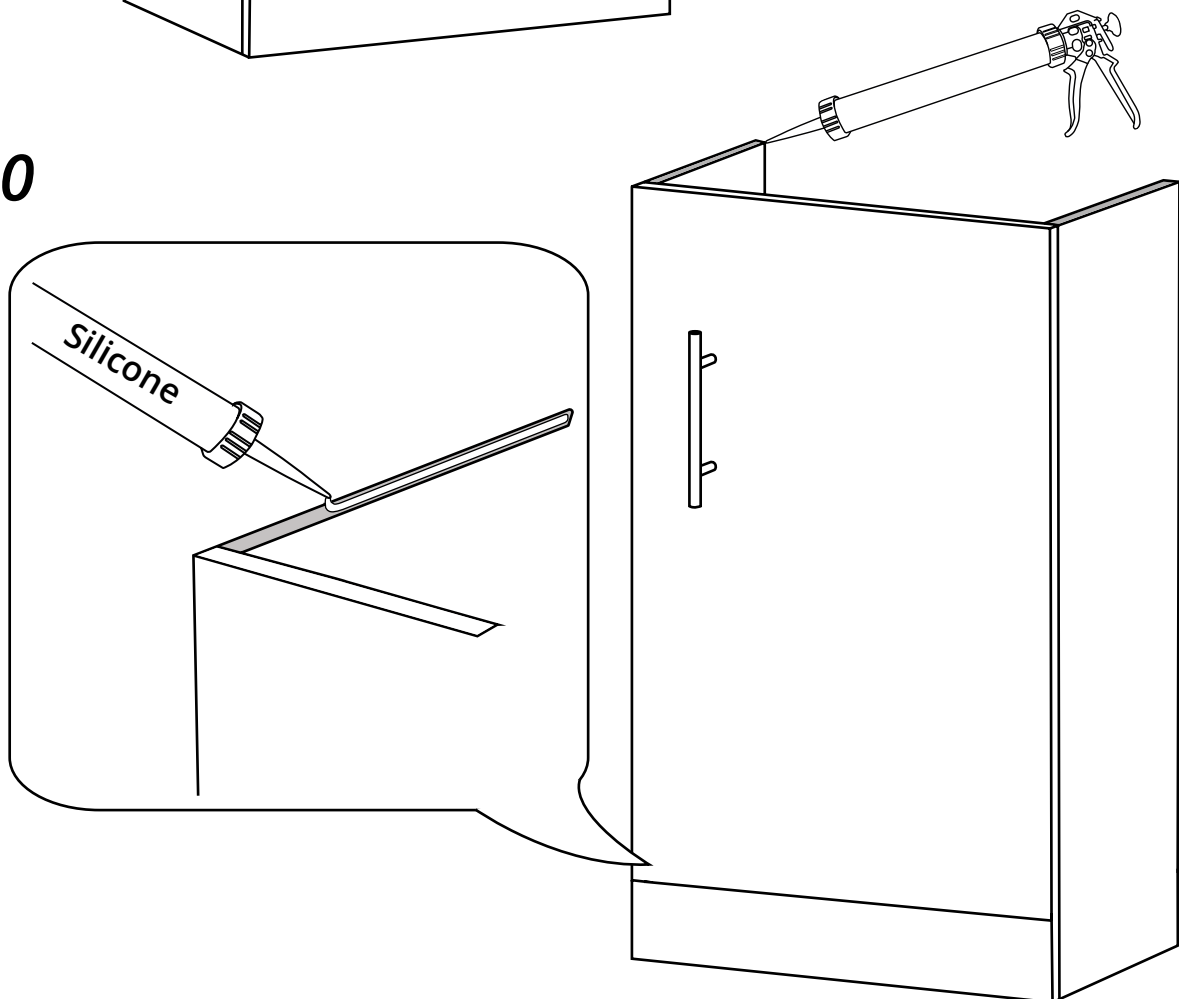

11

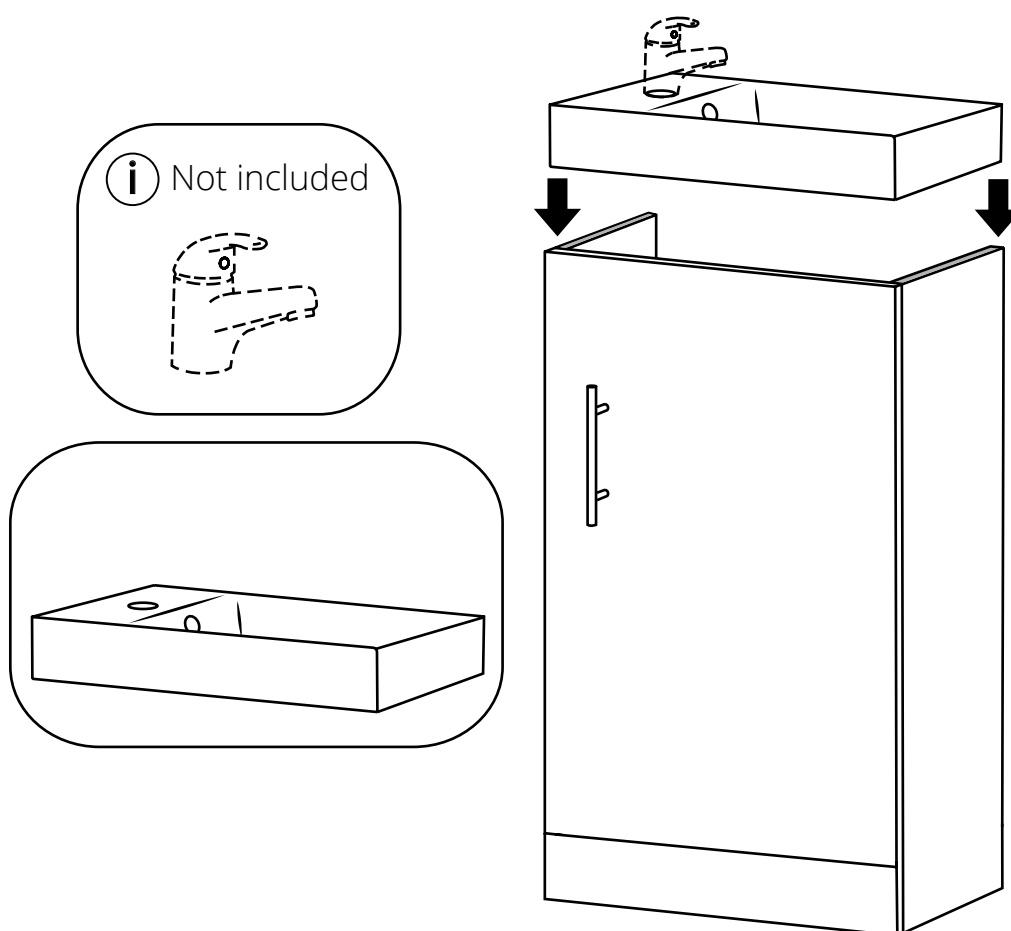

12

