


Milano







Corner Vanity Unit

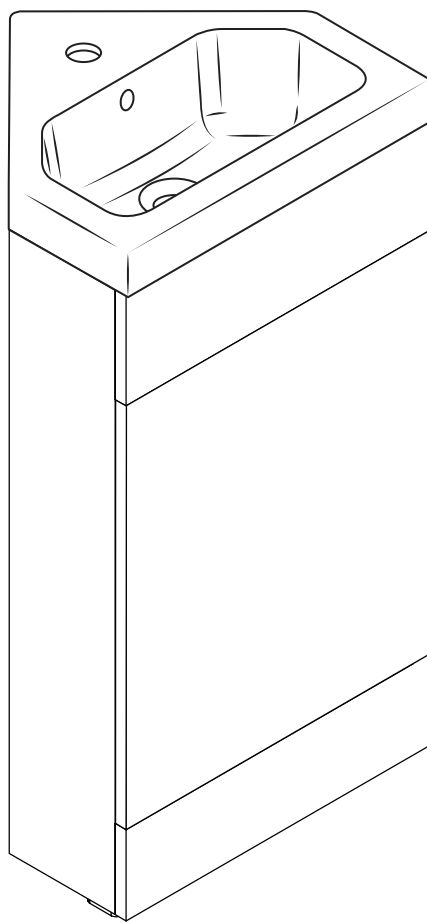


Installation Guide

Installation


Tools required for installing:

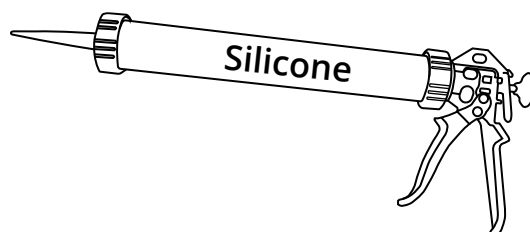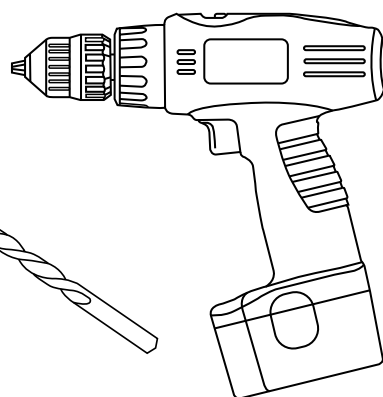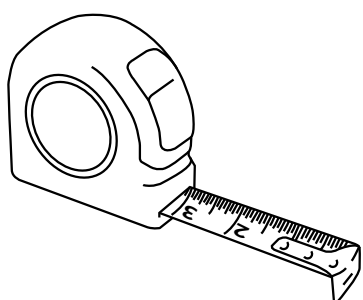


Parts included:

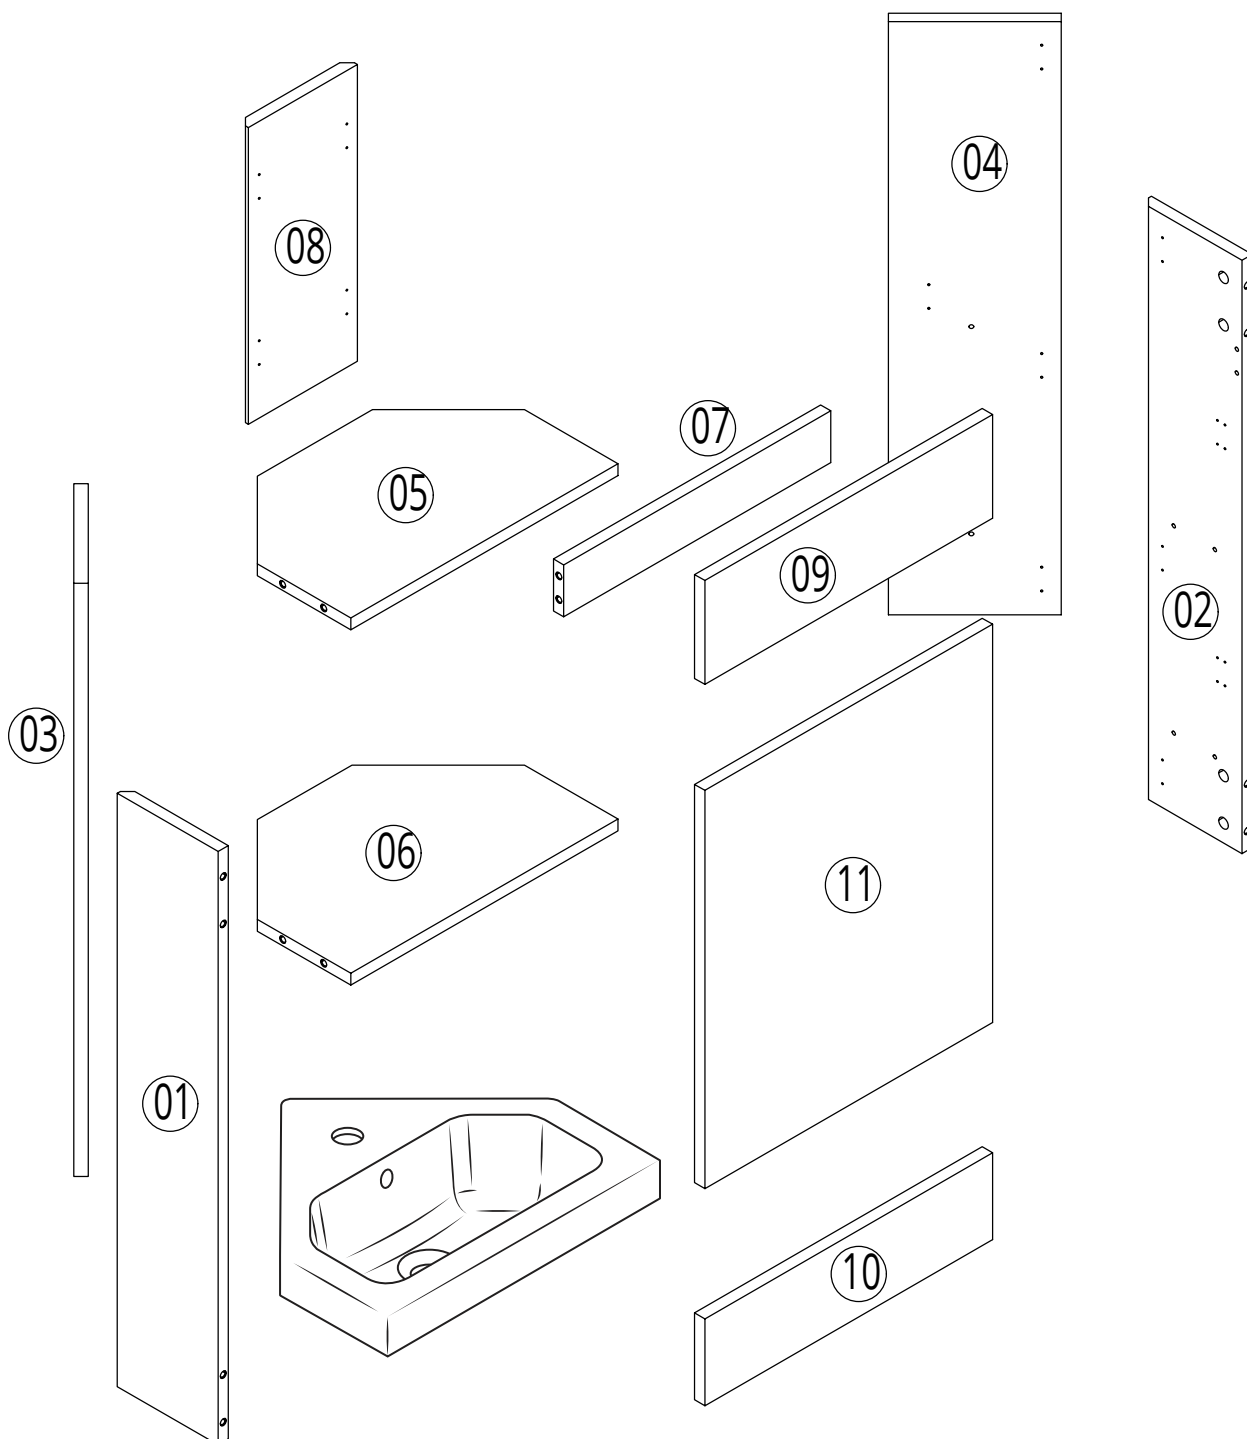

A
x24

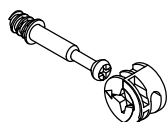


B
x10

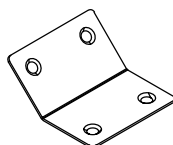


C
x40




D
x2

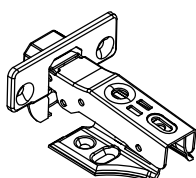




E
x12






F
x4



1

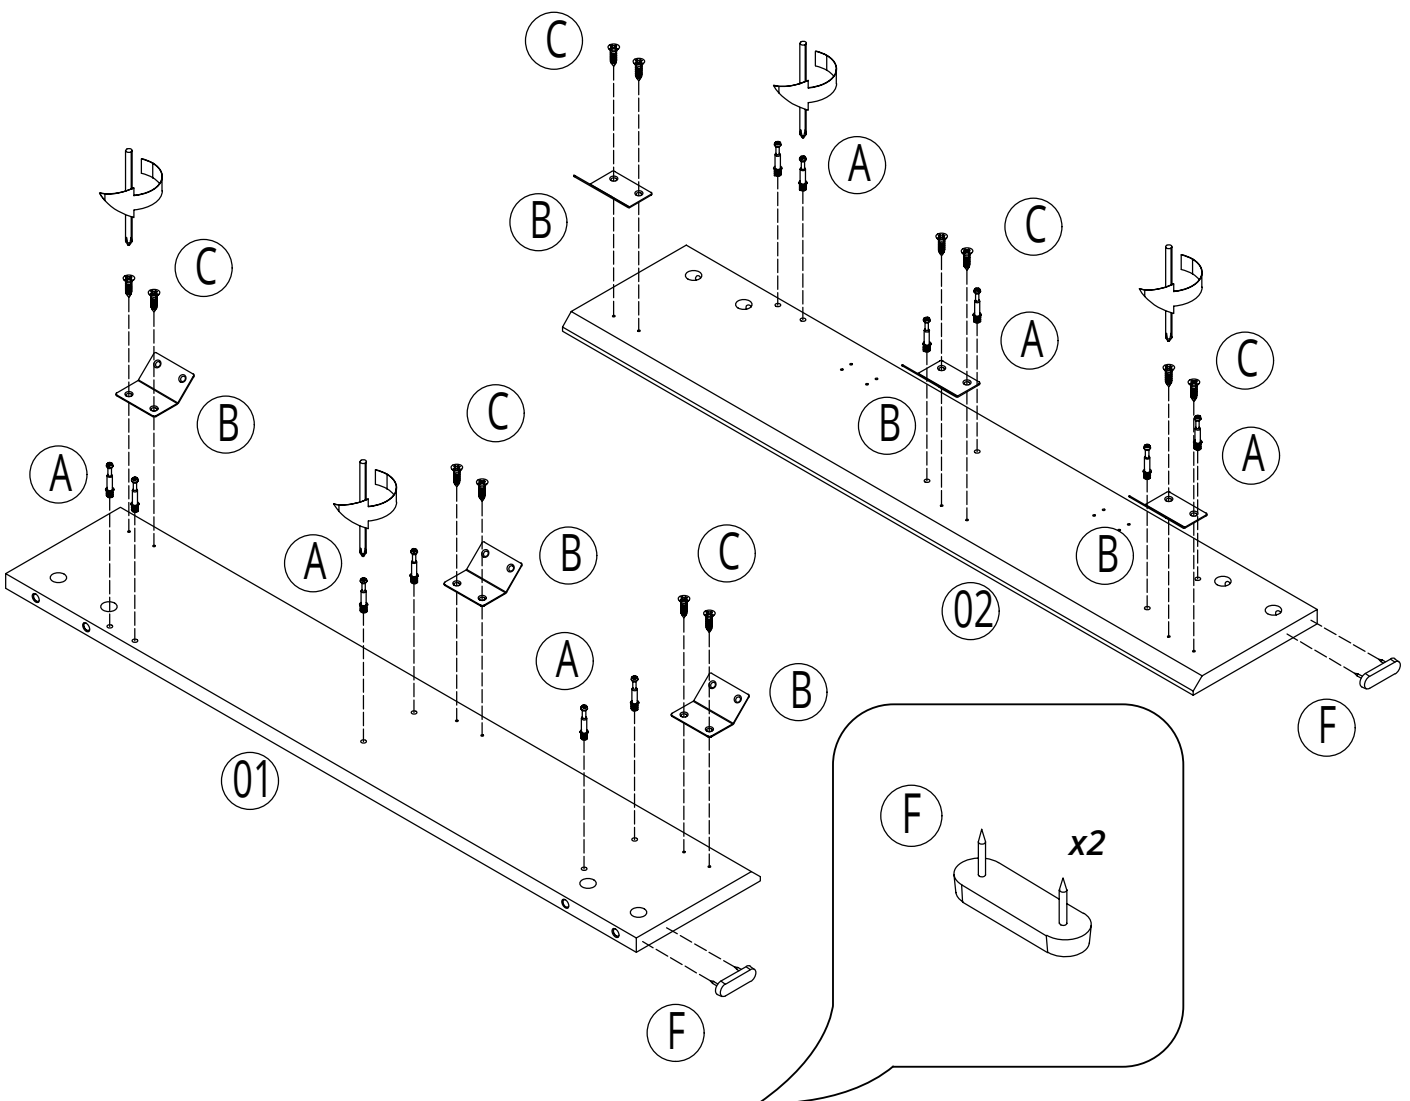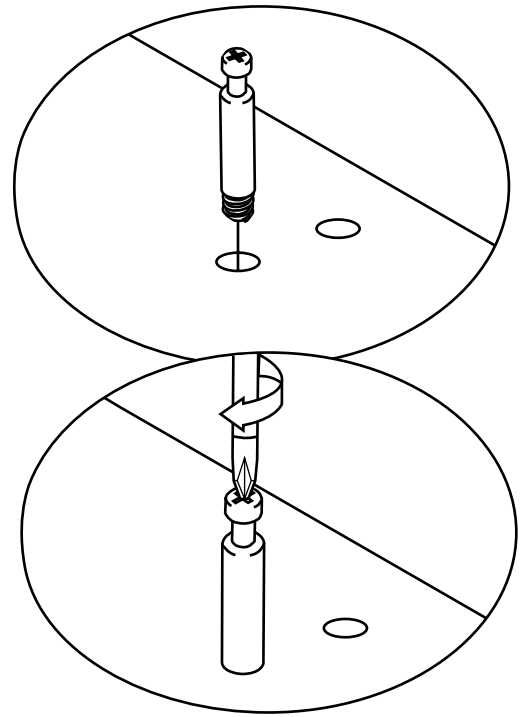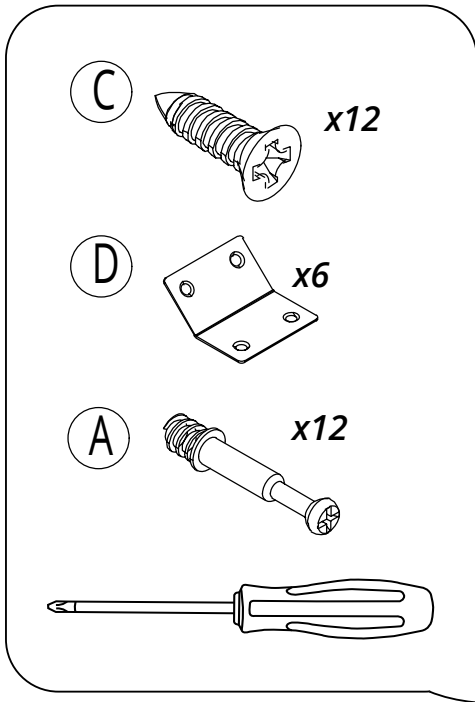


2

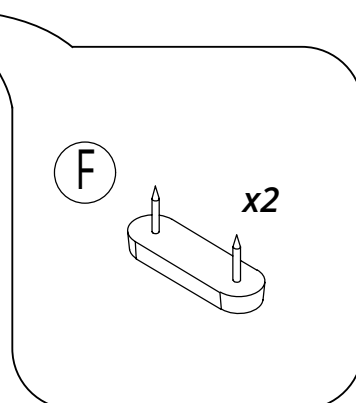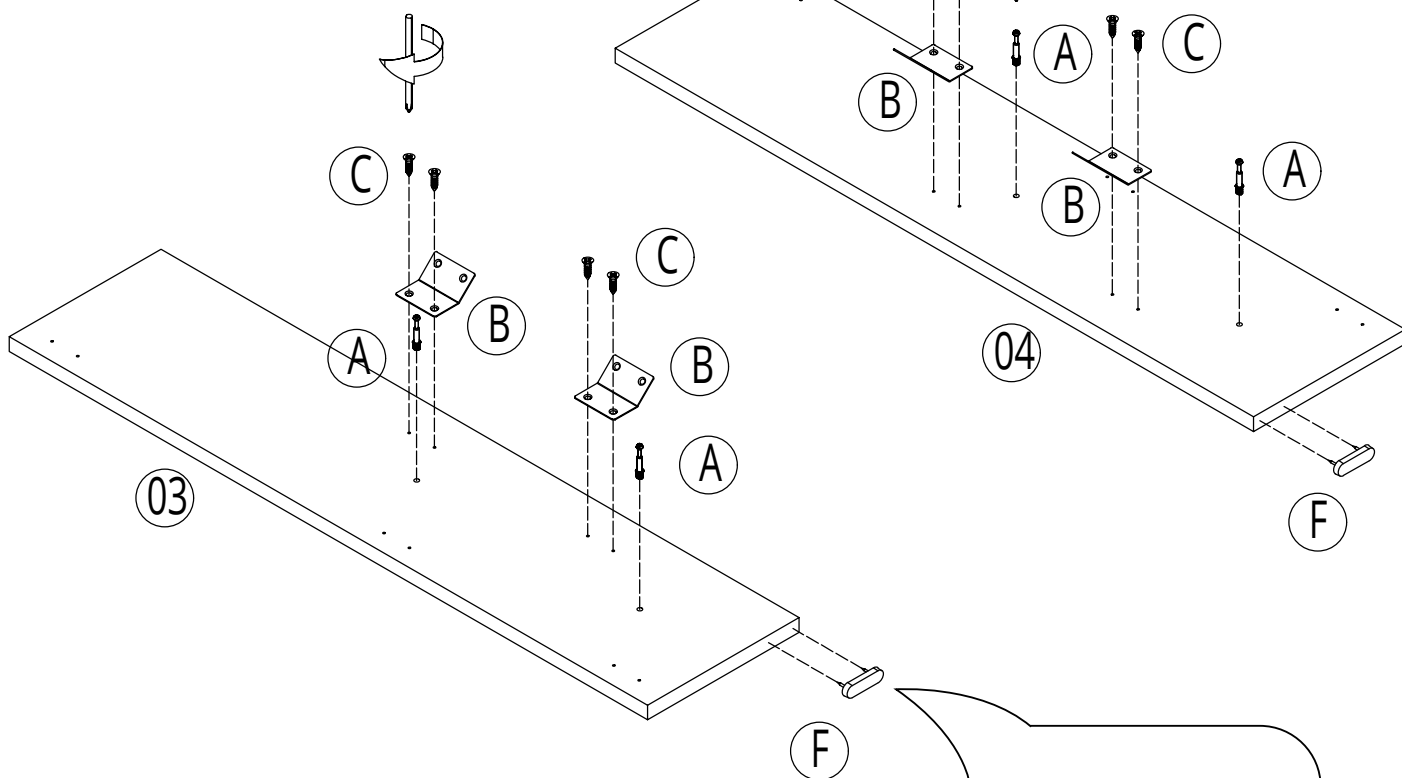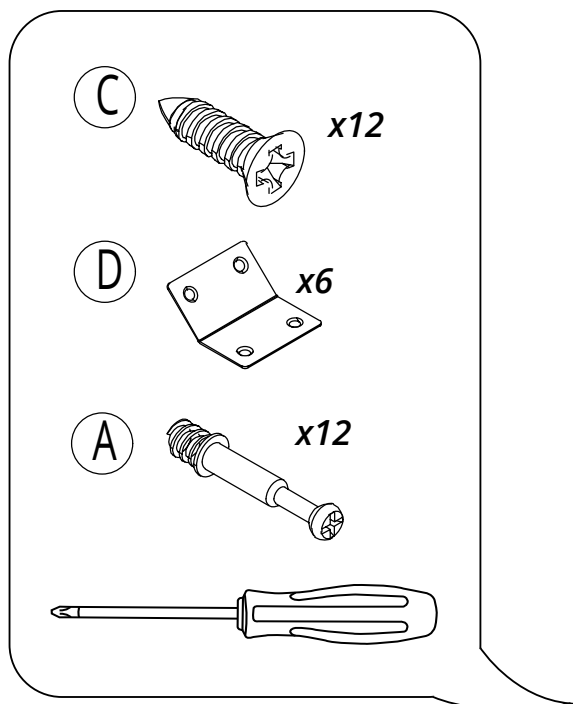


5


3

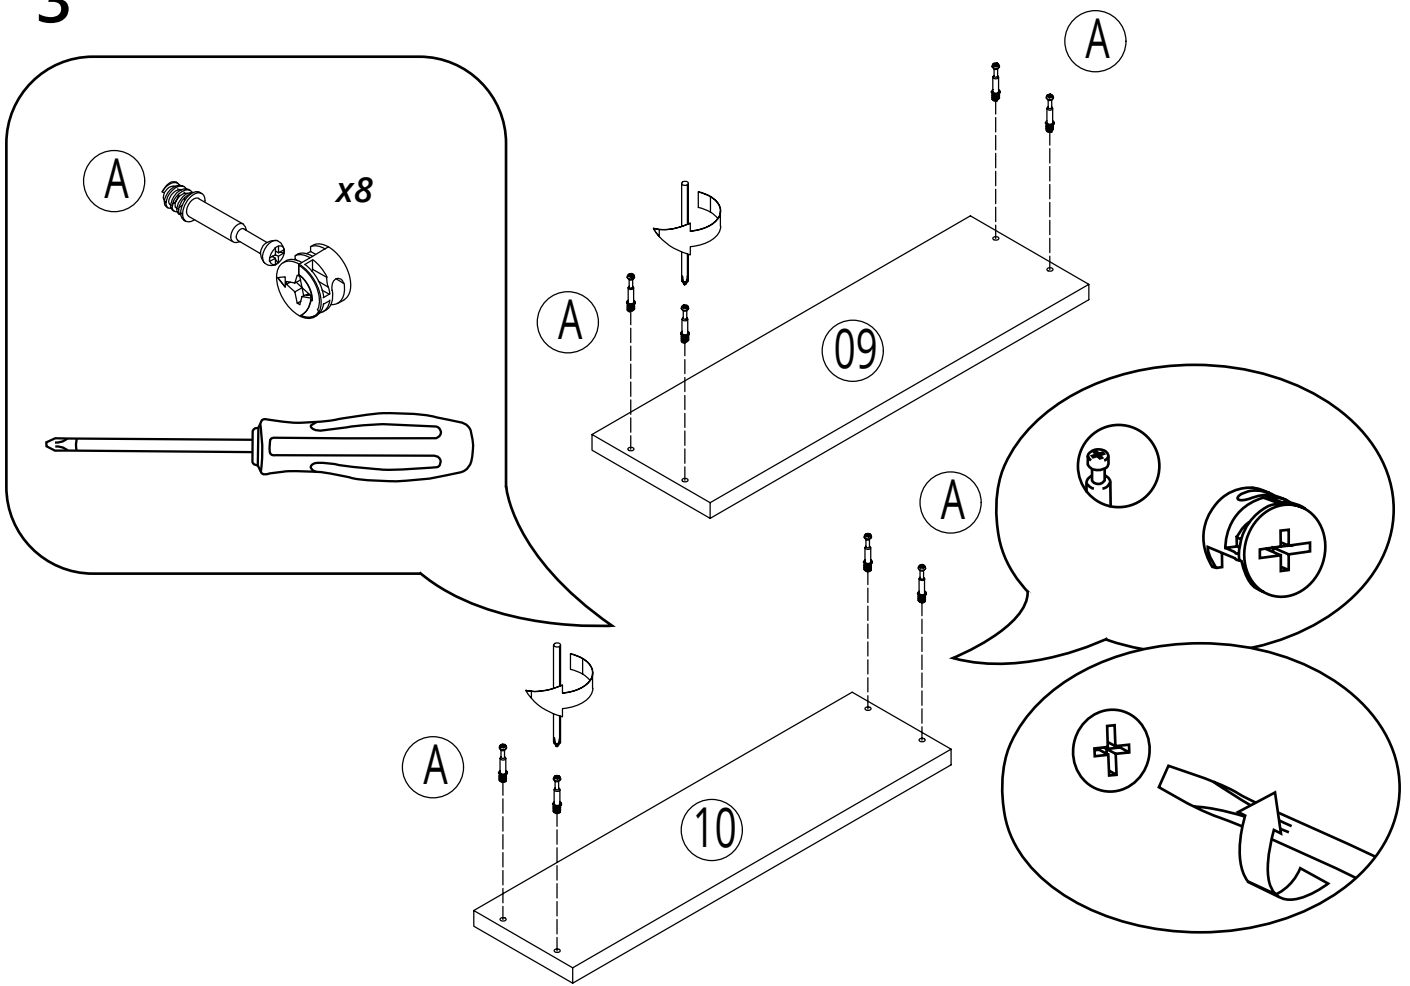


4

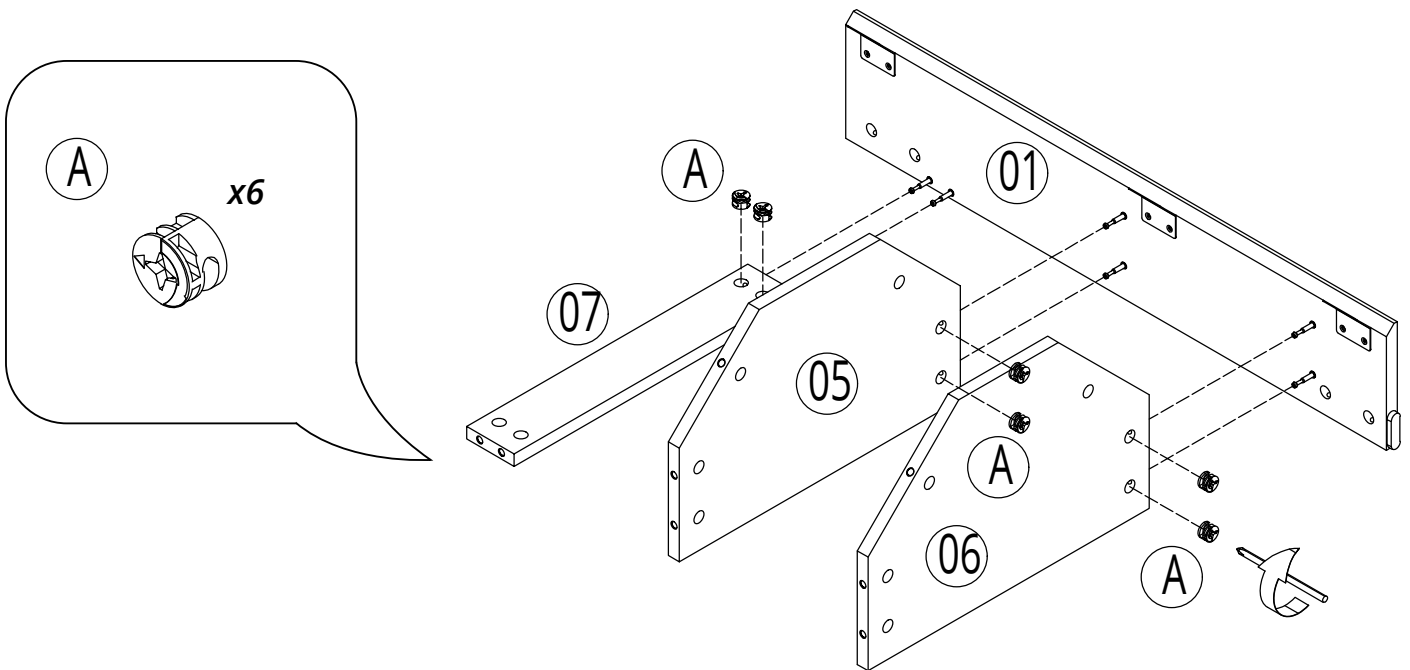



5

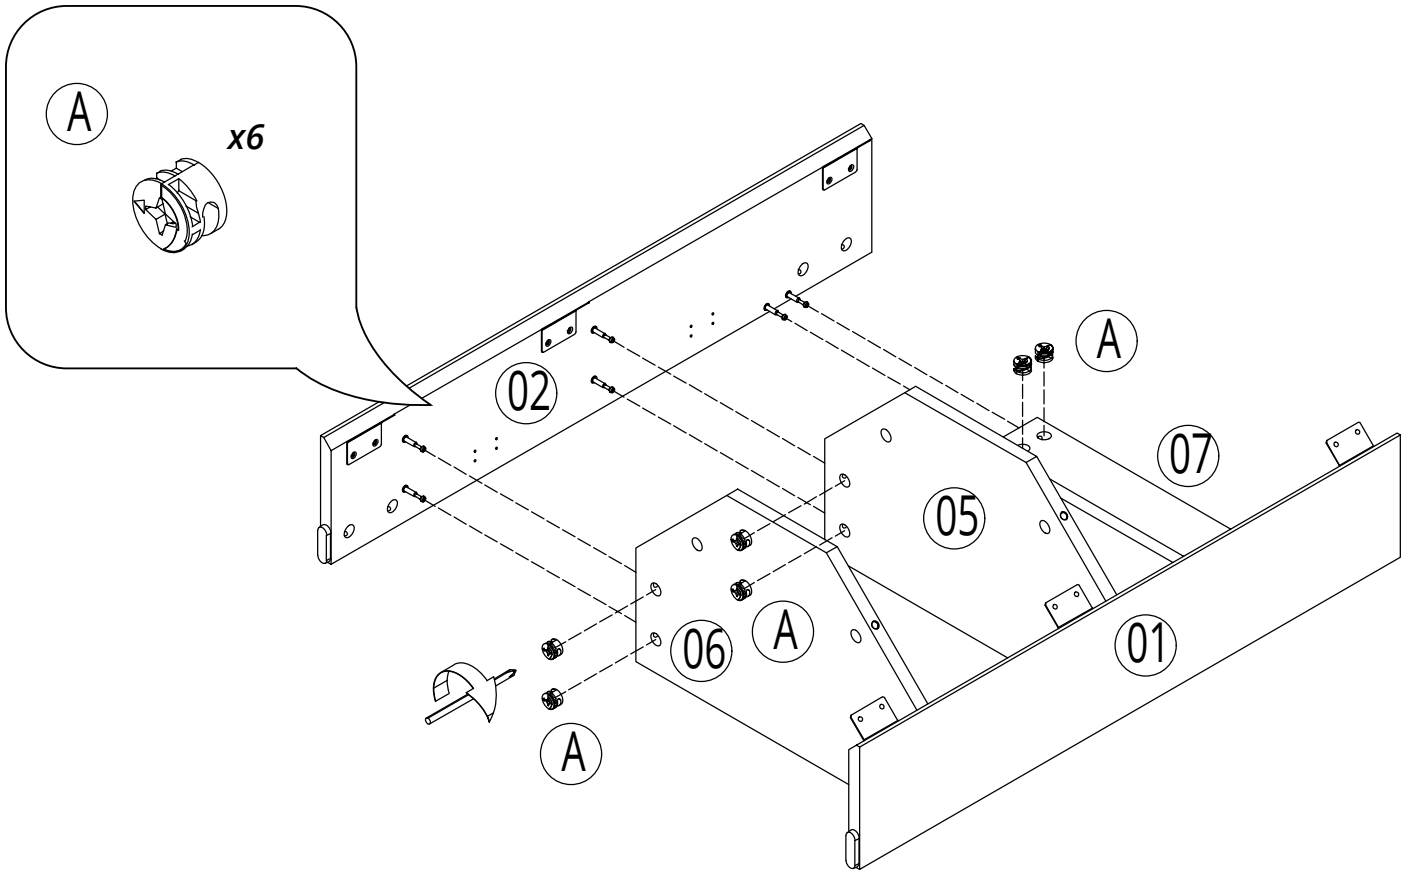



6

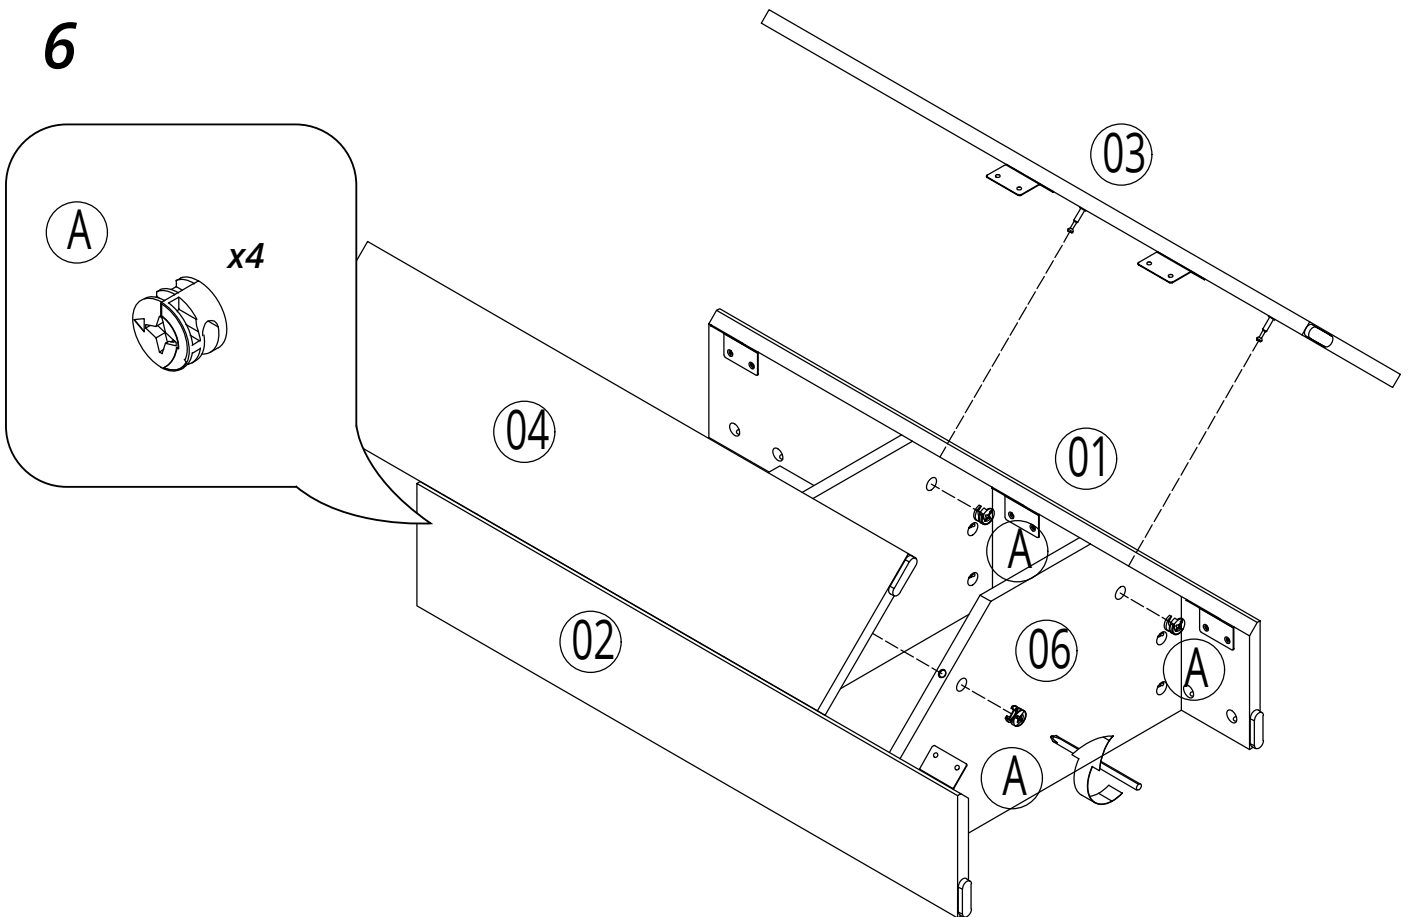



7

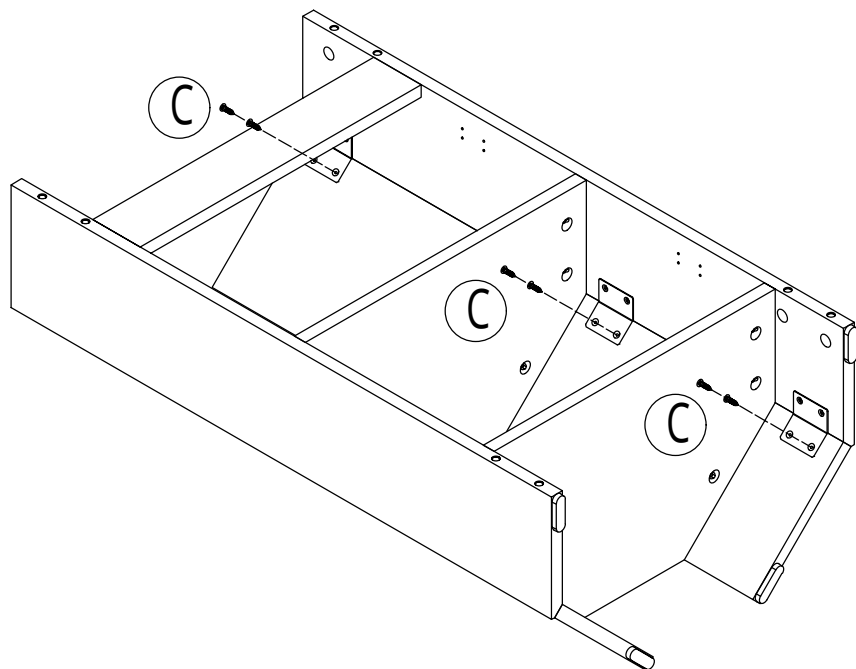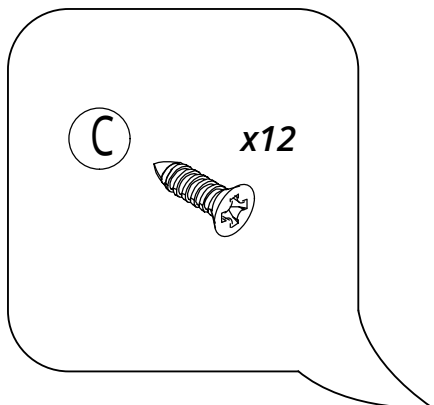



8

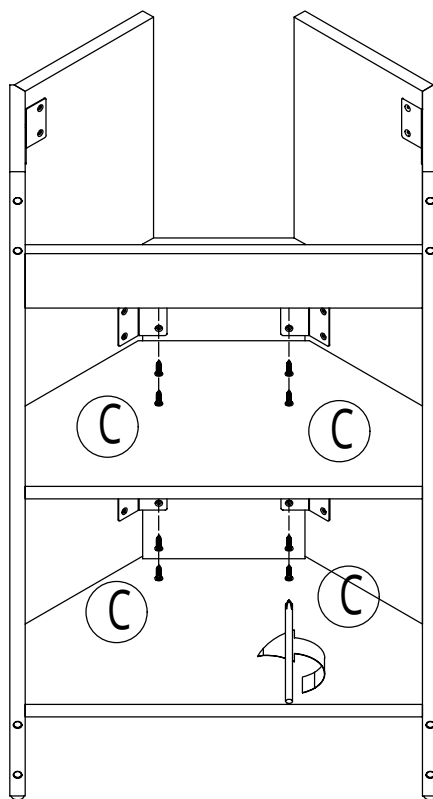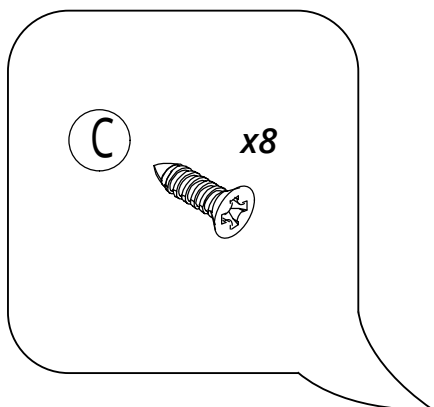


9




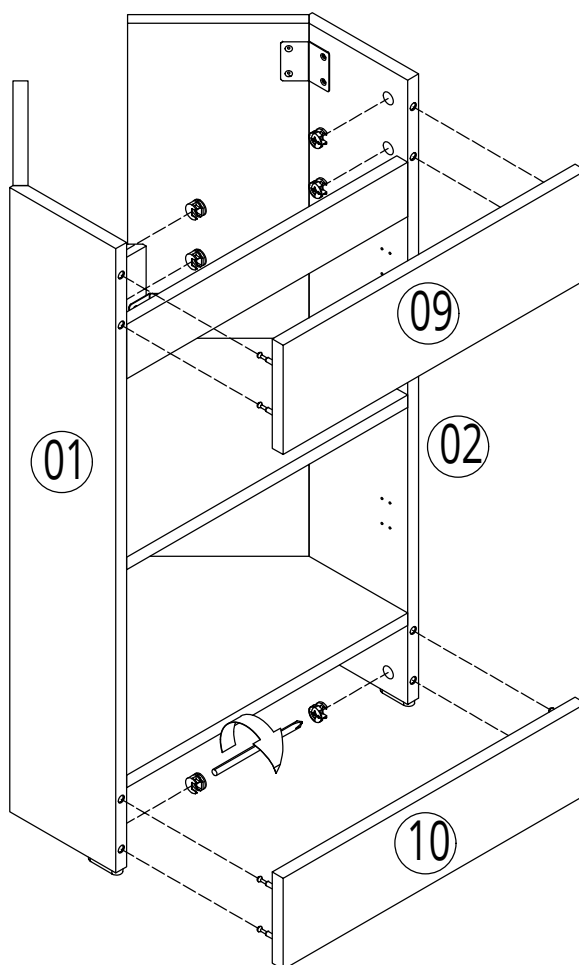
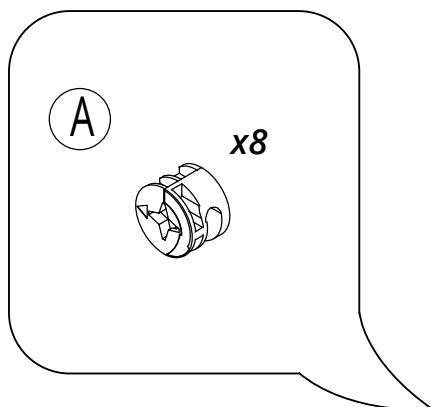


10

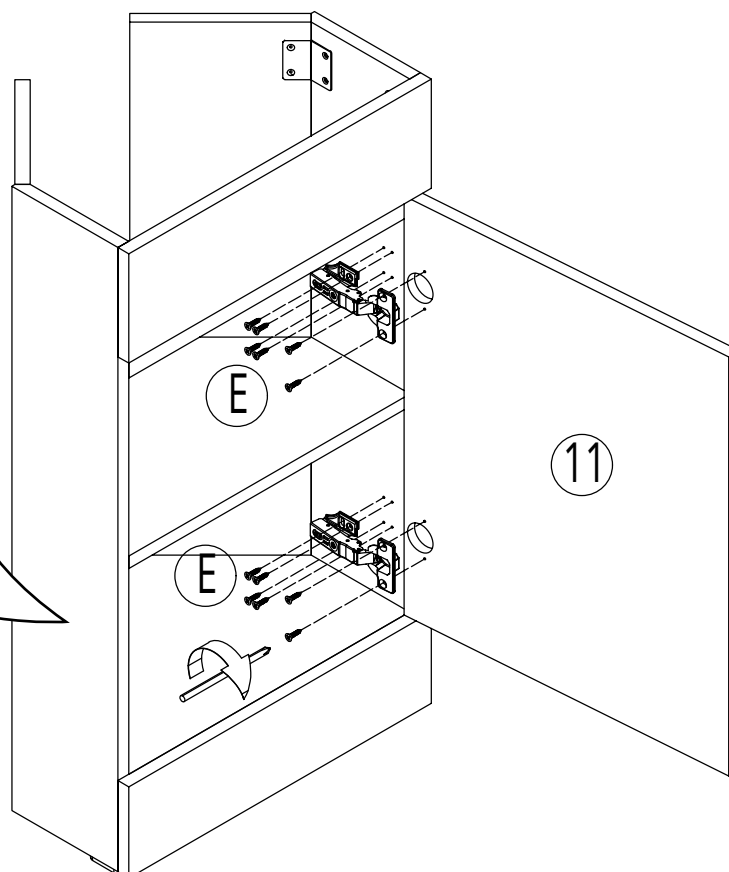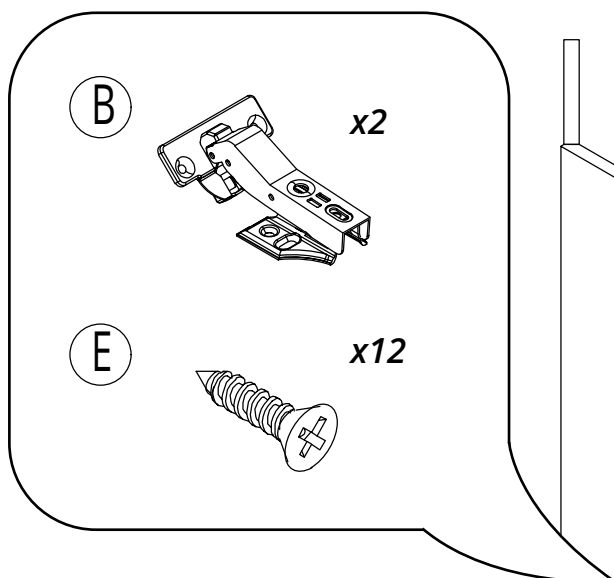


Hinge Adjustments:

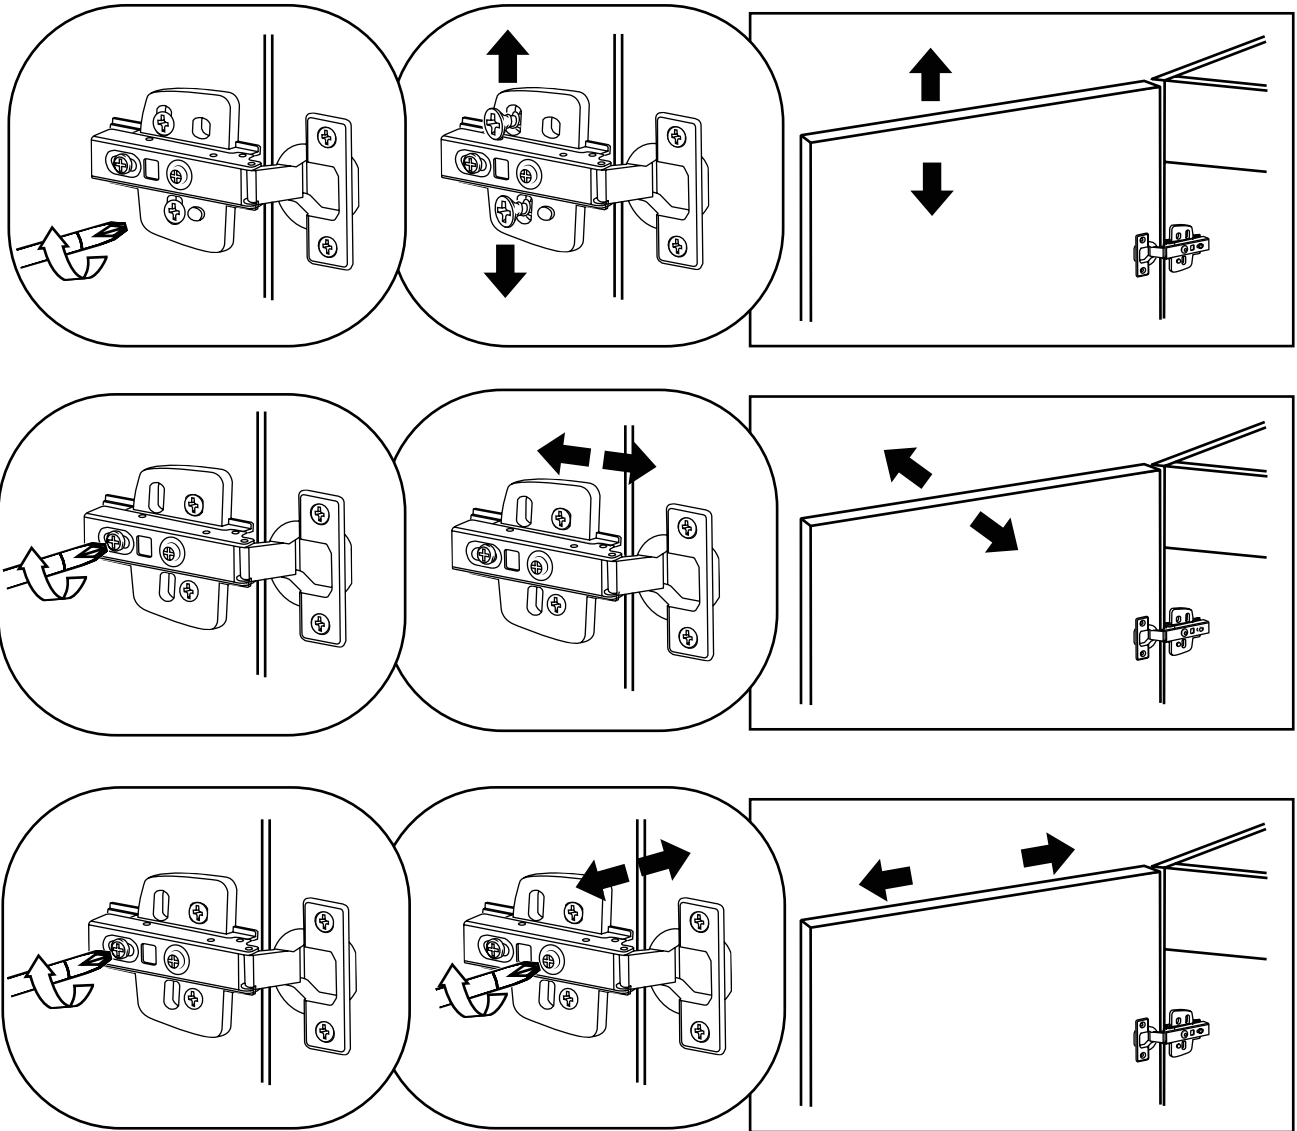


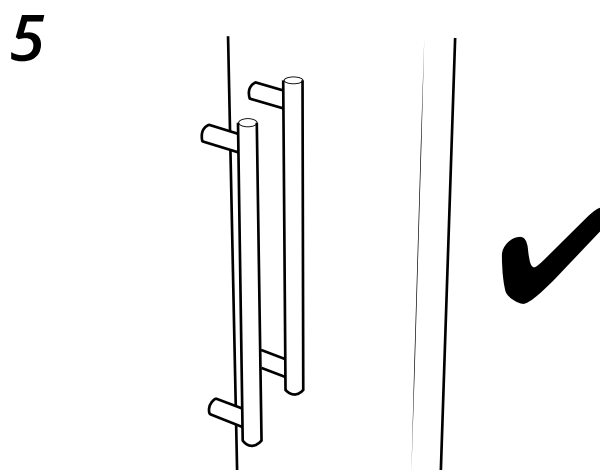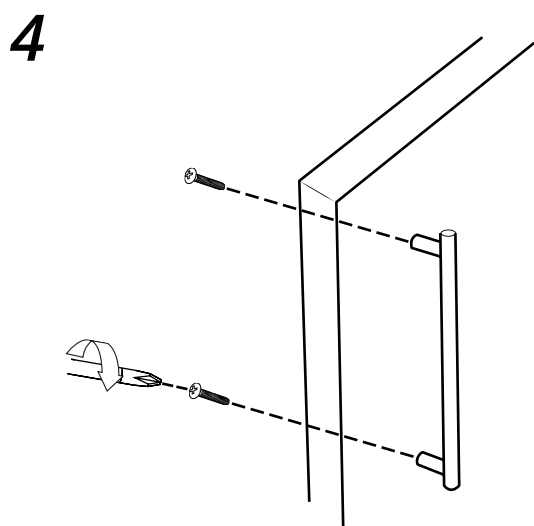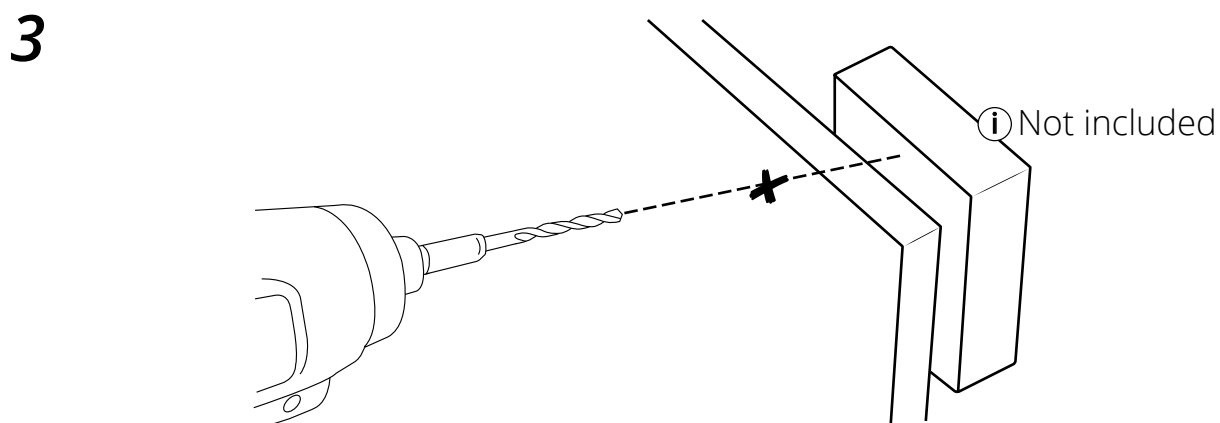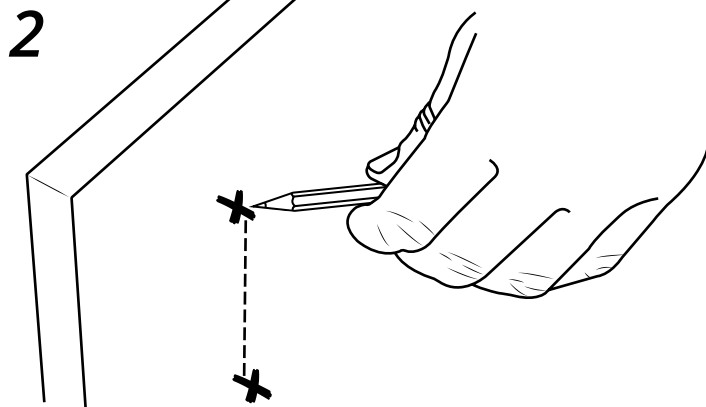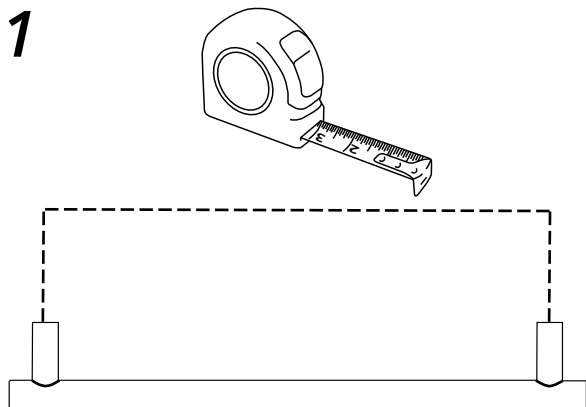


Optional: Handles

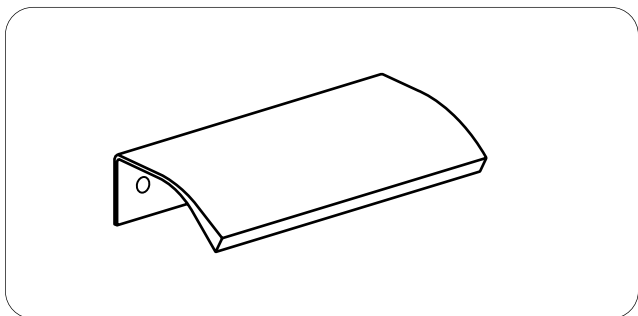


1

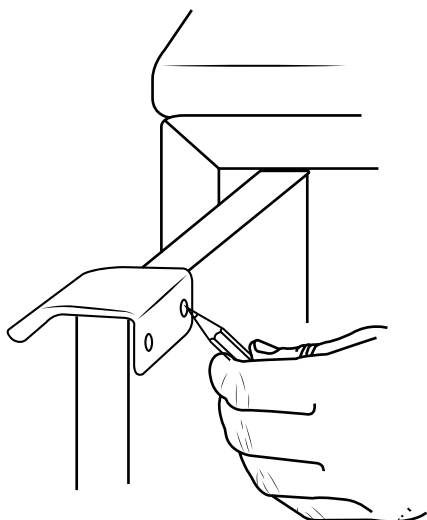


2

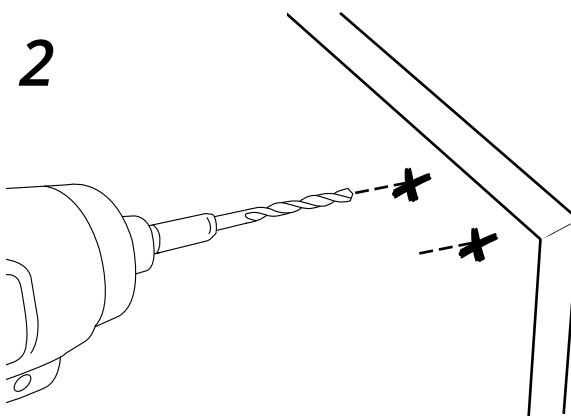






3

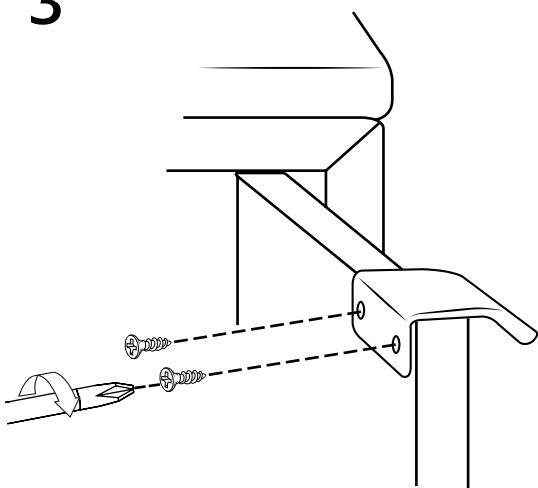



4

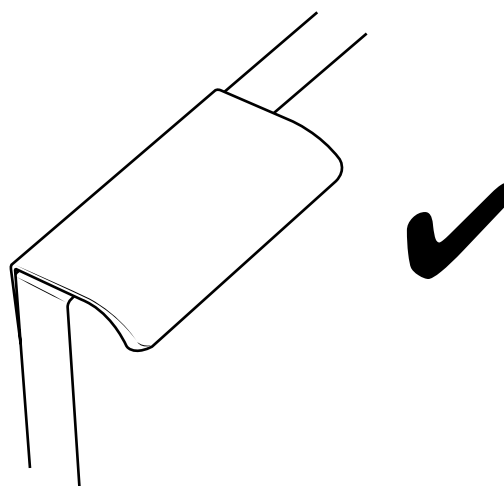

Optional: Handles

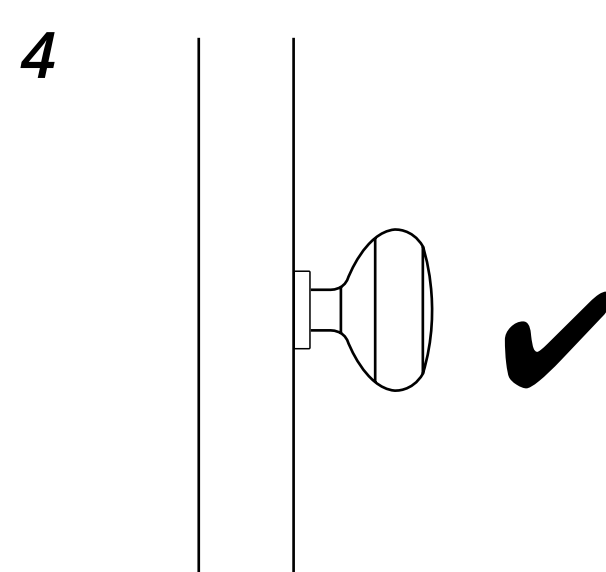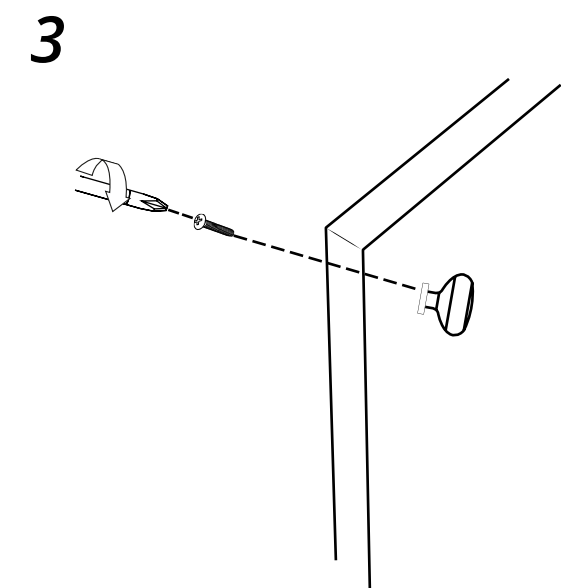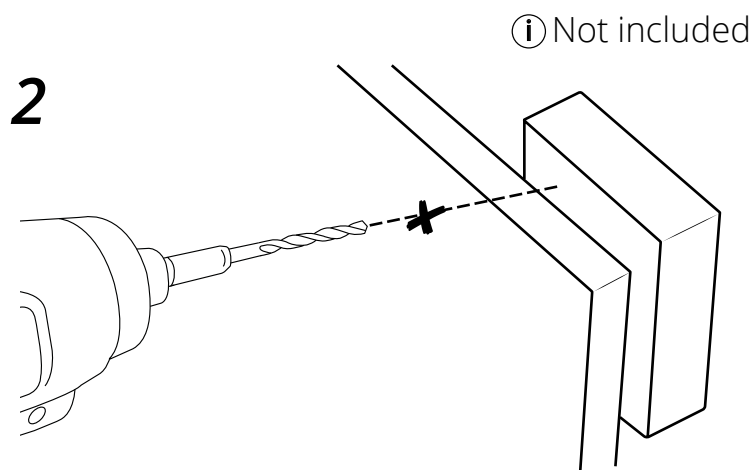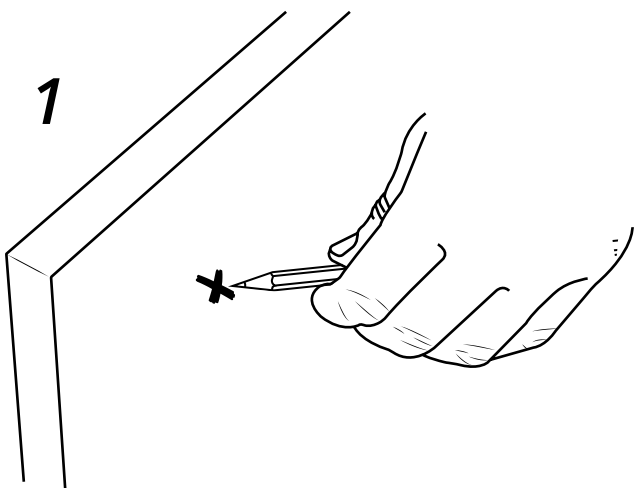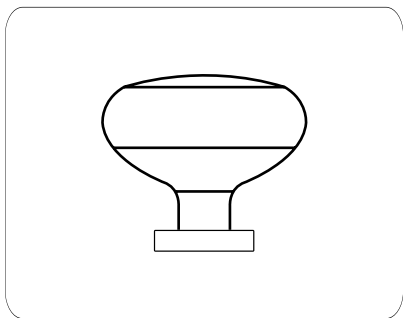

11

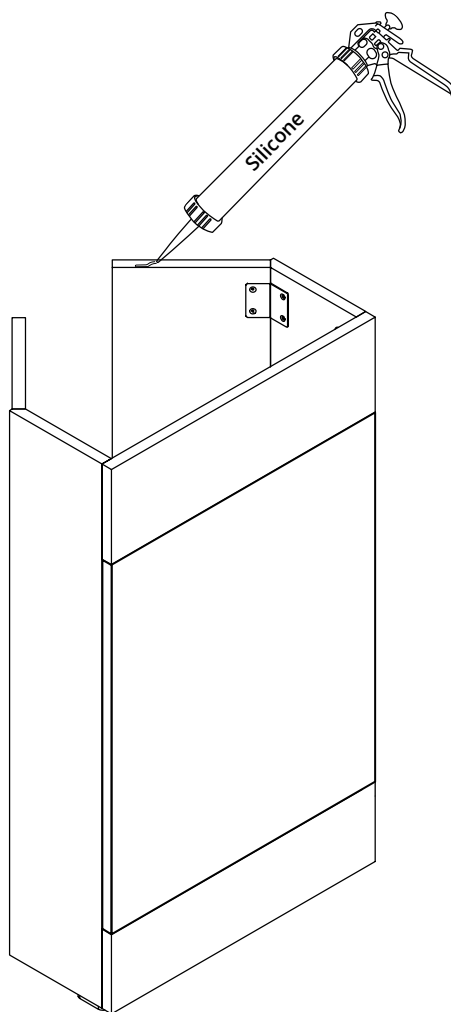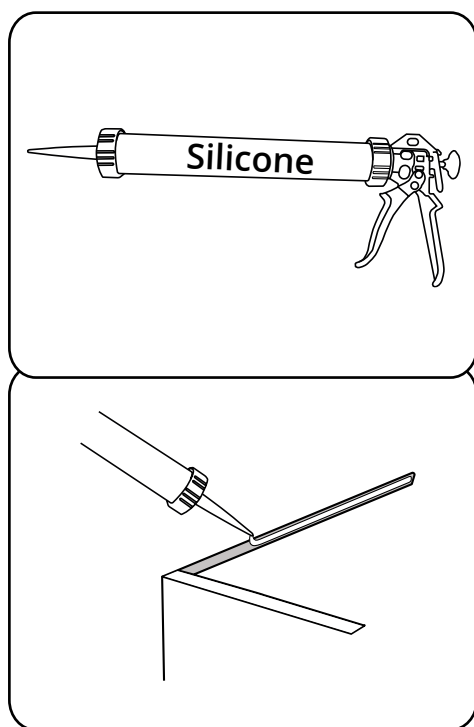

12

