


Milano






Freestanding Bath

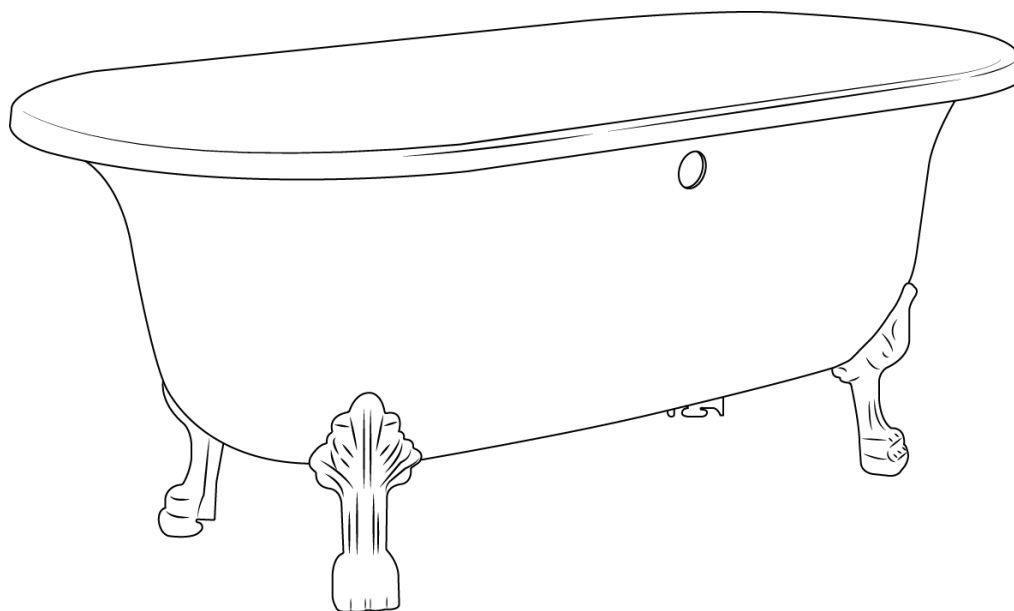








Installation Guide

Installation


Tools required for installing:

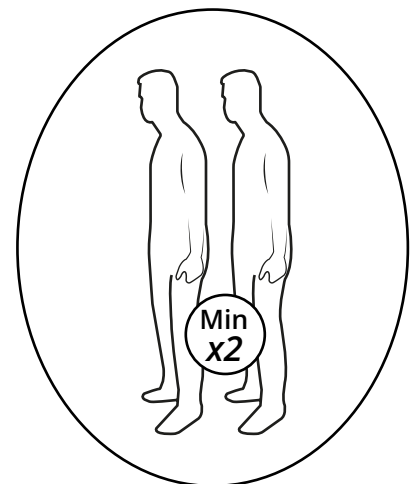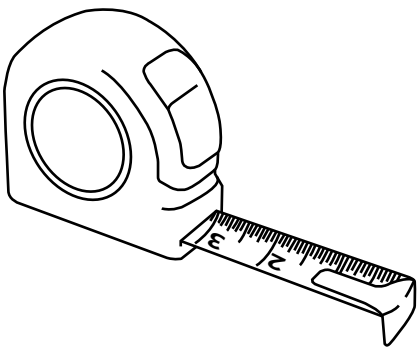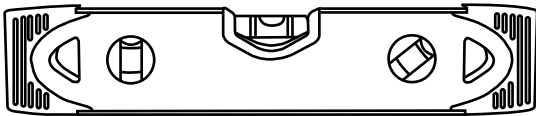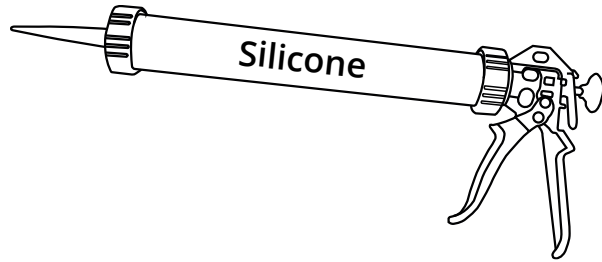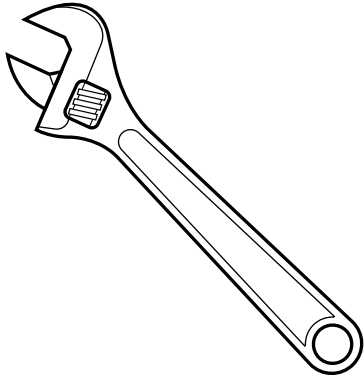


Parts included:

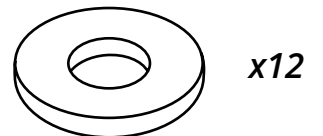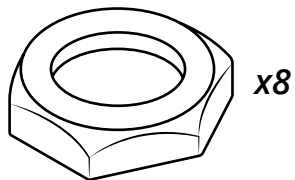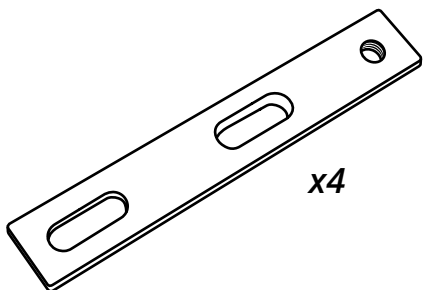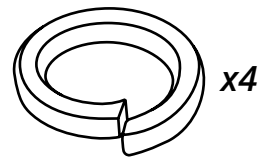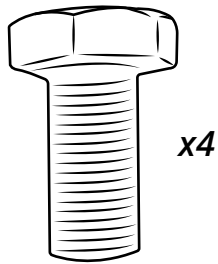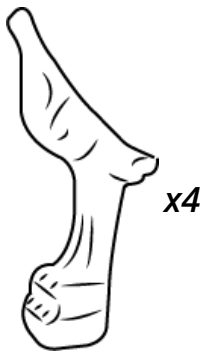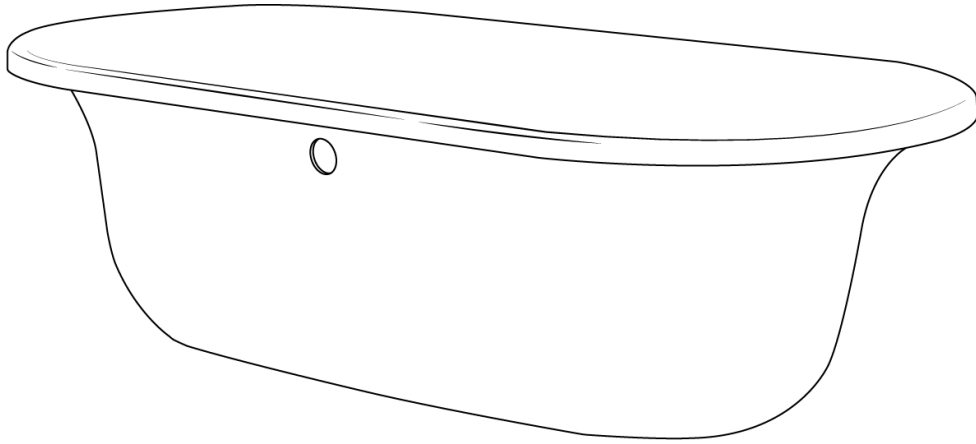

1



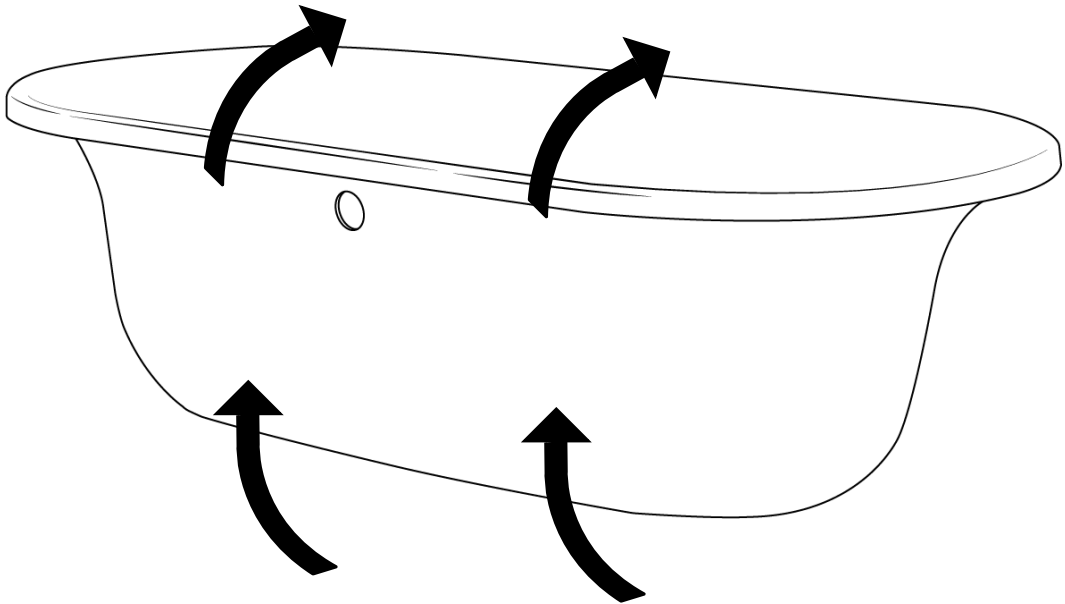


2


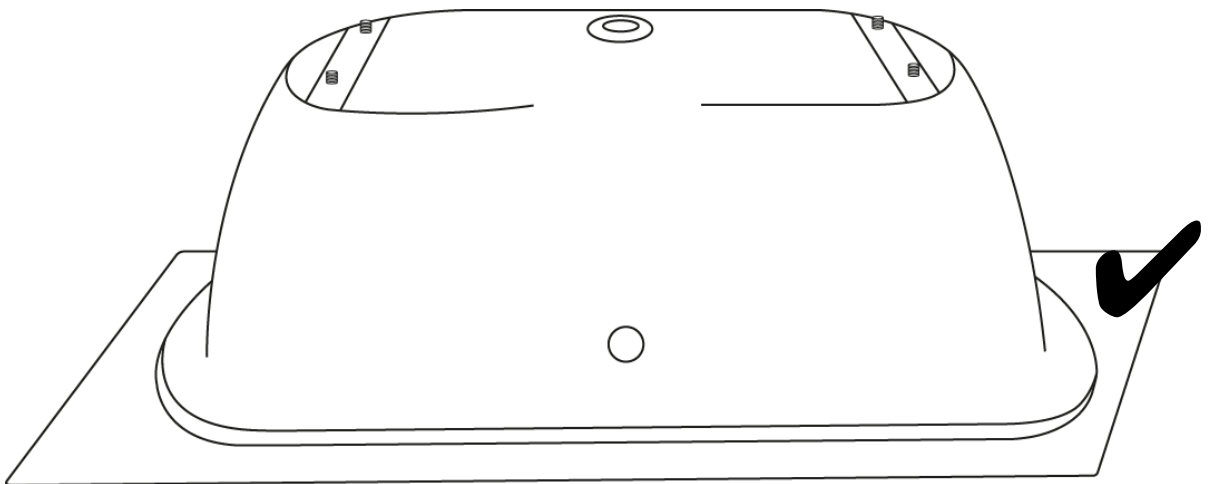


i Place on a soft surface



3

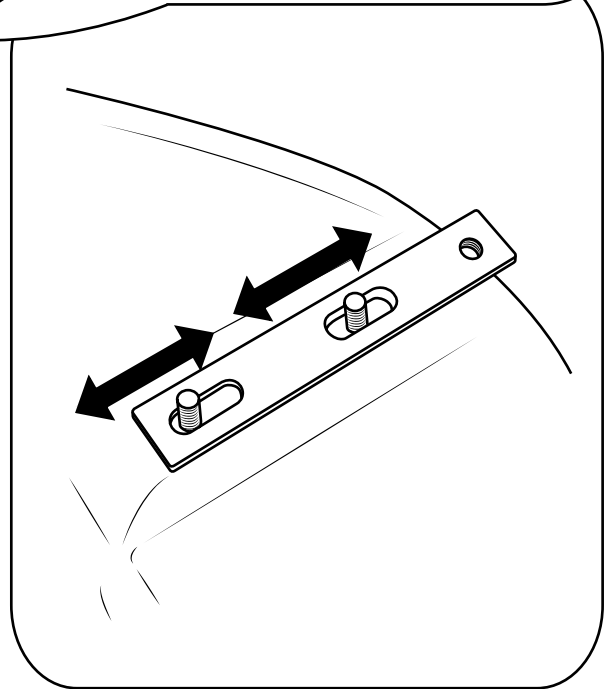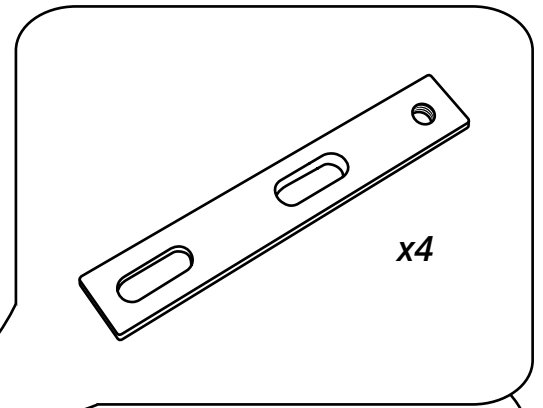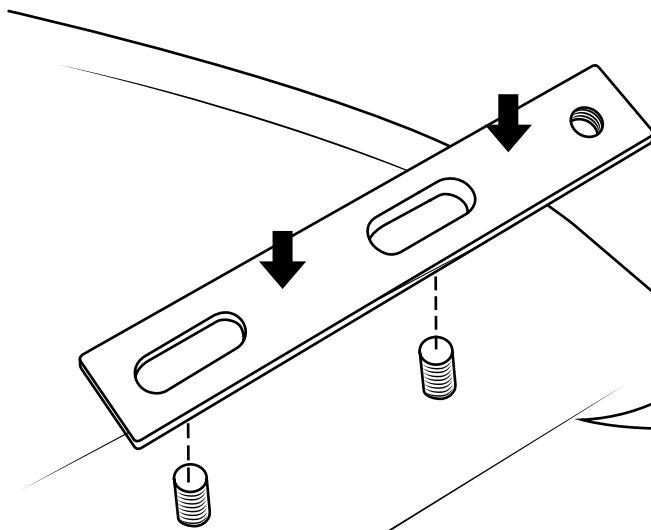




4

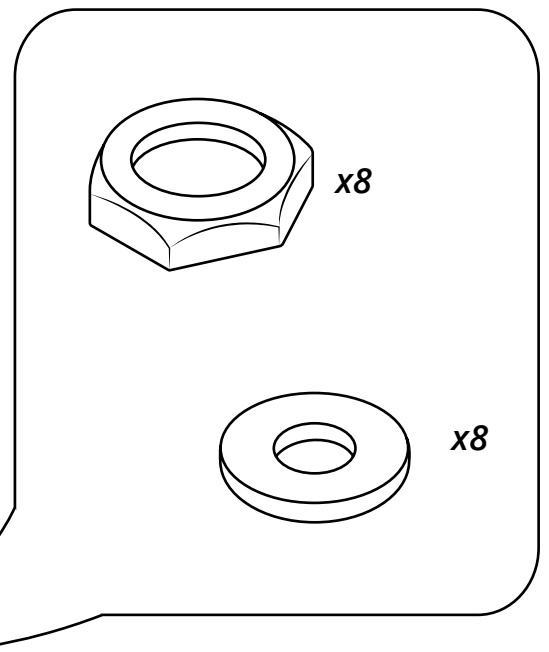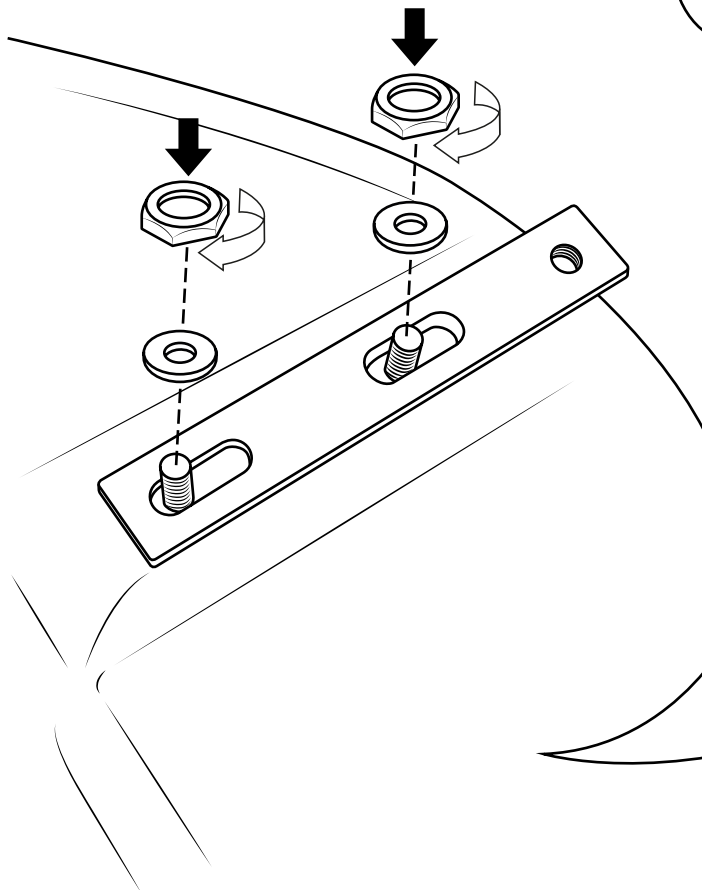


5

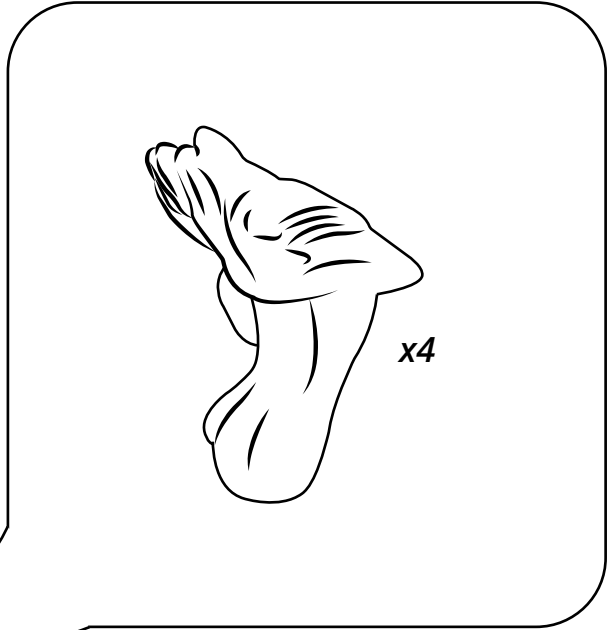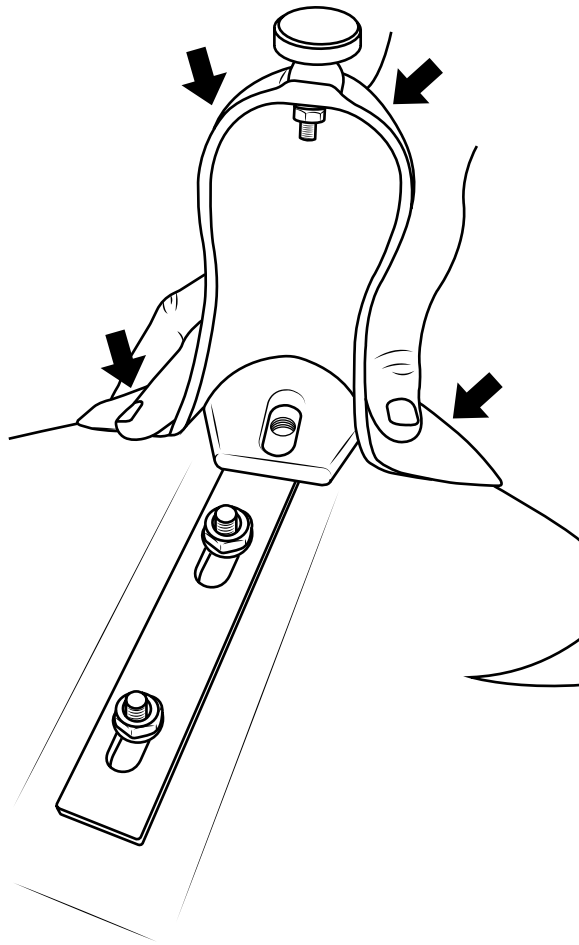


6

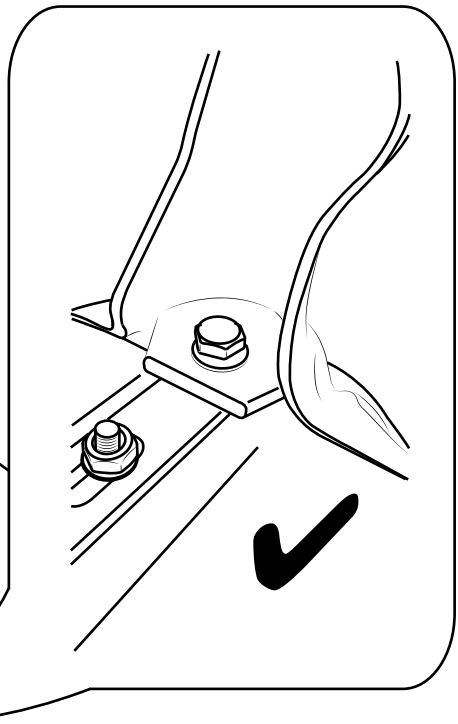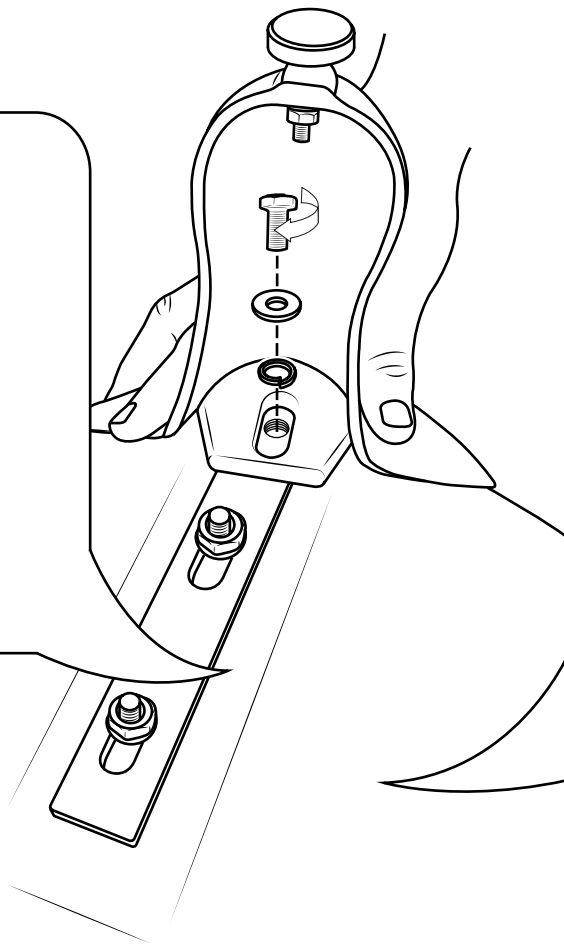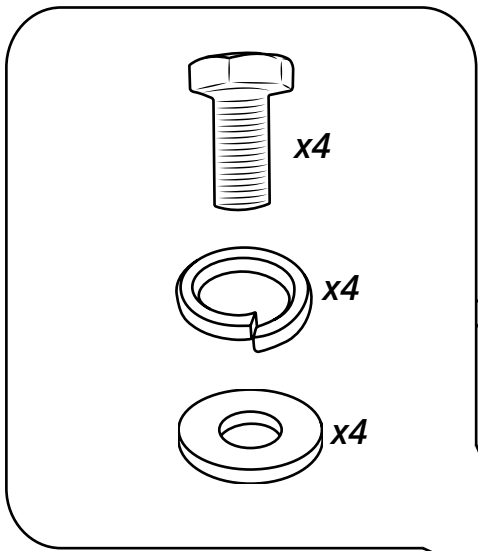


7

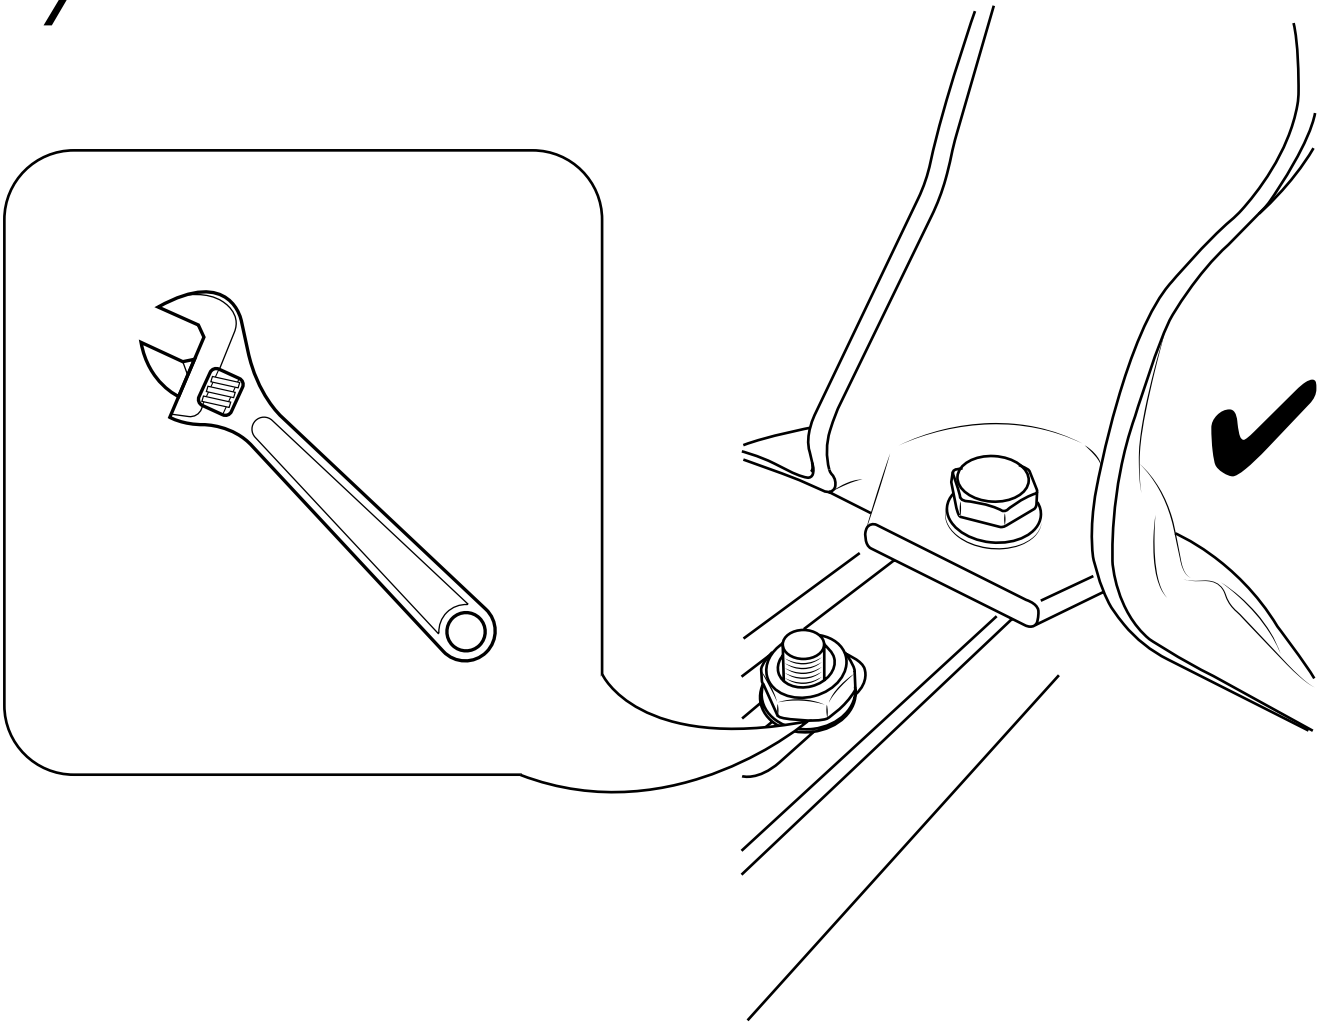


8

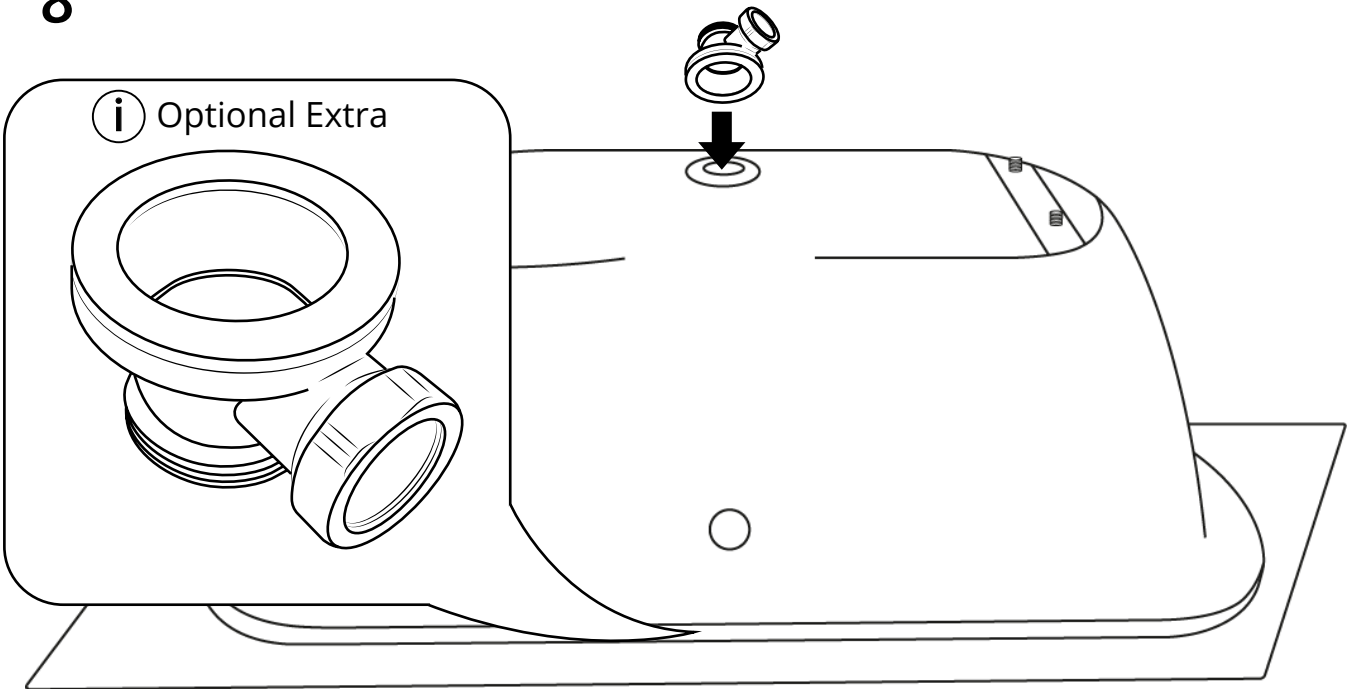


9

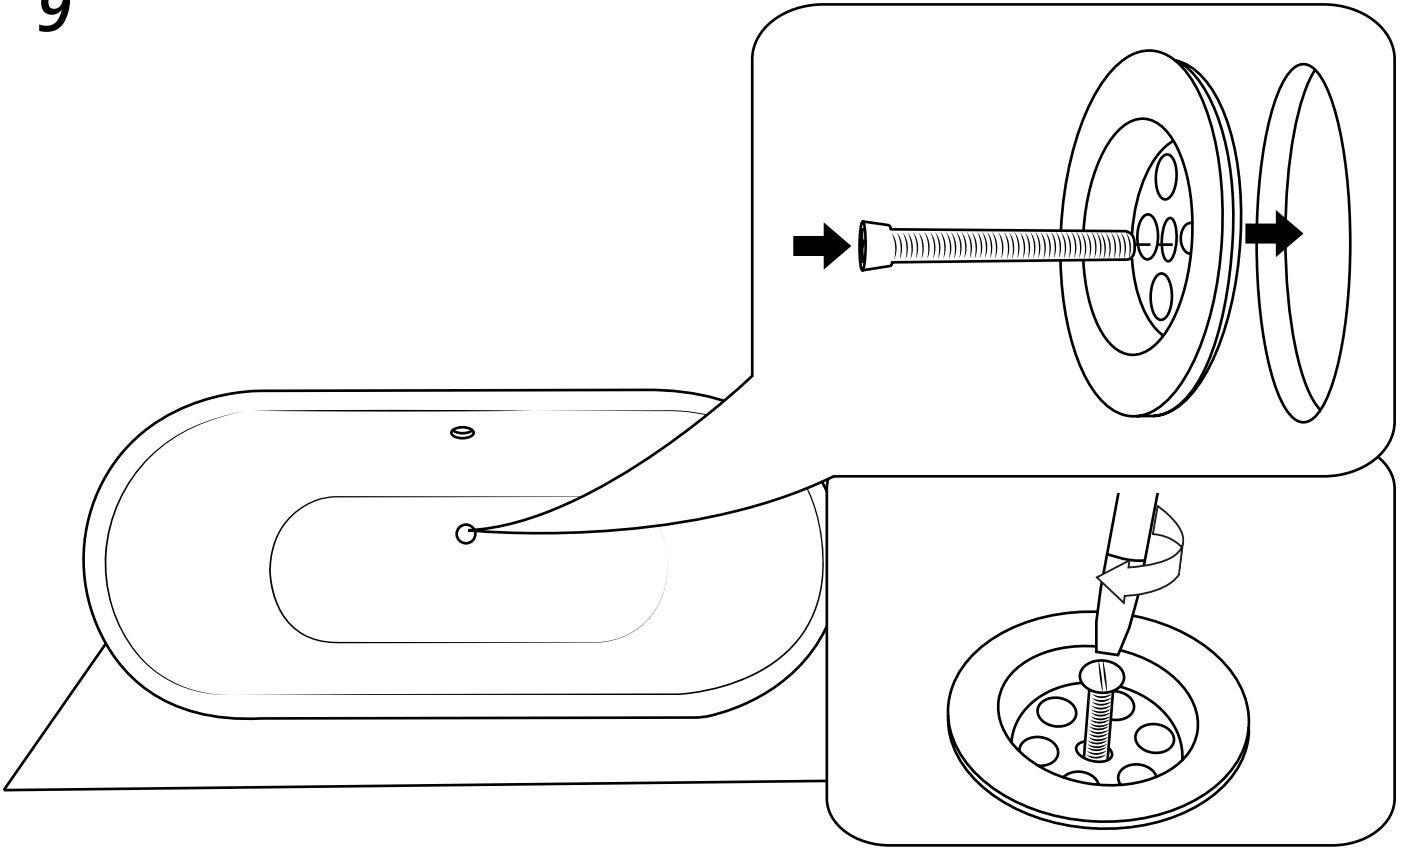


10

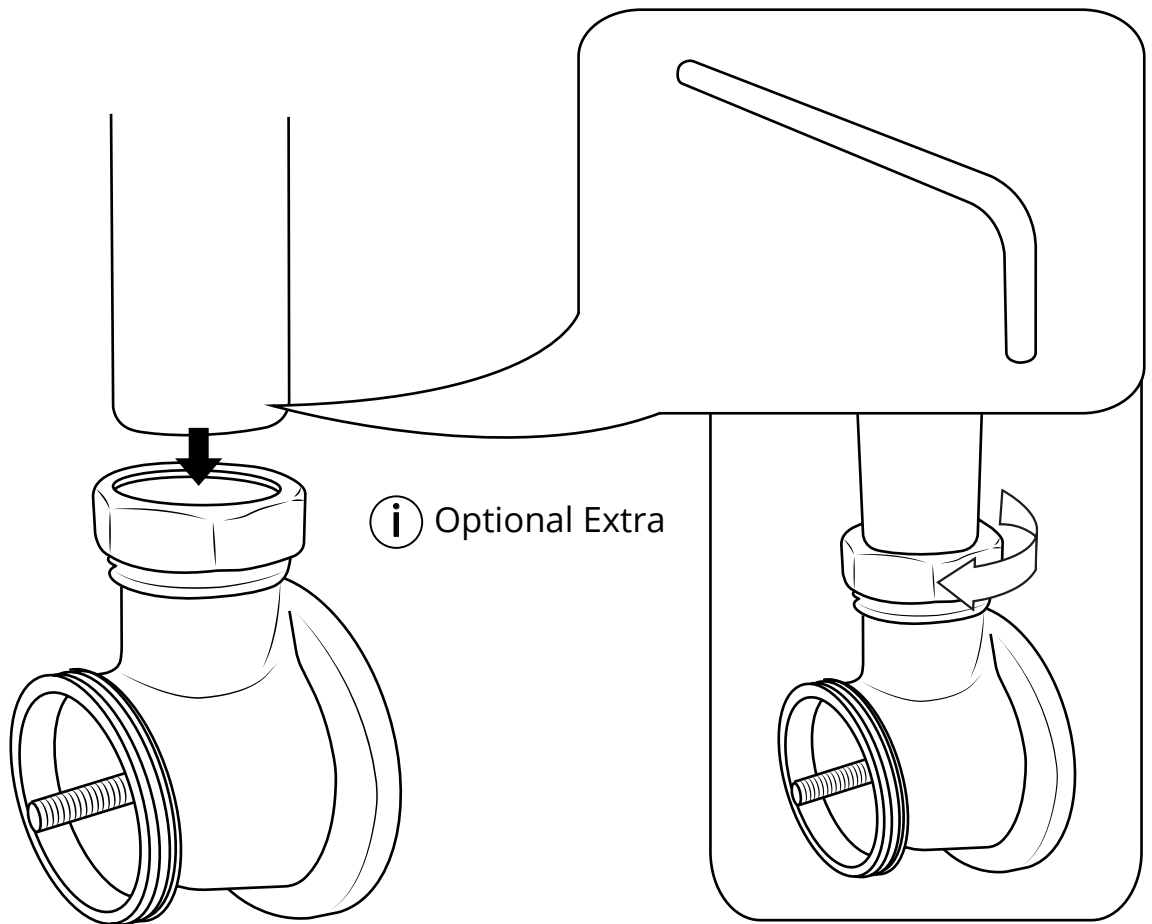




11

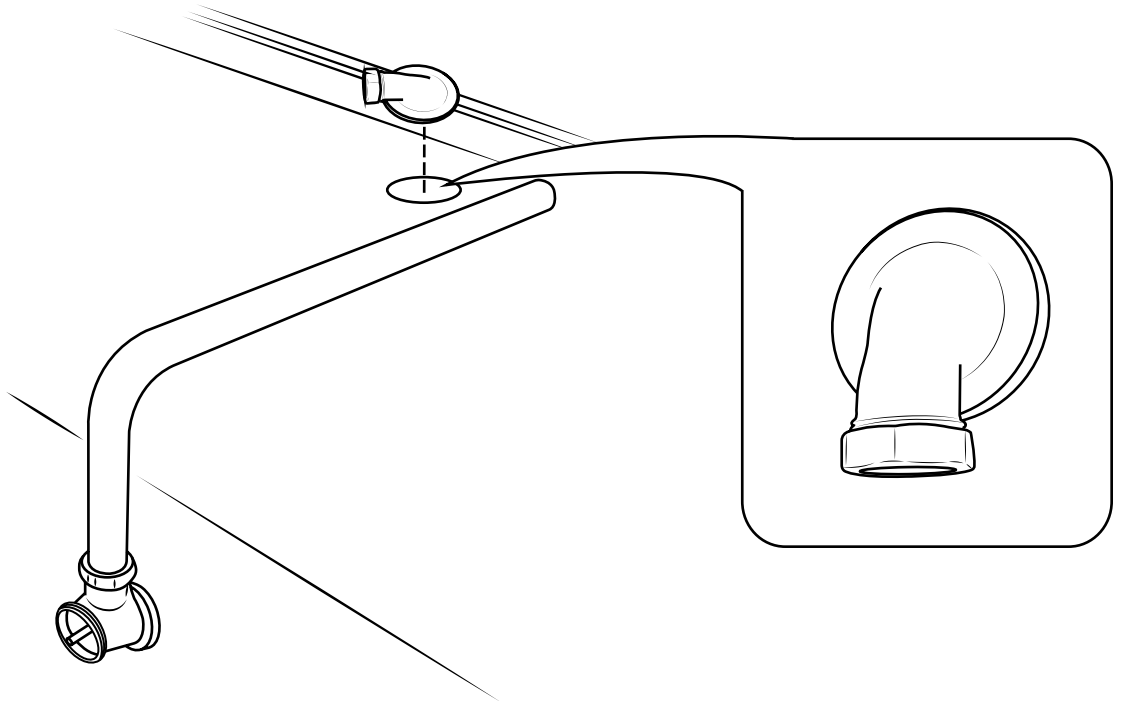


12

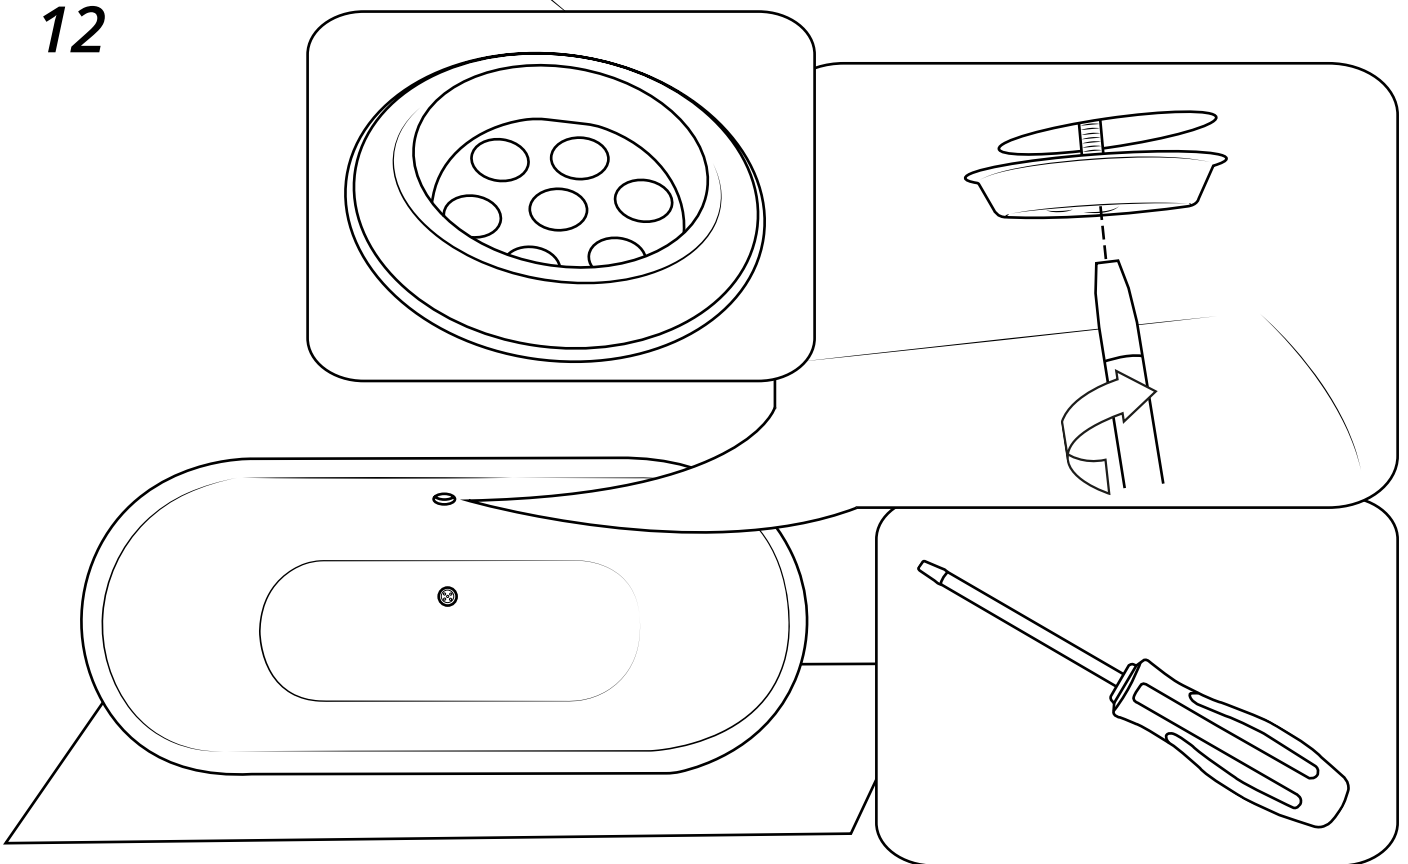


13

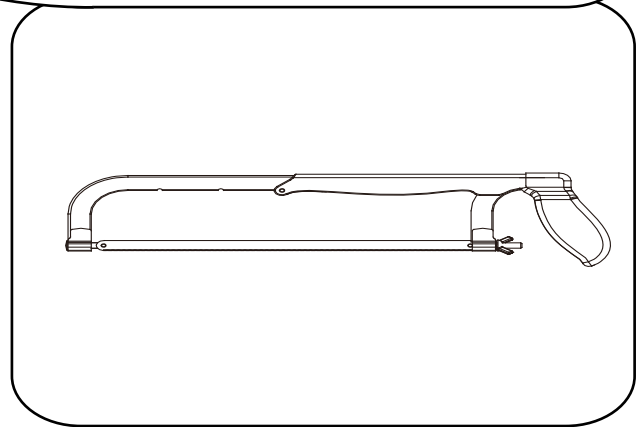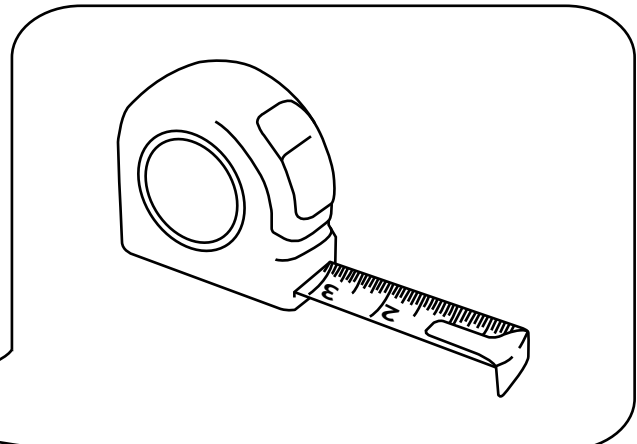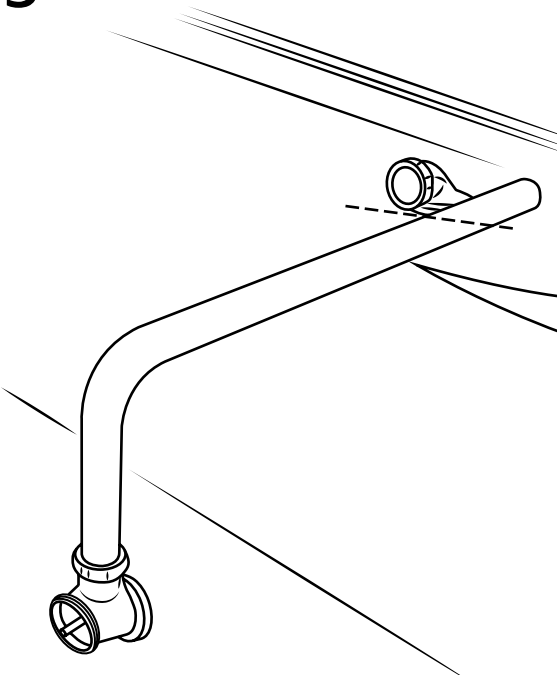


14

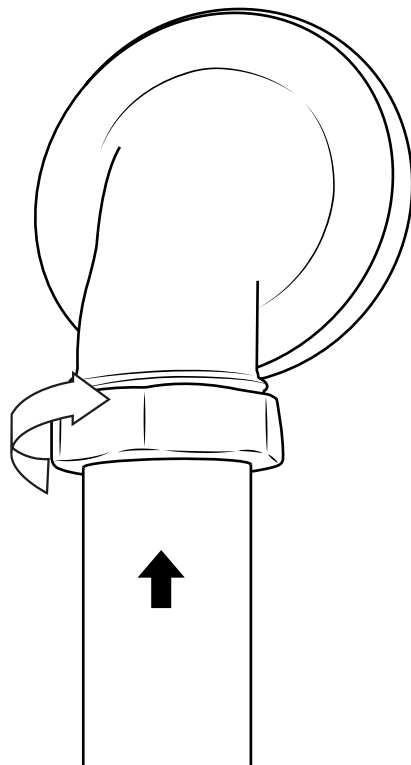


15

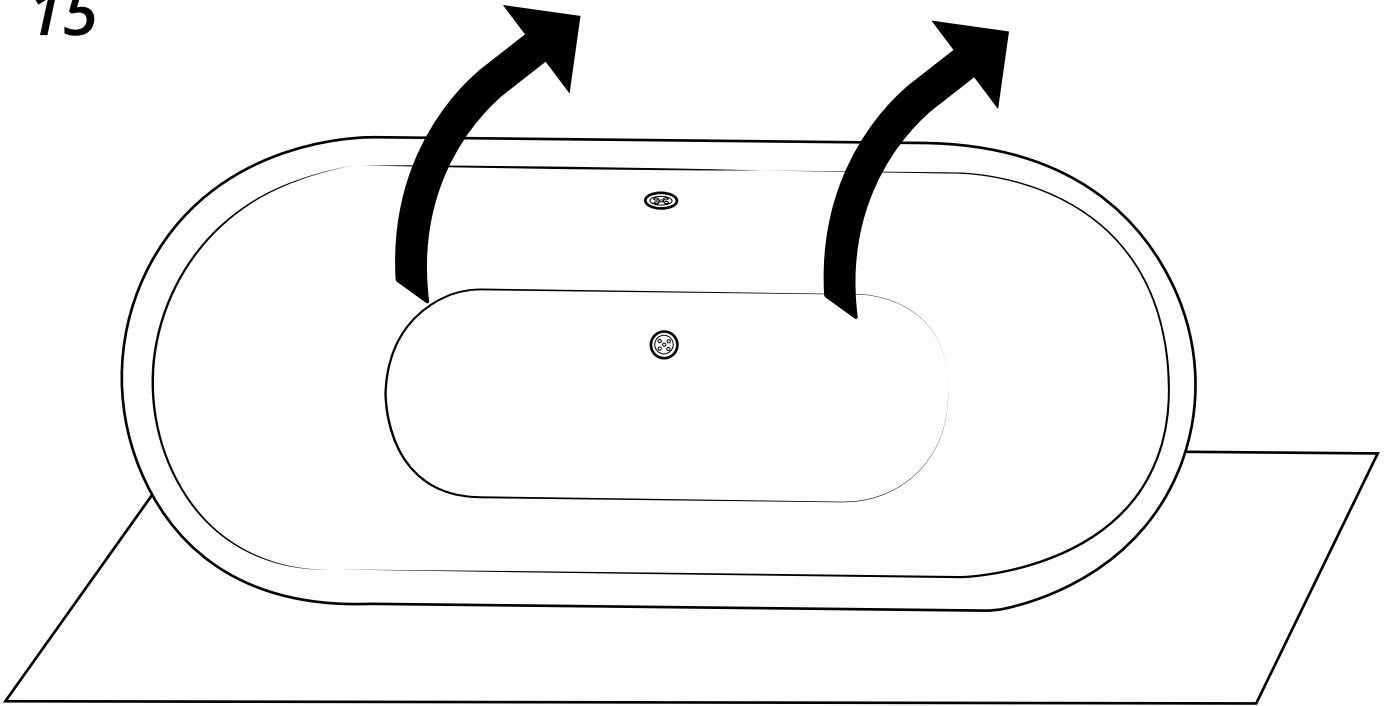

16

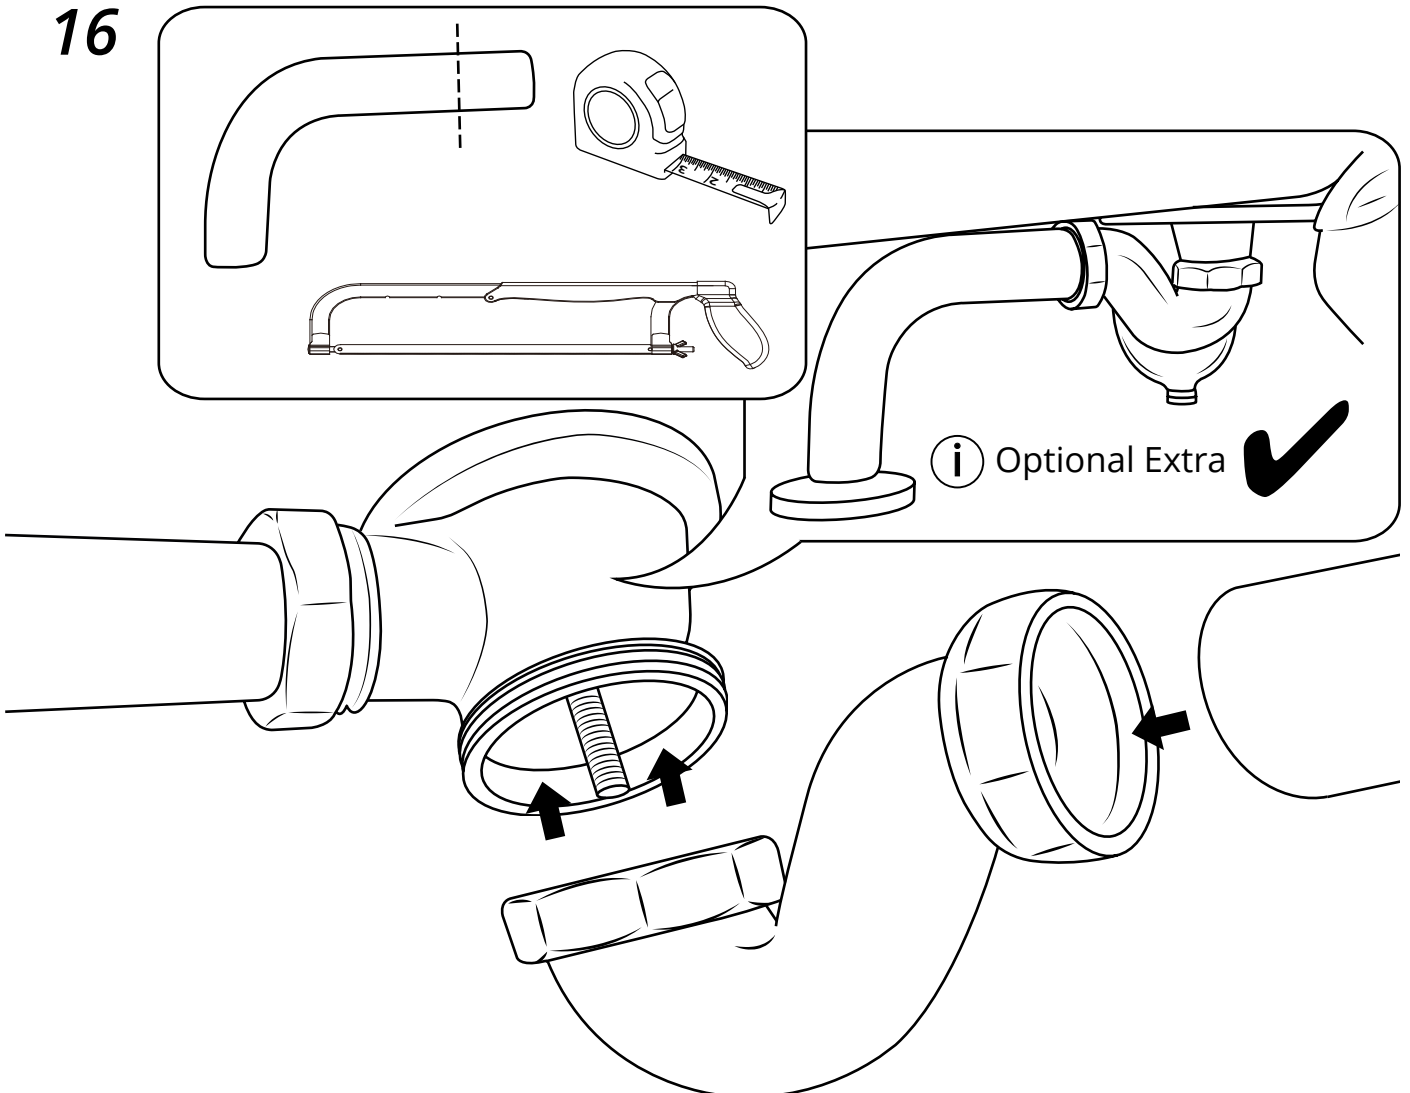

17

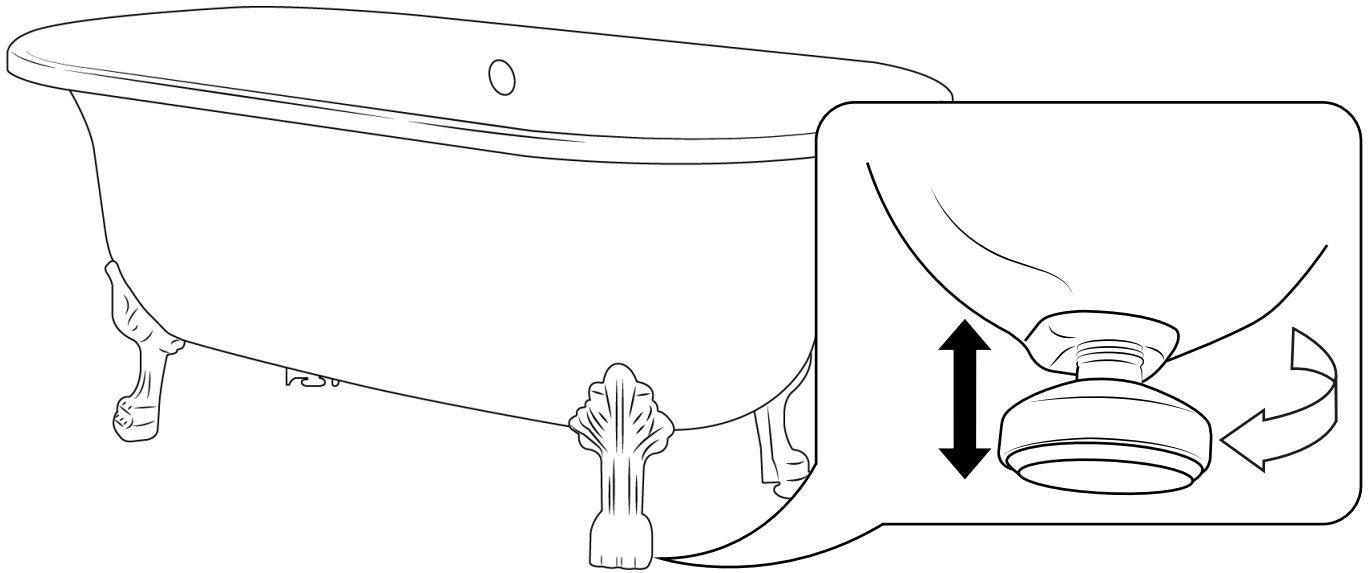

18

