


Milano

Modern 3 Tap Hole Basin Filler




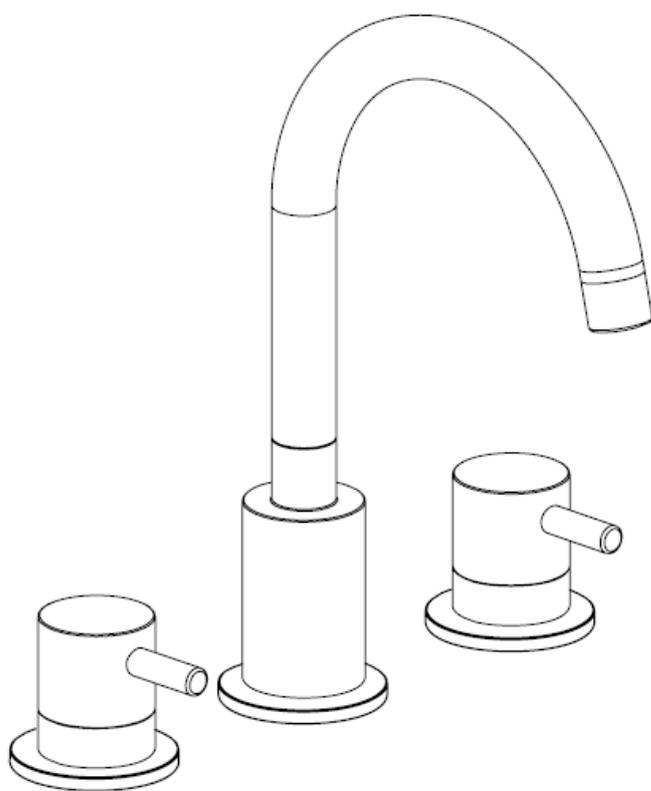


 Style may vary

Installation Guide


Installation

Tools required for installing:

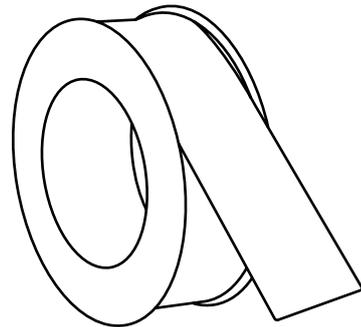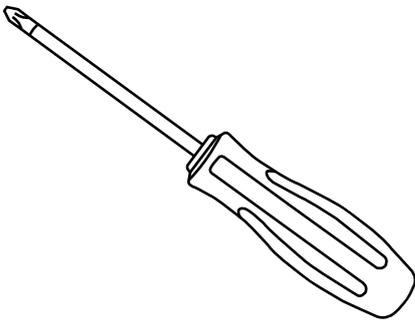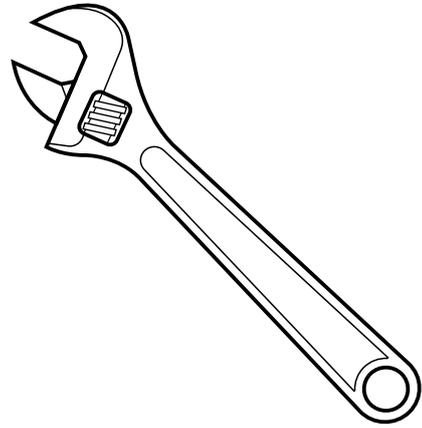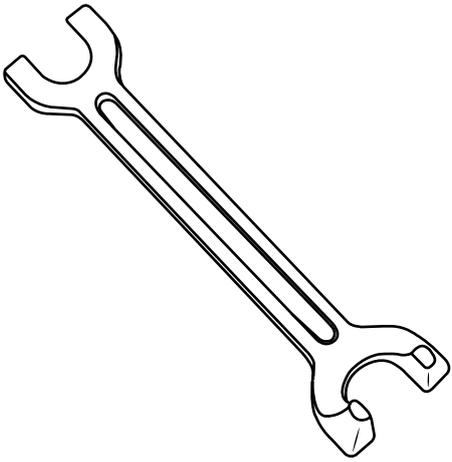


Installation


Parts included:

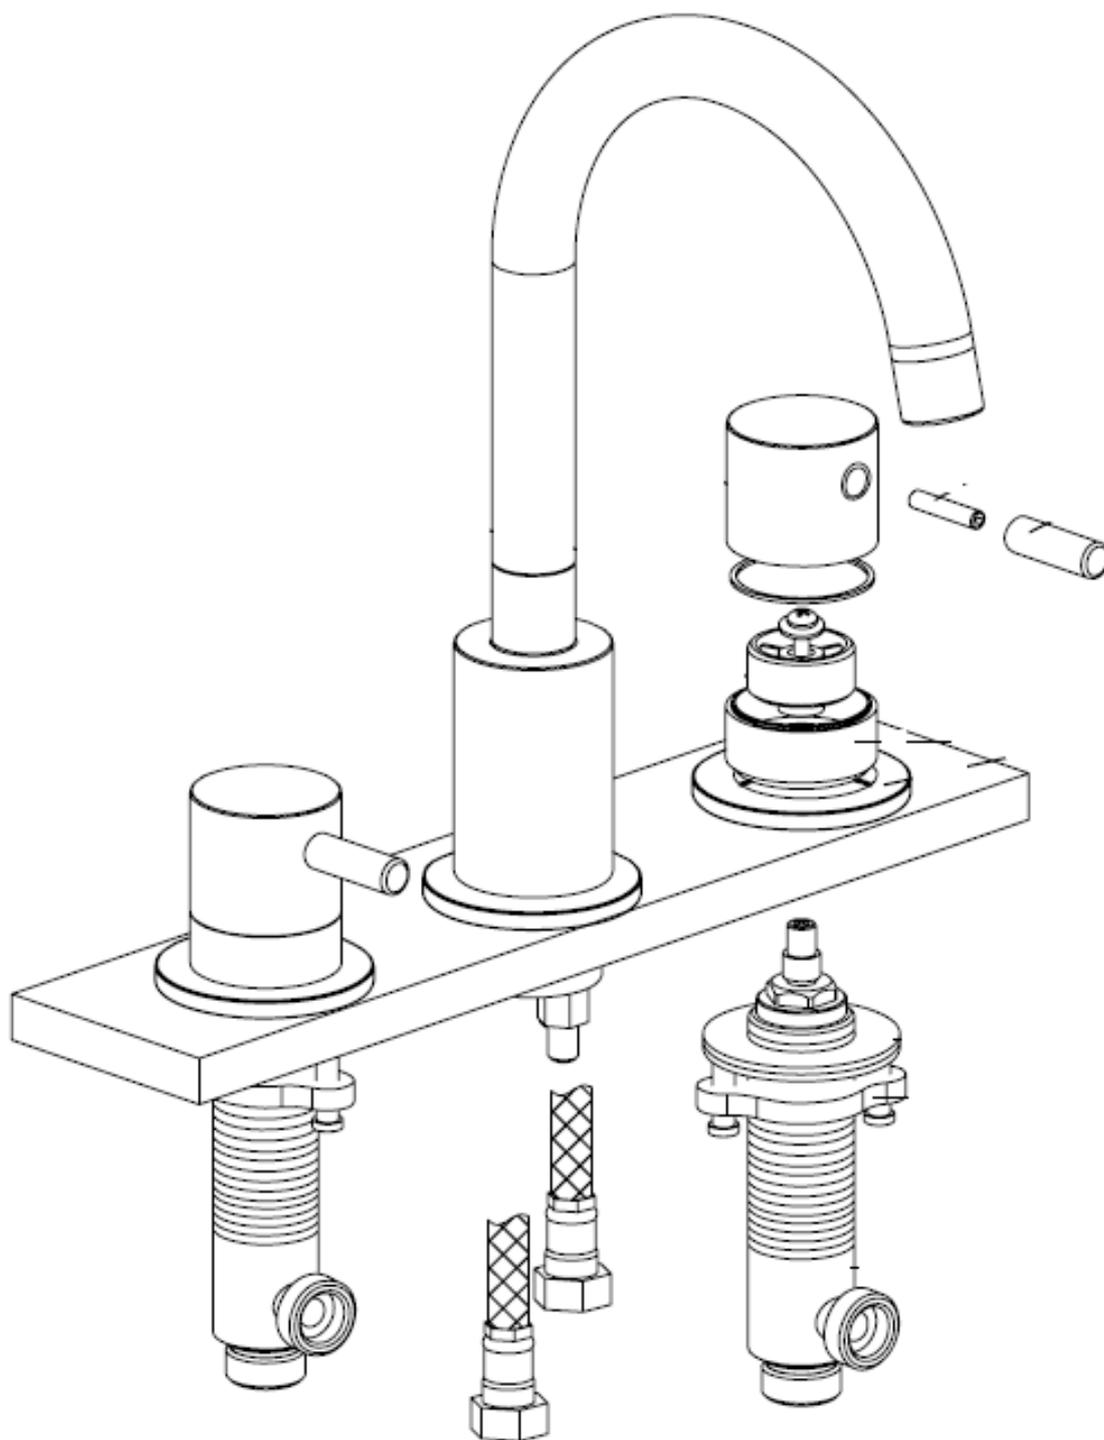


1

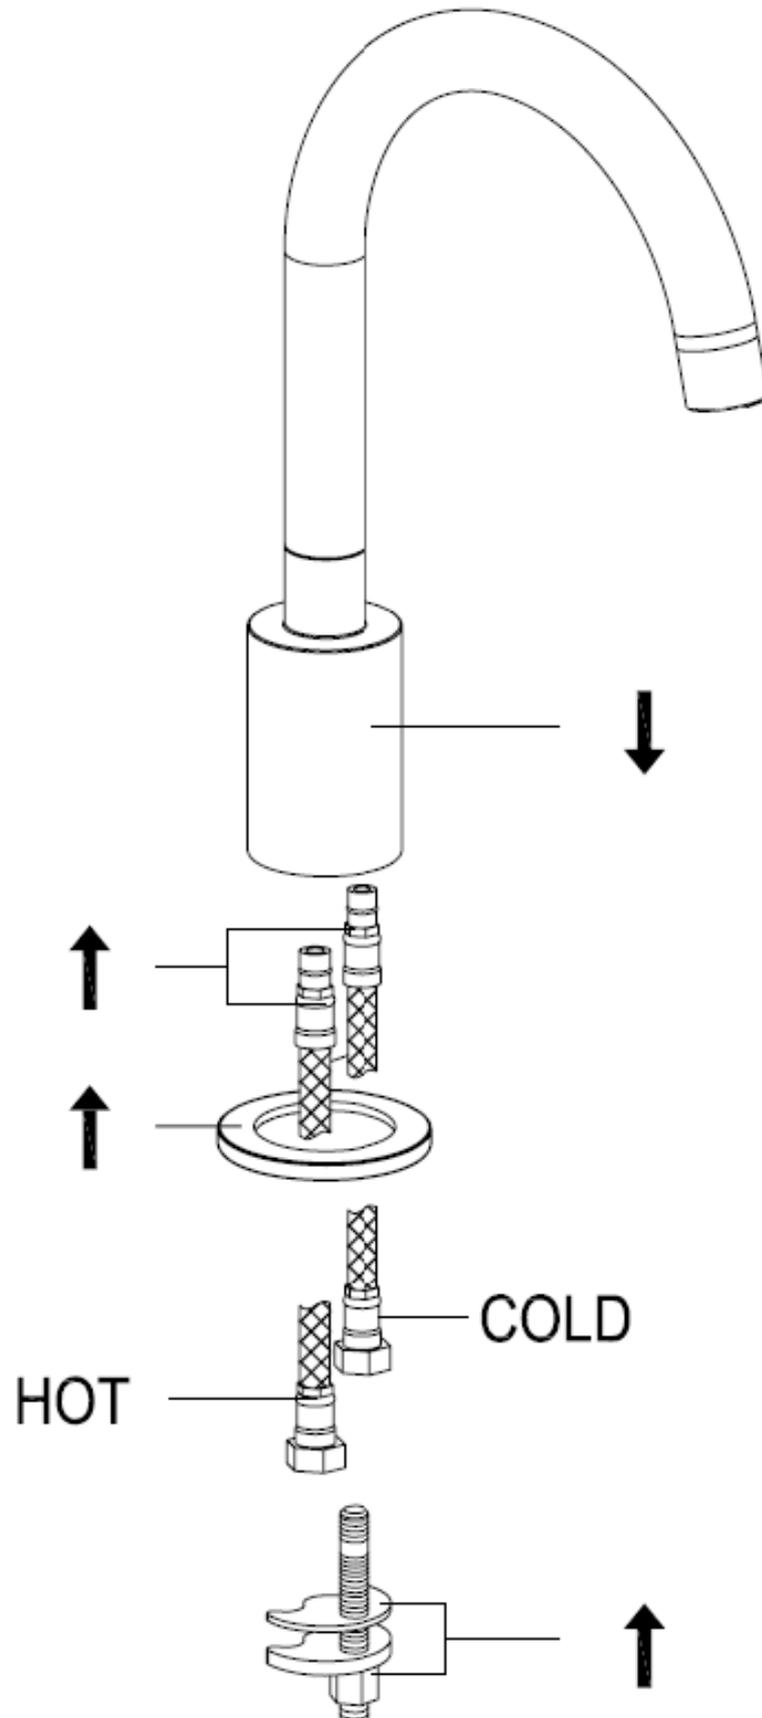


Remember to install the 'O' ring or washer between the mixer body & sanitary ware

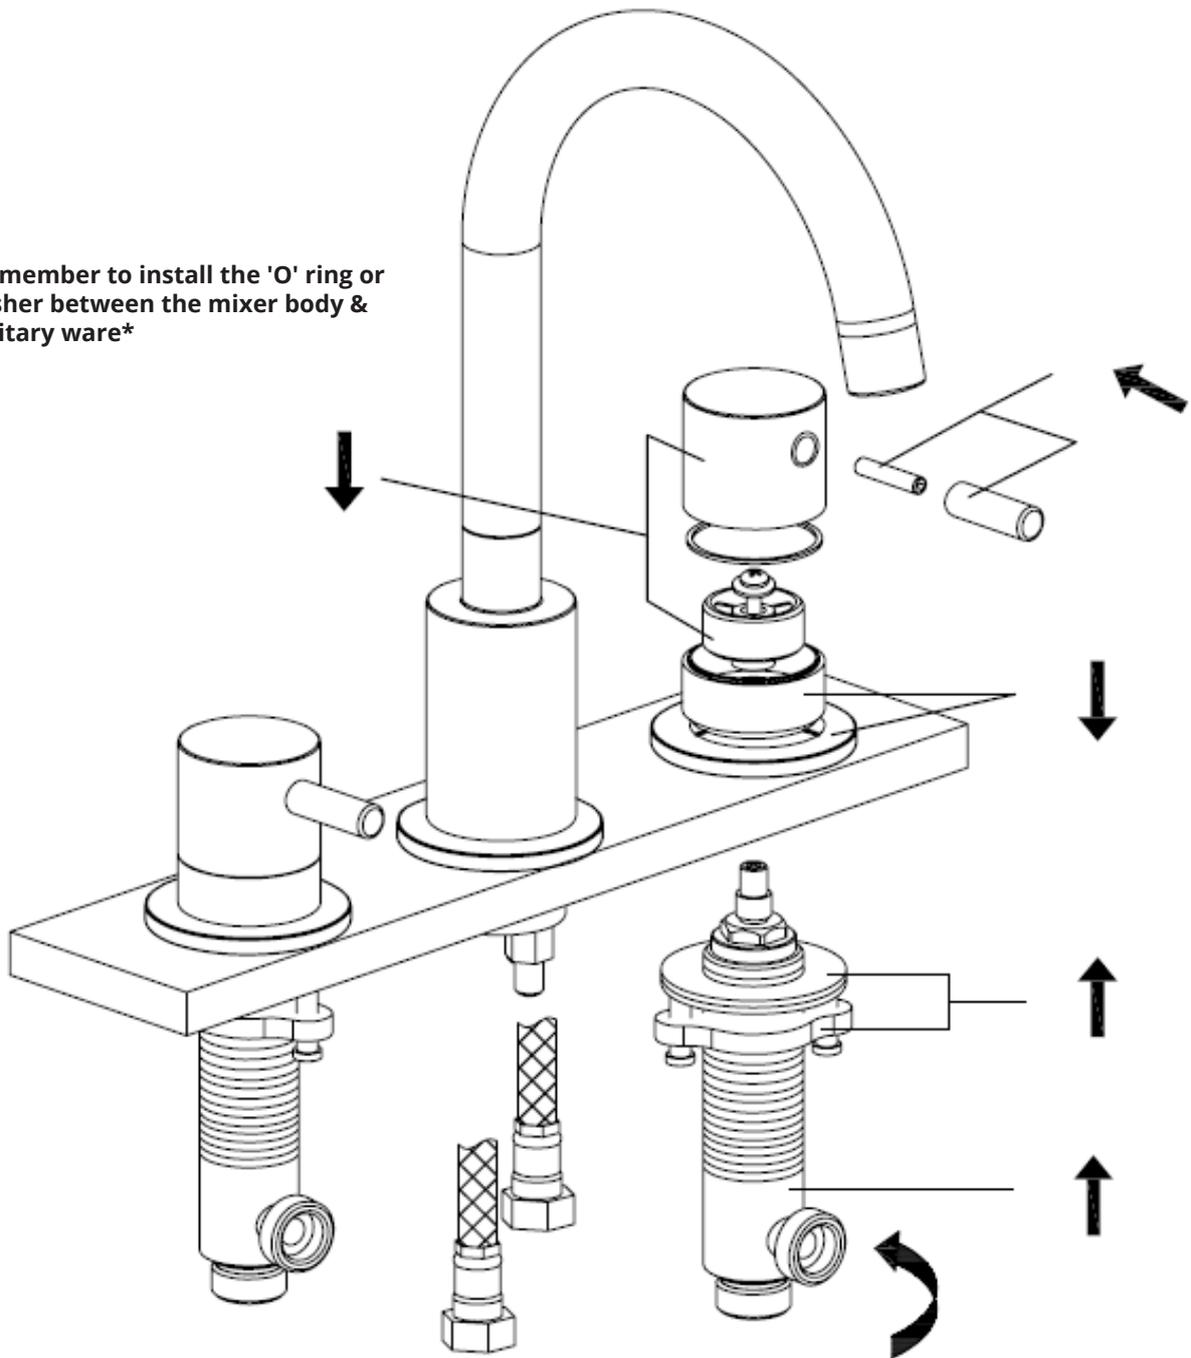

3

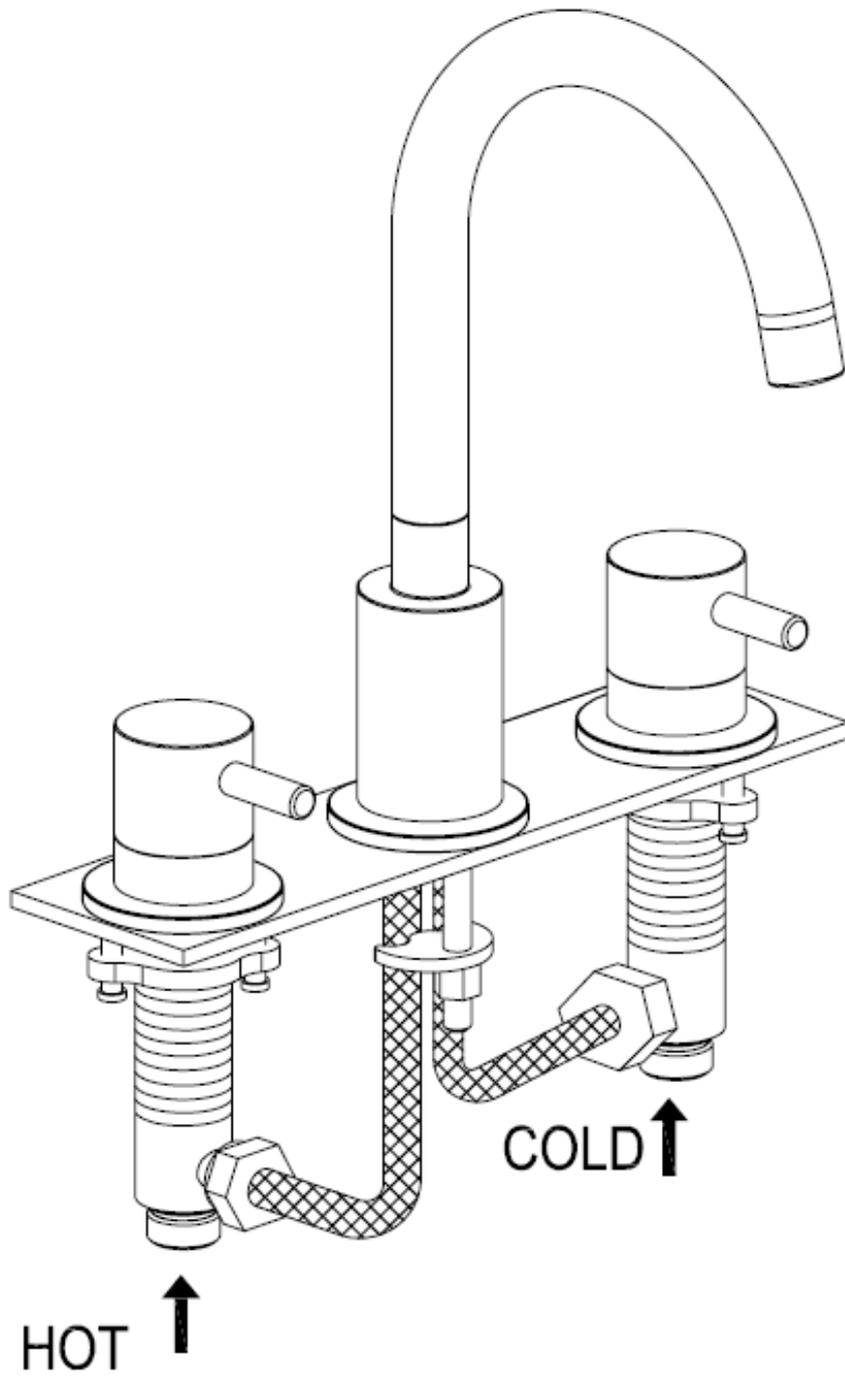

4

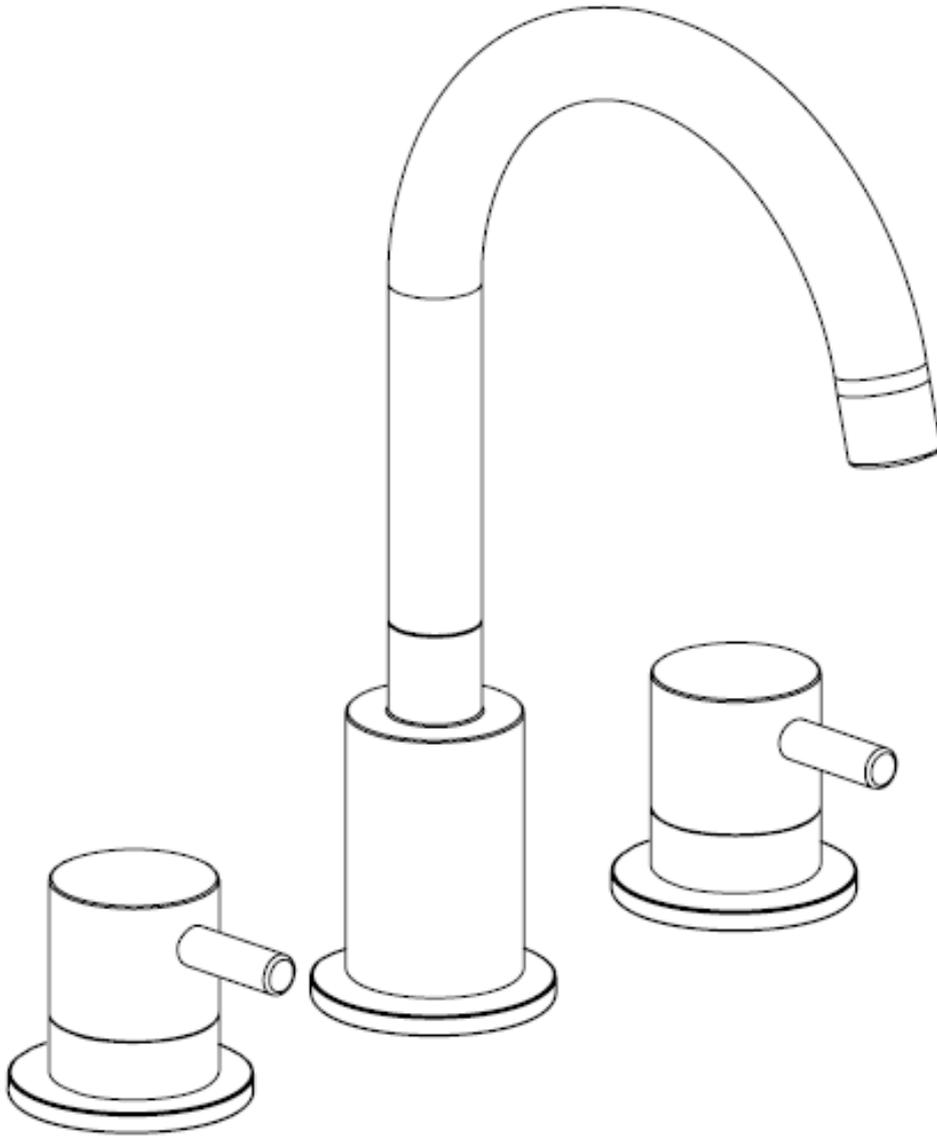

 Style may vary