




Milano

Overflow Bath Filler


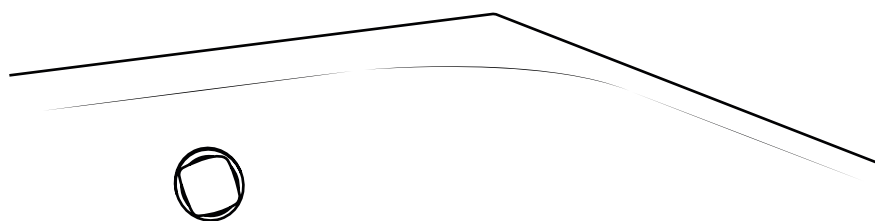


 Style may vary










Installation Guide

Installation


Tools required for installing:

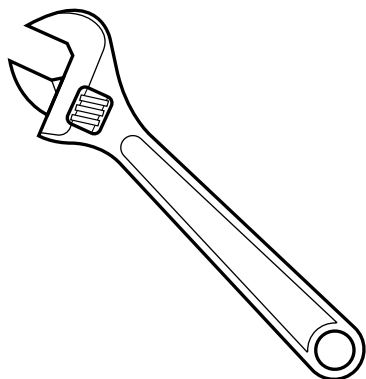


Parts included:

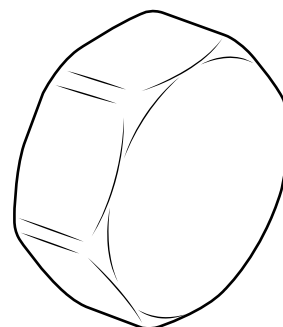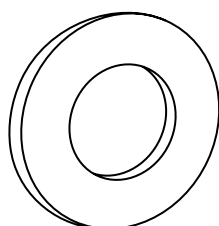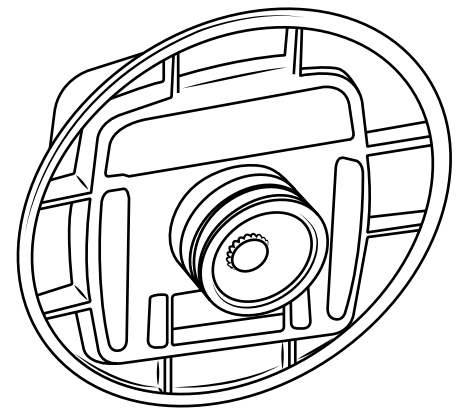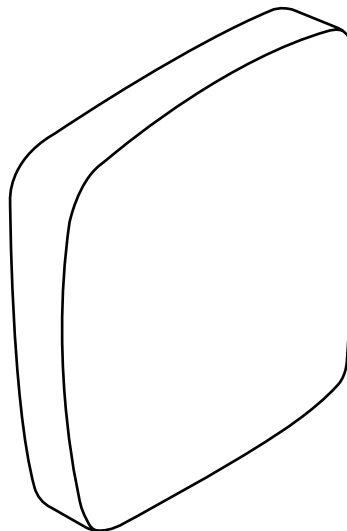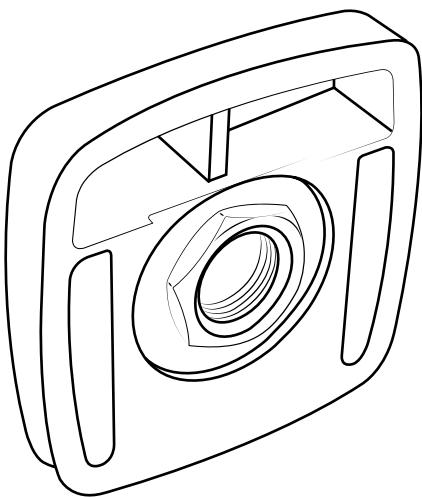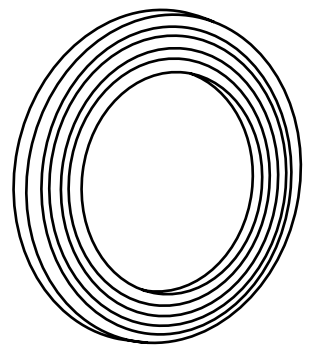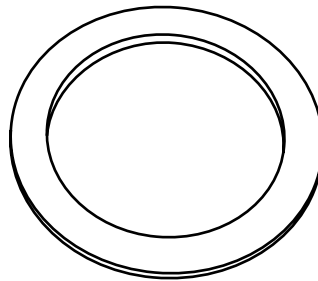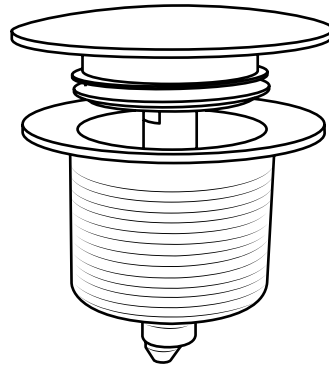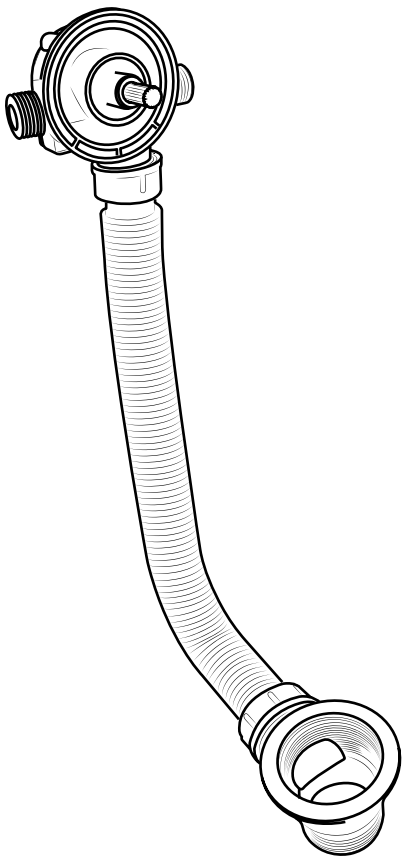


1

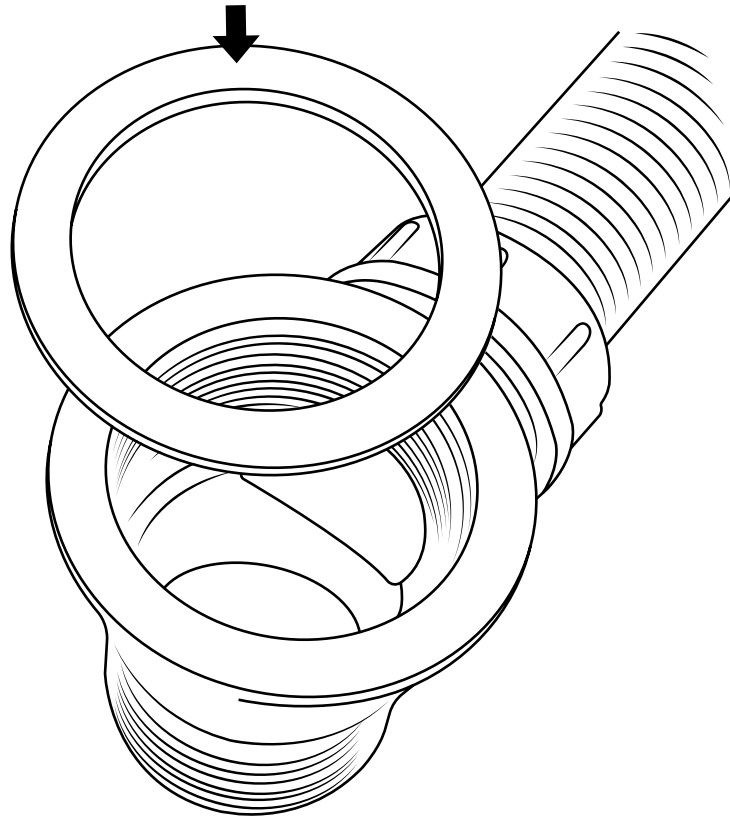


2

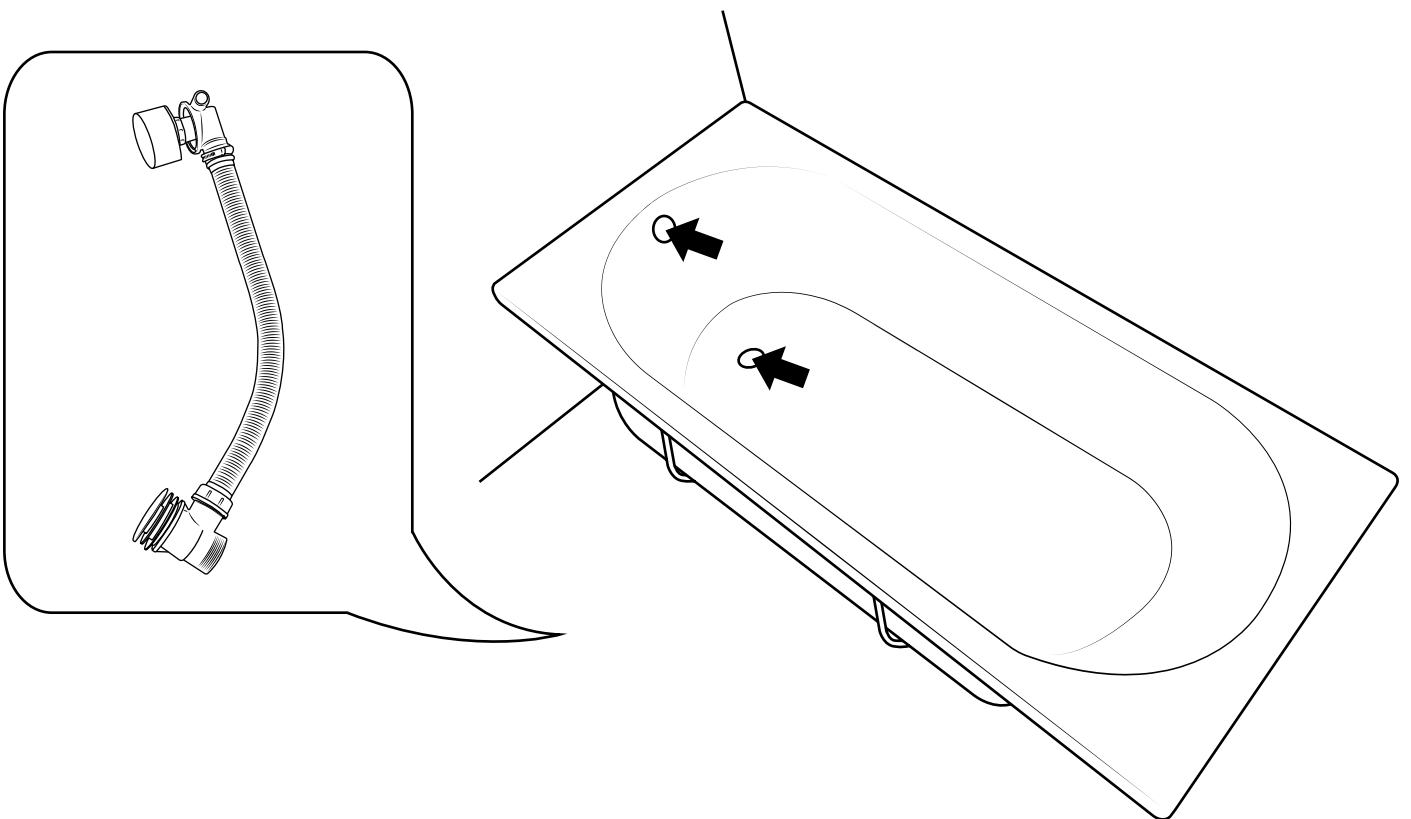



3

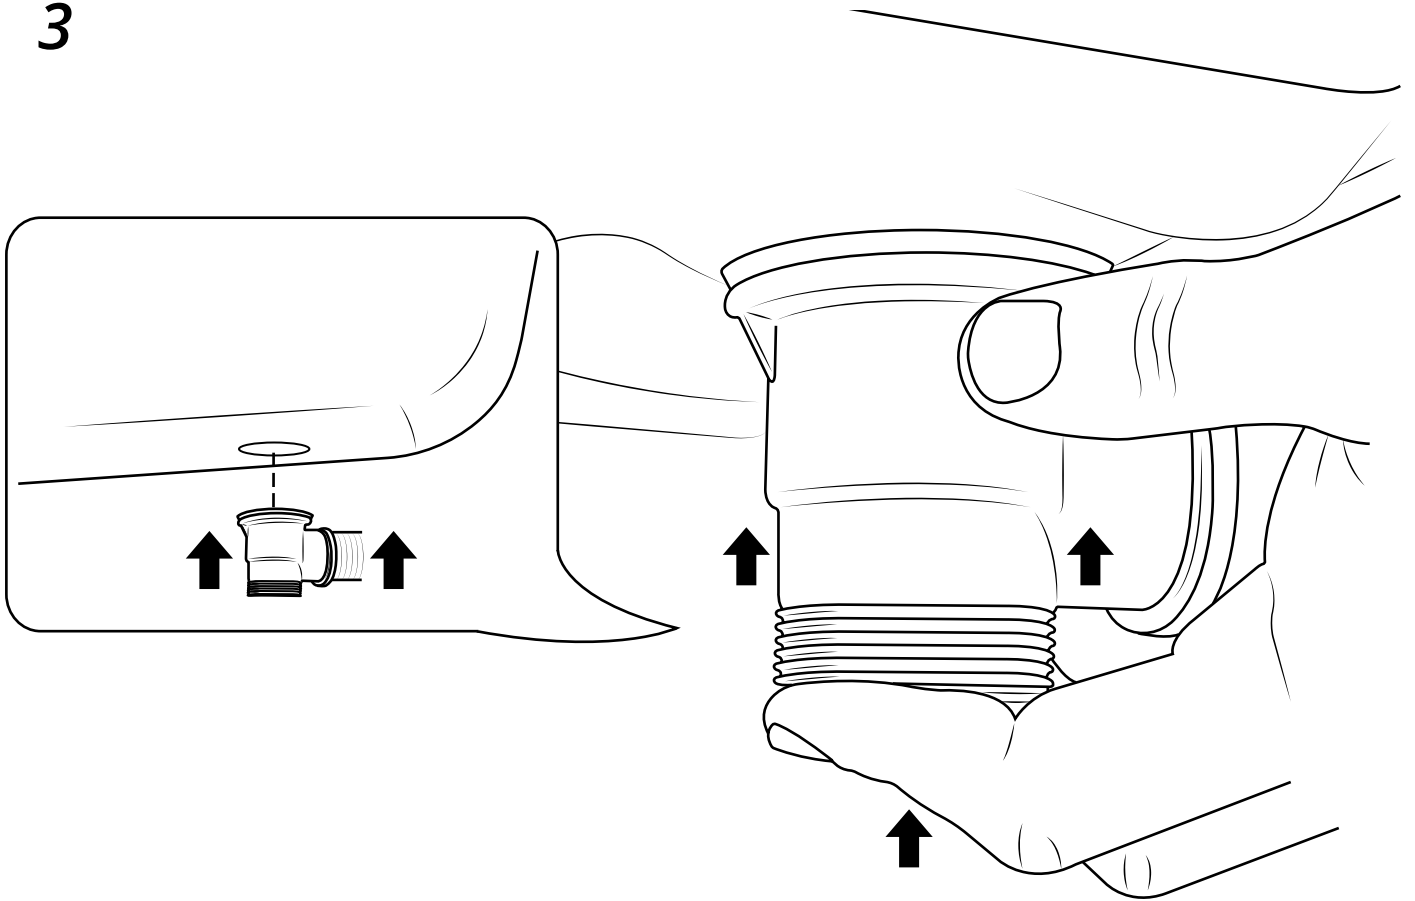



4

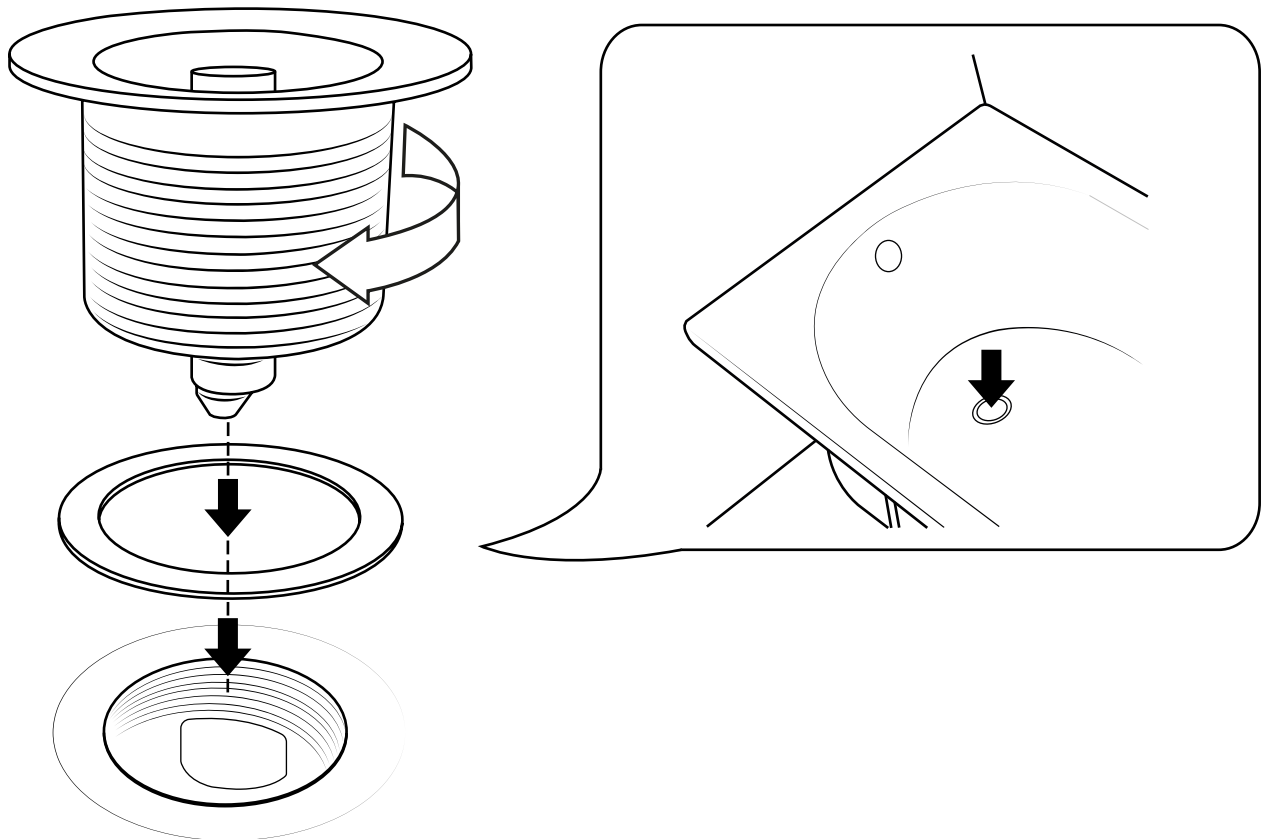


5

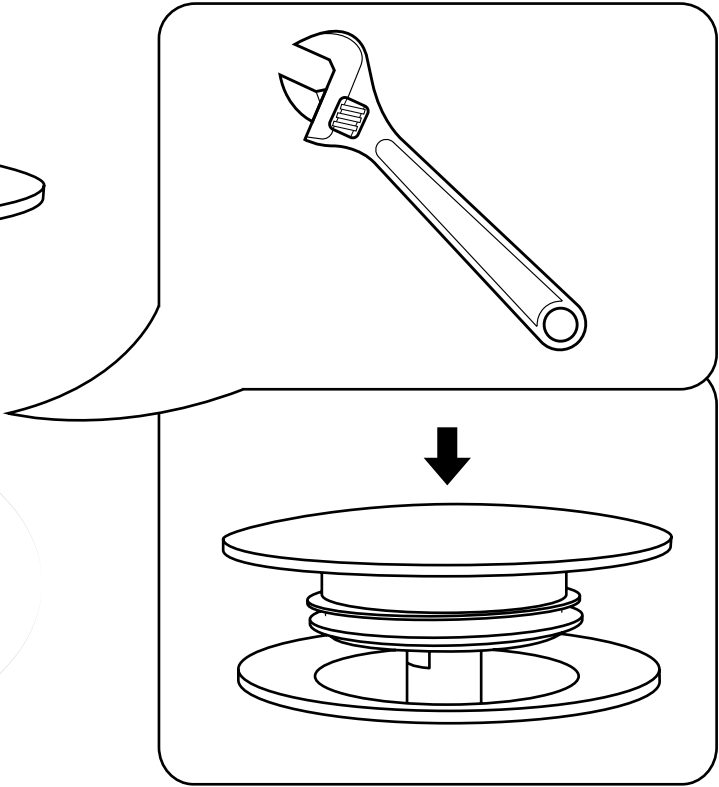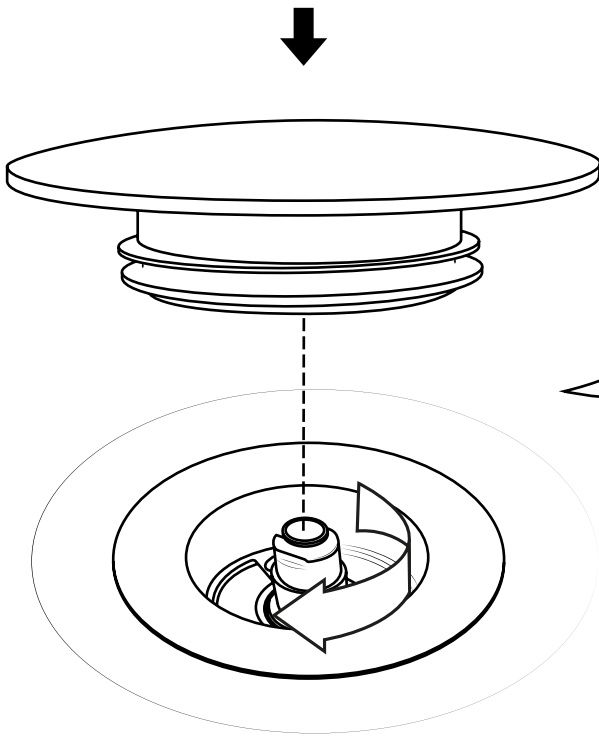


6

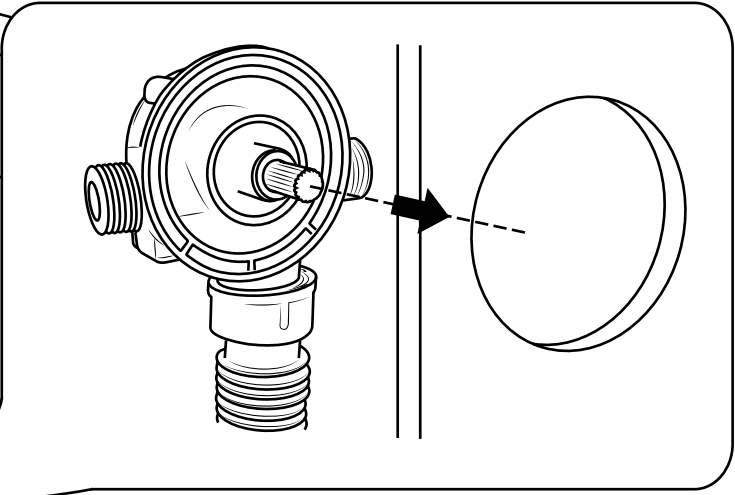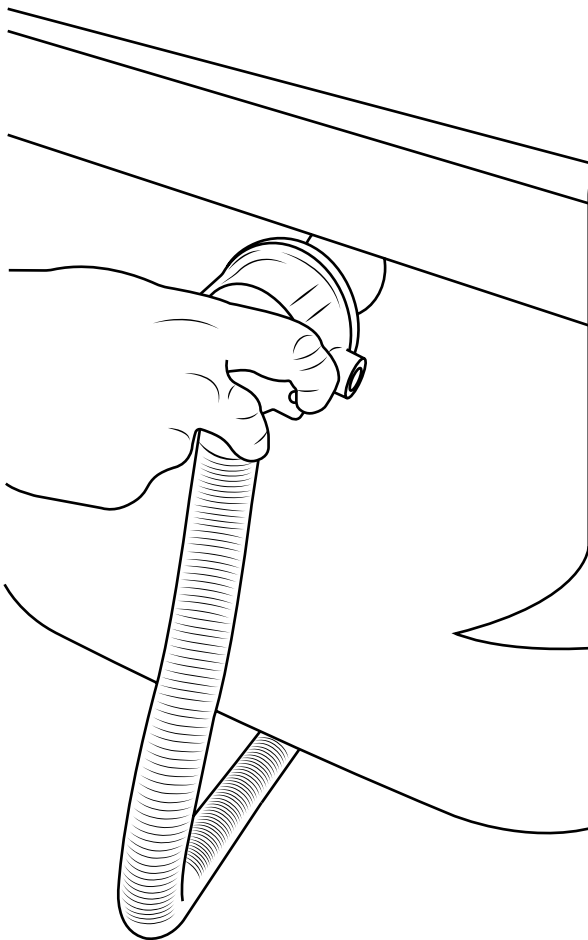


7

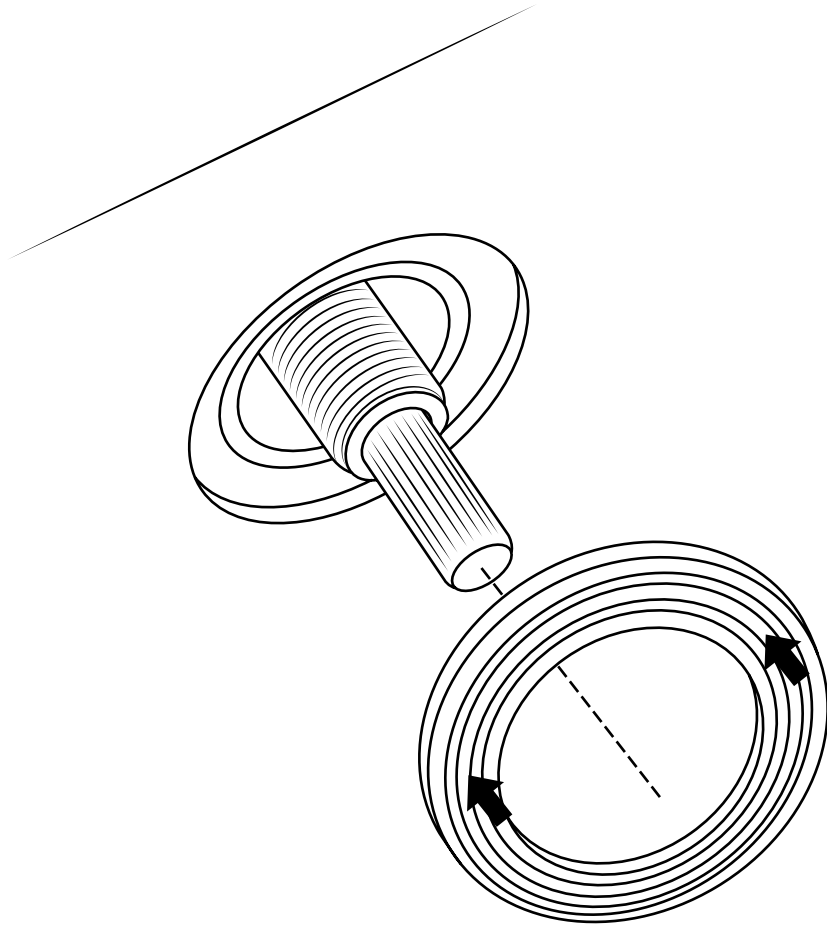


8

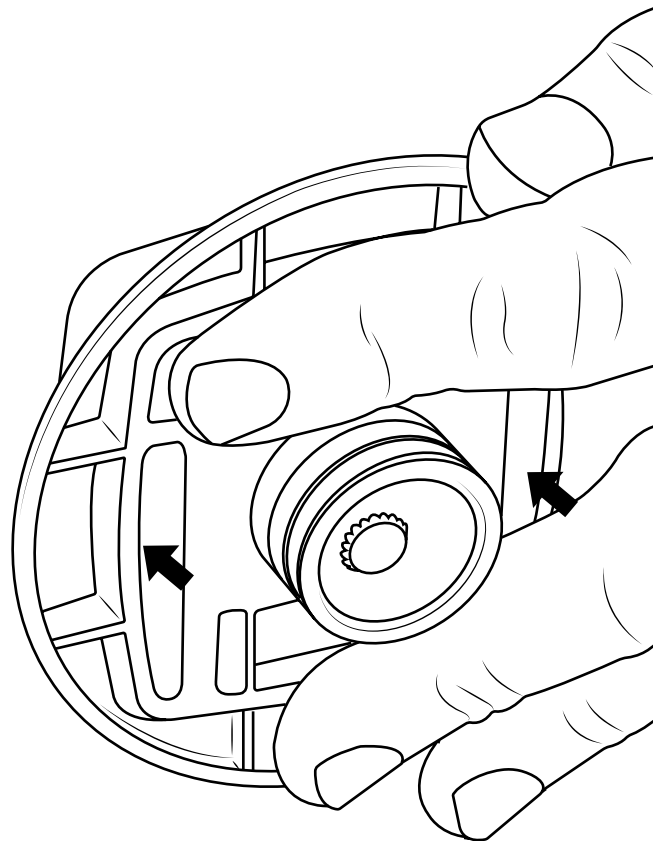

9

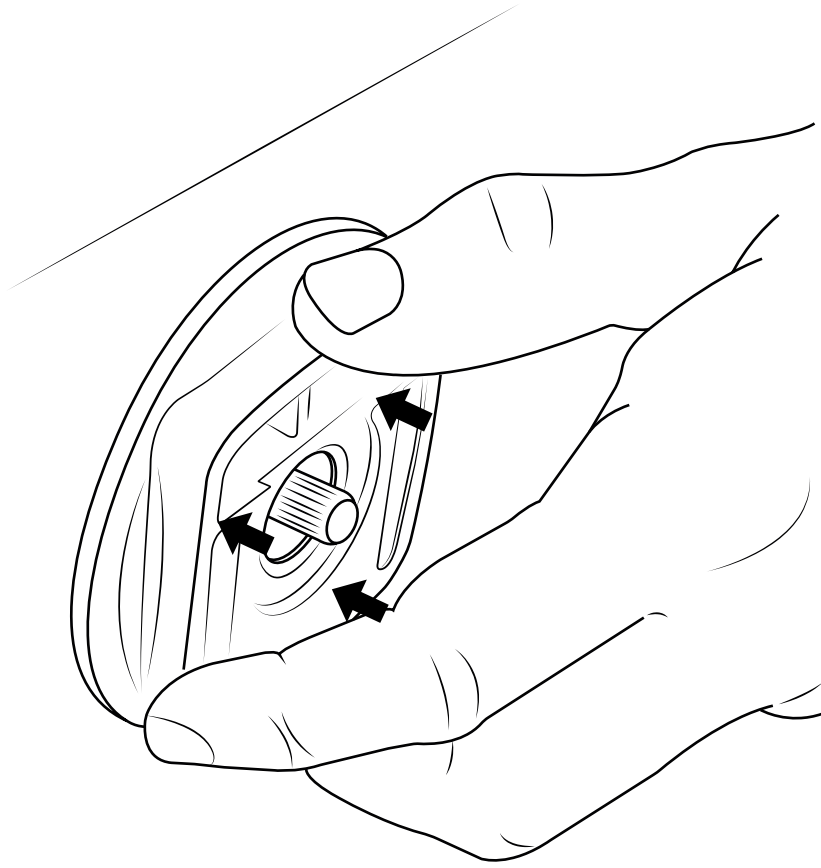


10

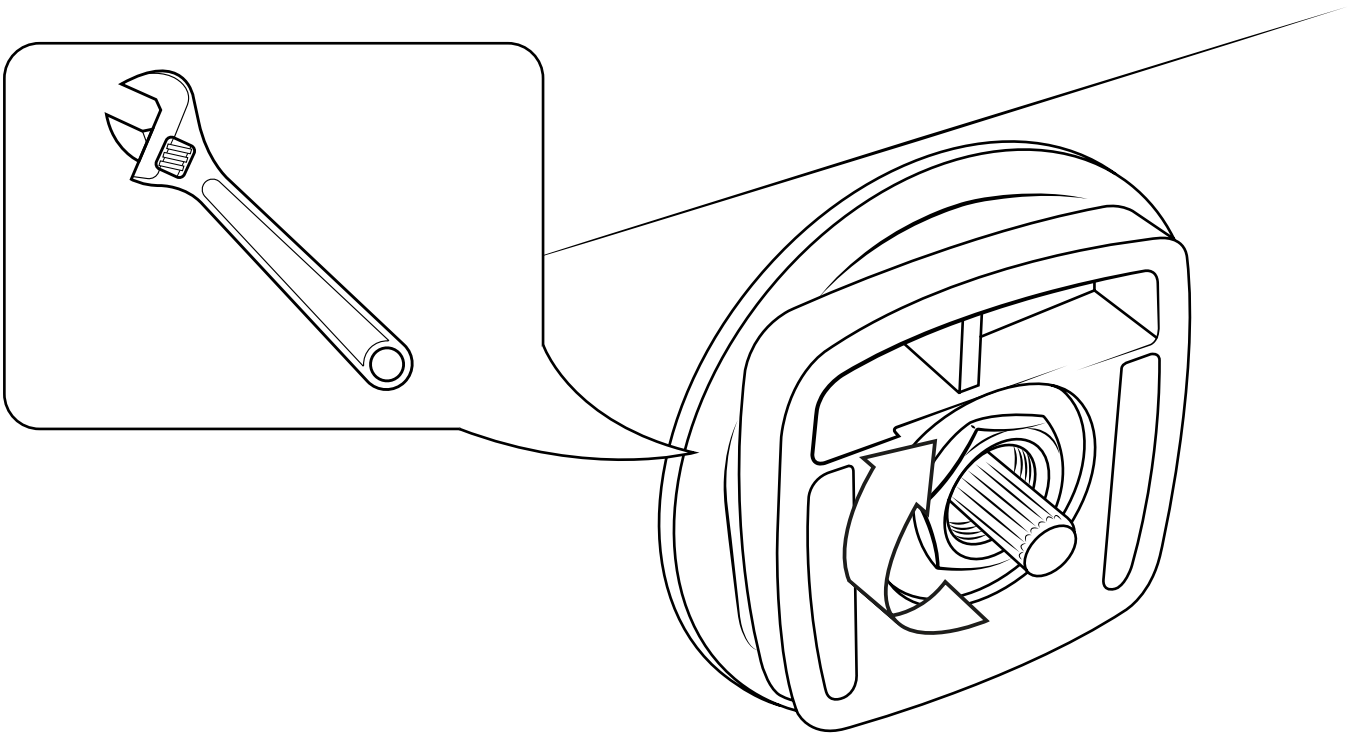


11

i Option 1

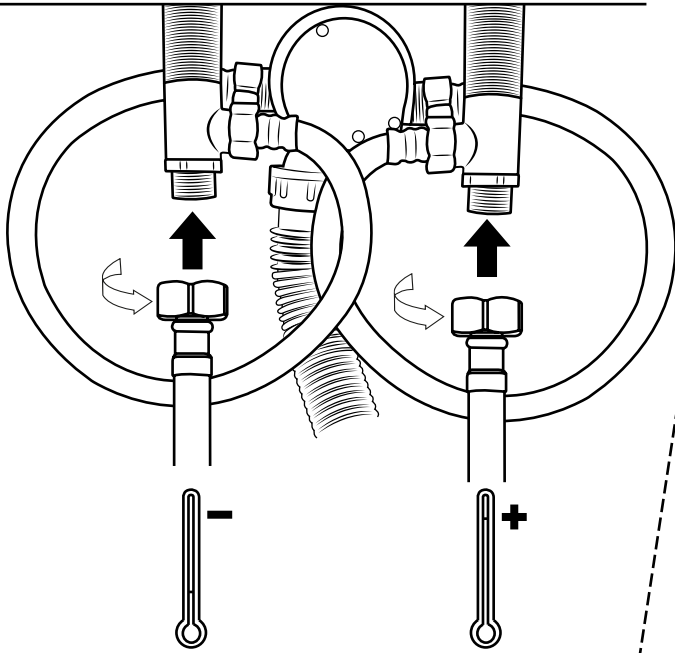


i Option 2

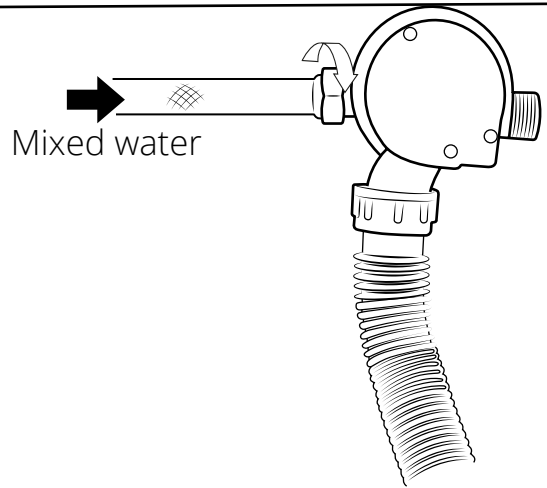


12


i Option 2 continued

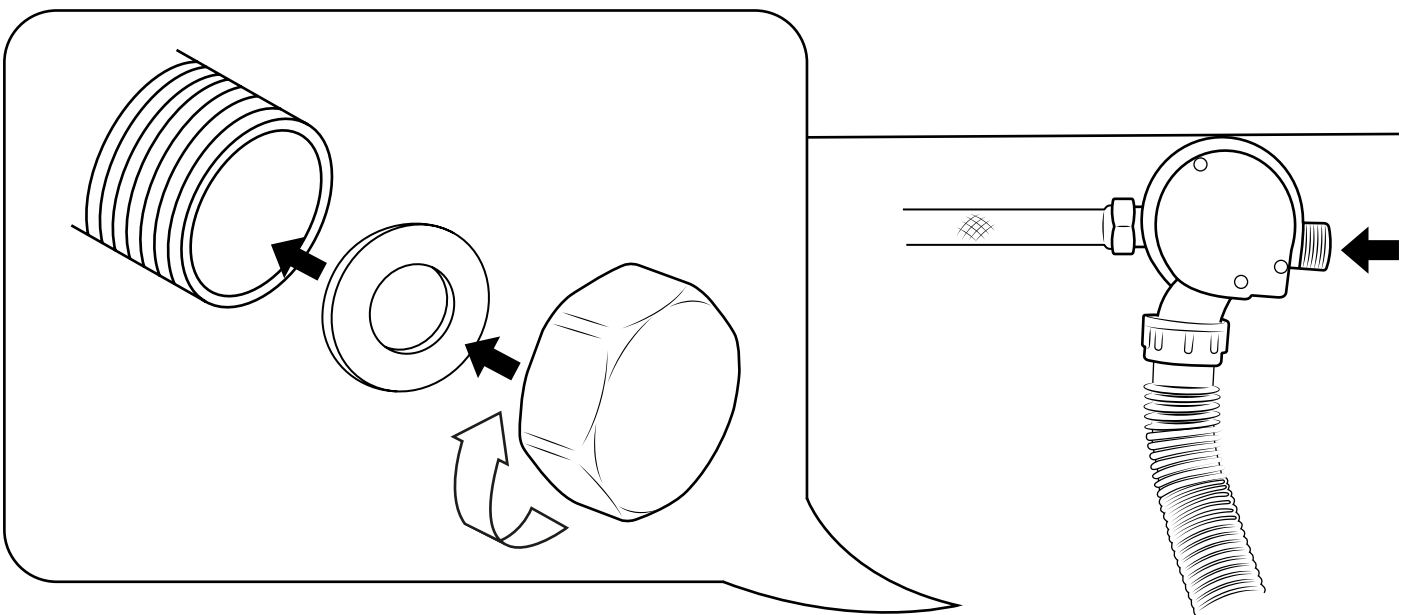


13

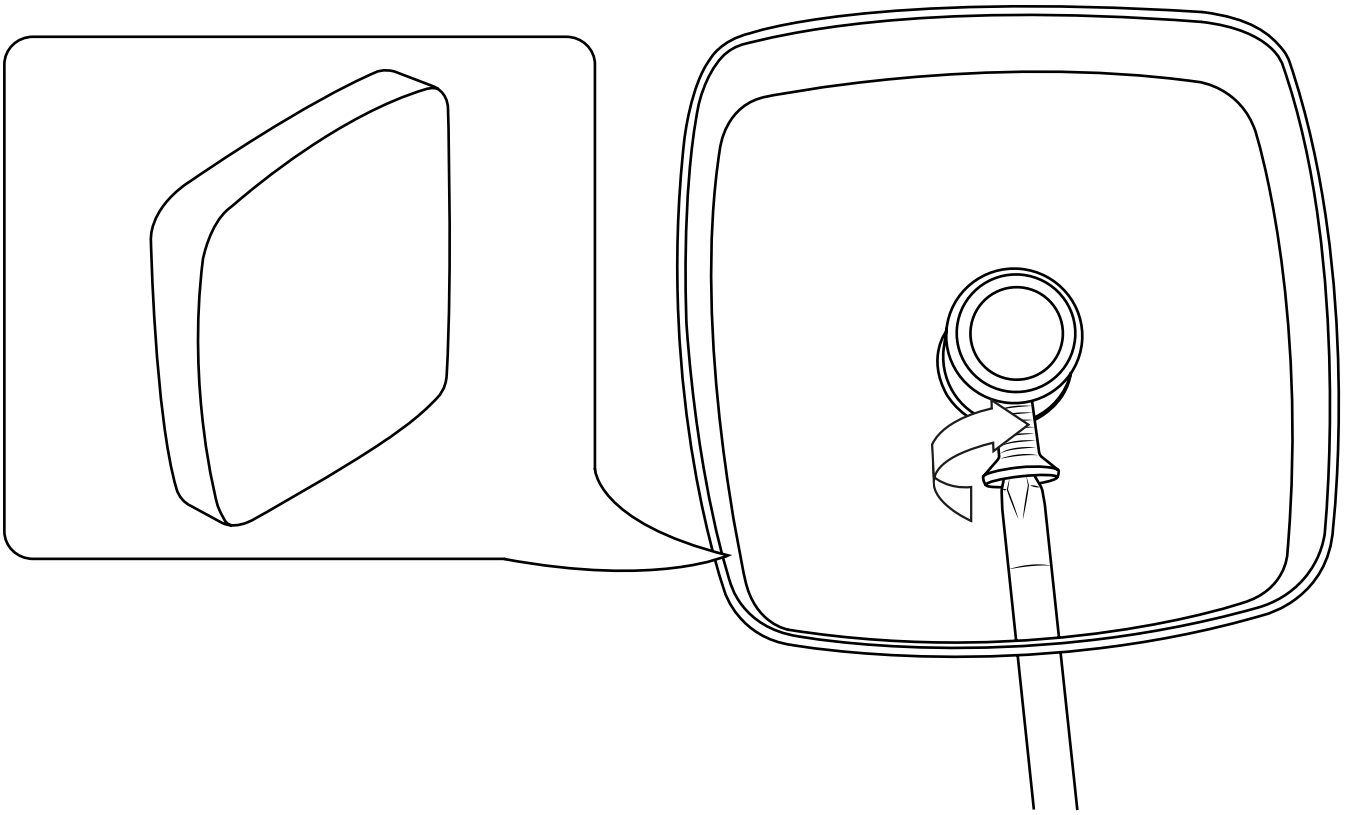

14

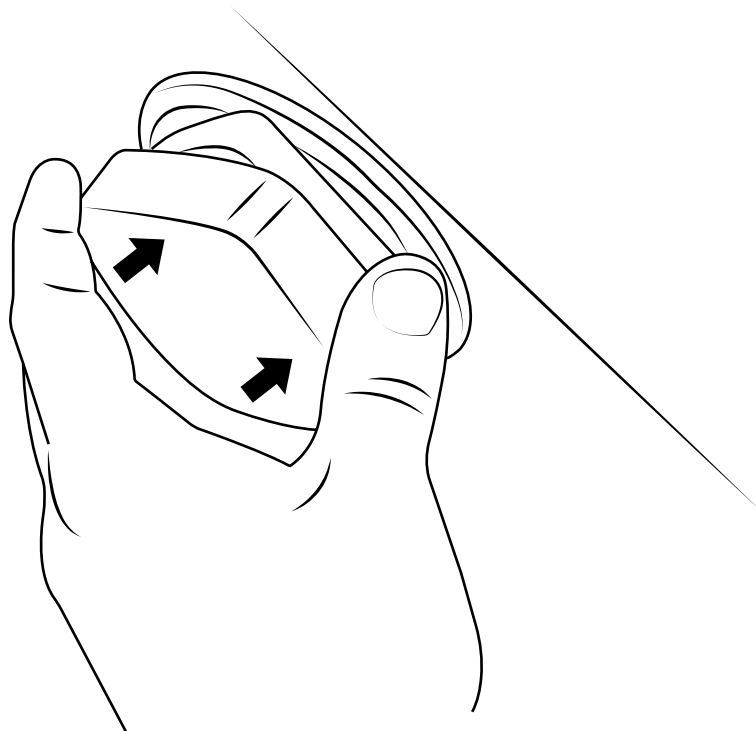

15

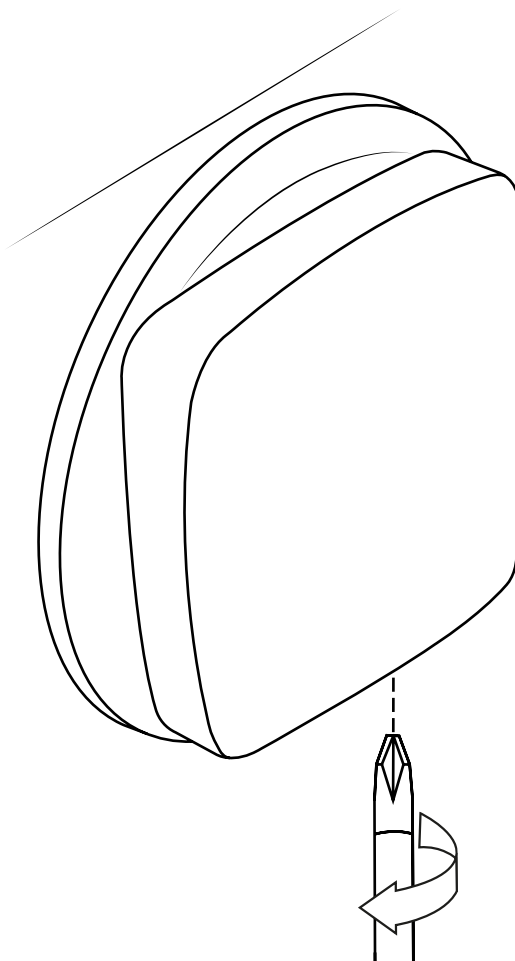

16

