


# Milano

Traditional 3 Tap Hole Basin Filler




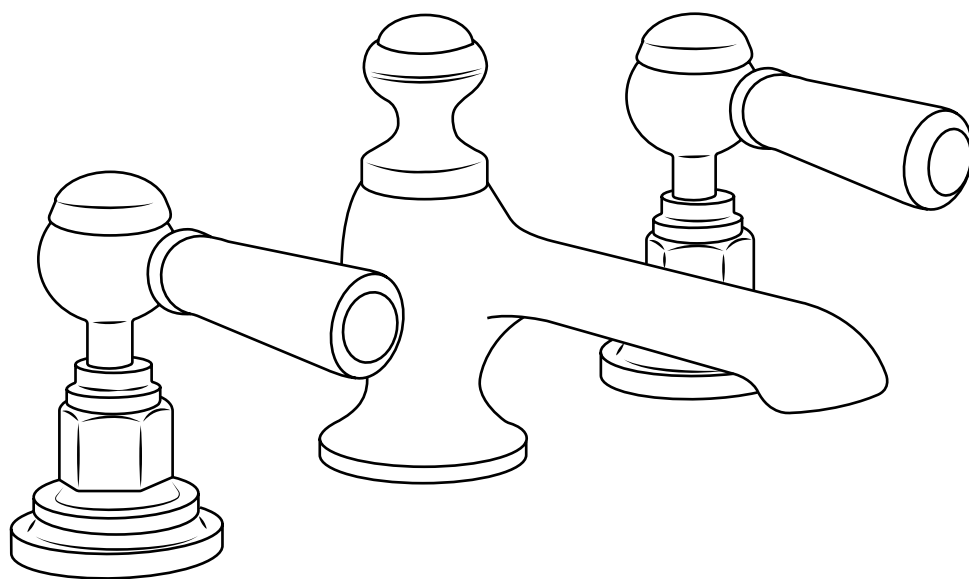


Installation Guide

# Installation


---

*Tools required for installing:*

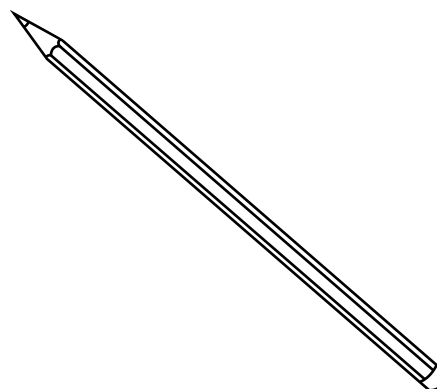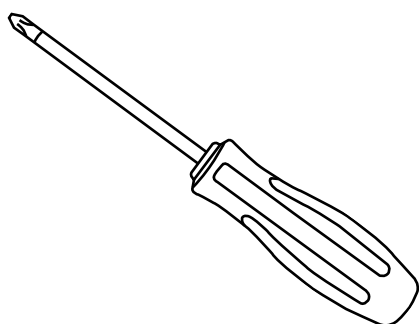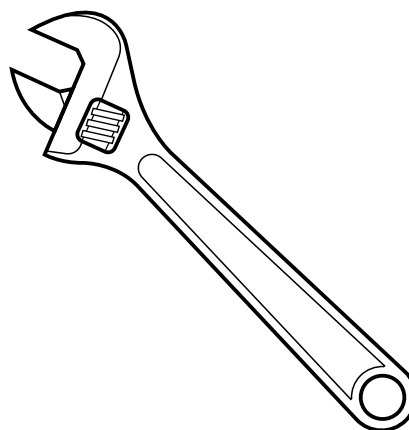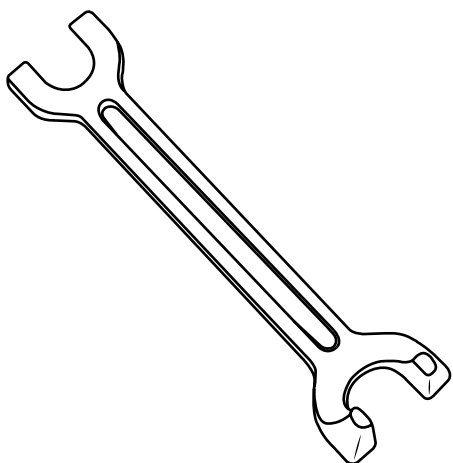


# Installation


## Parts included:

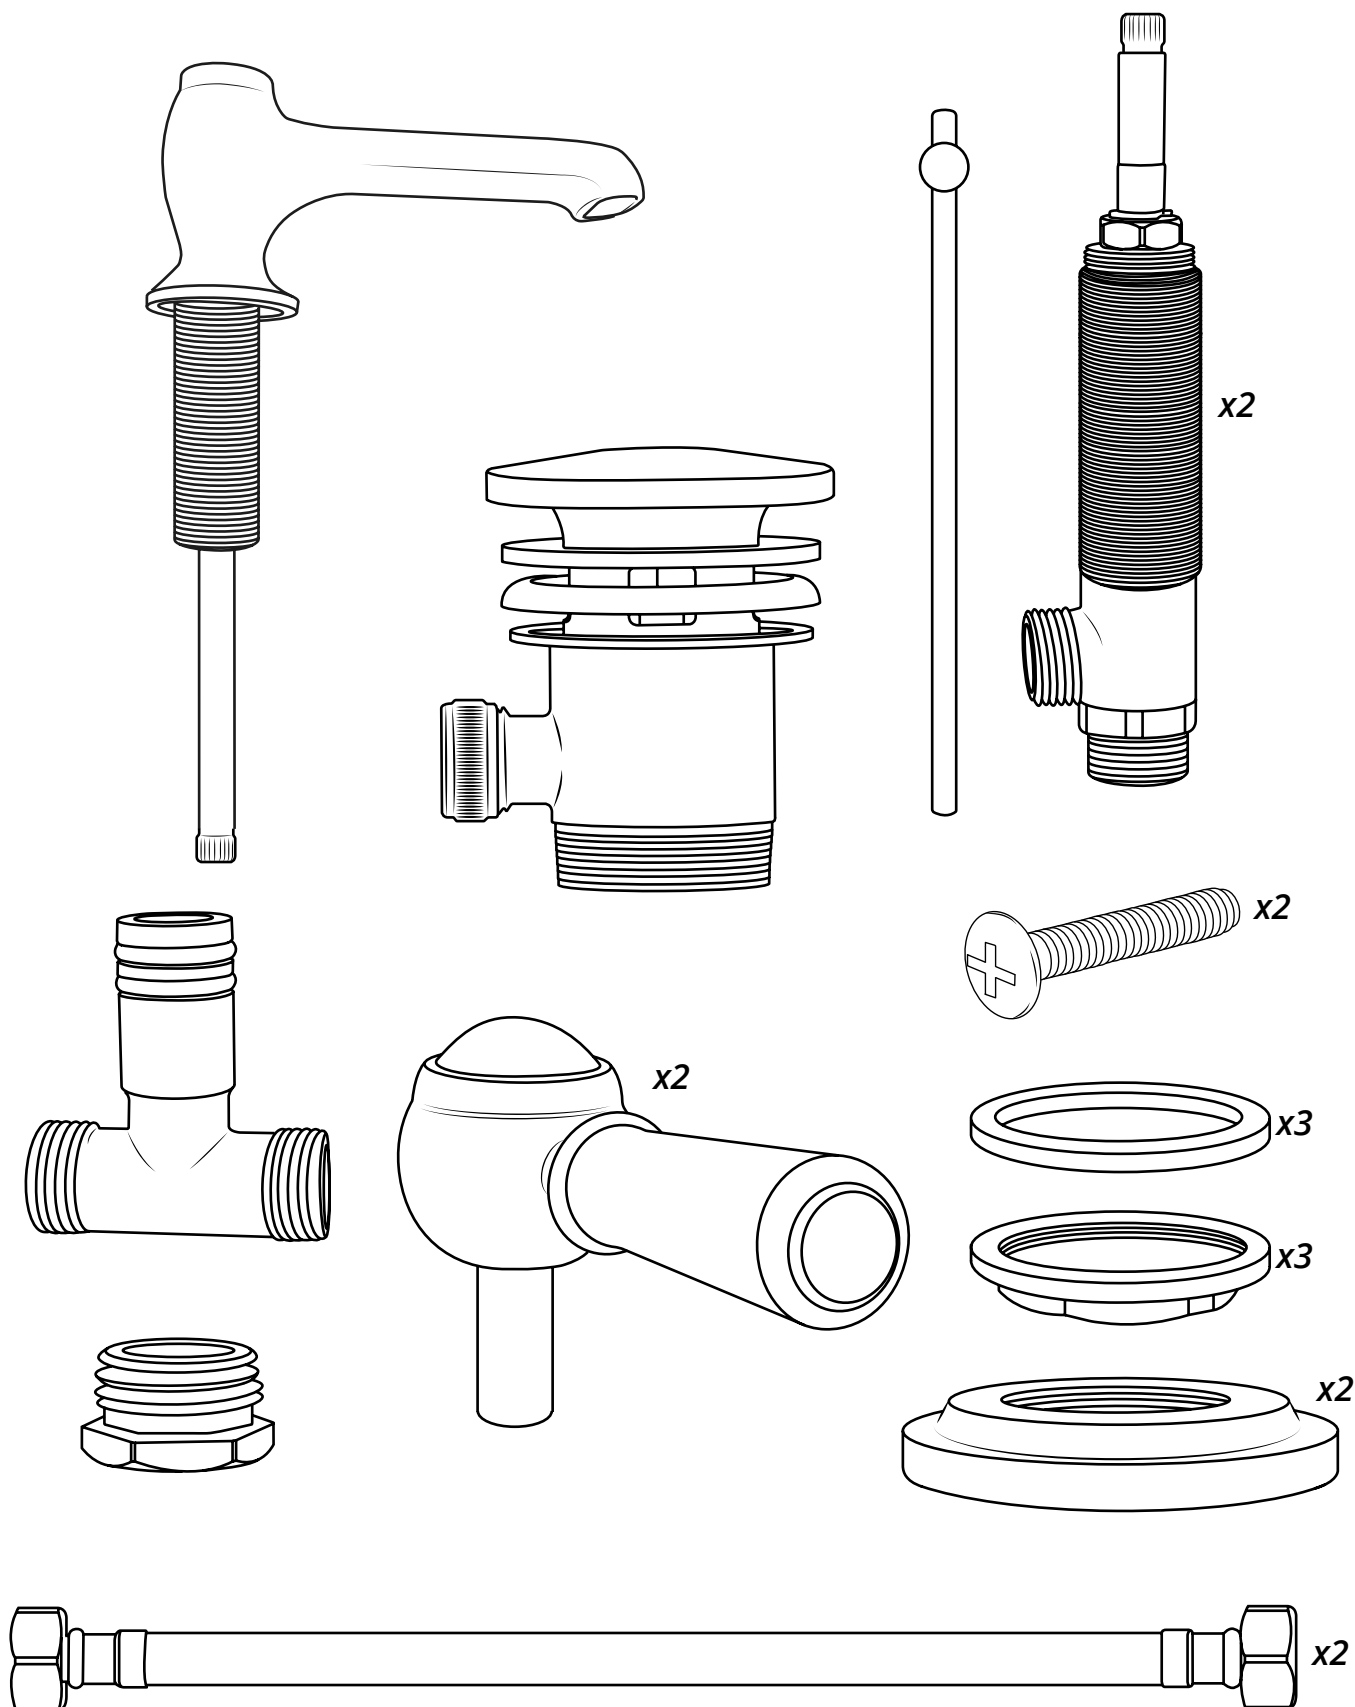


1

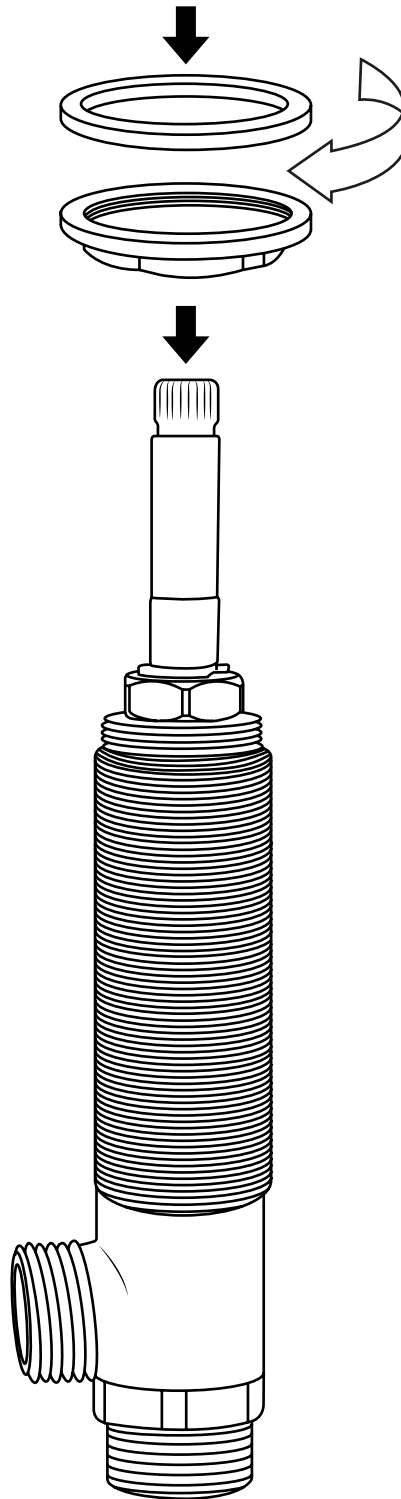


2

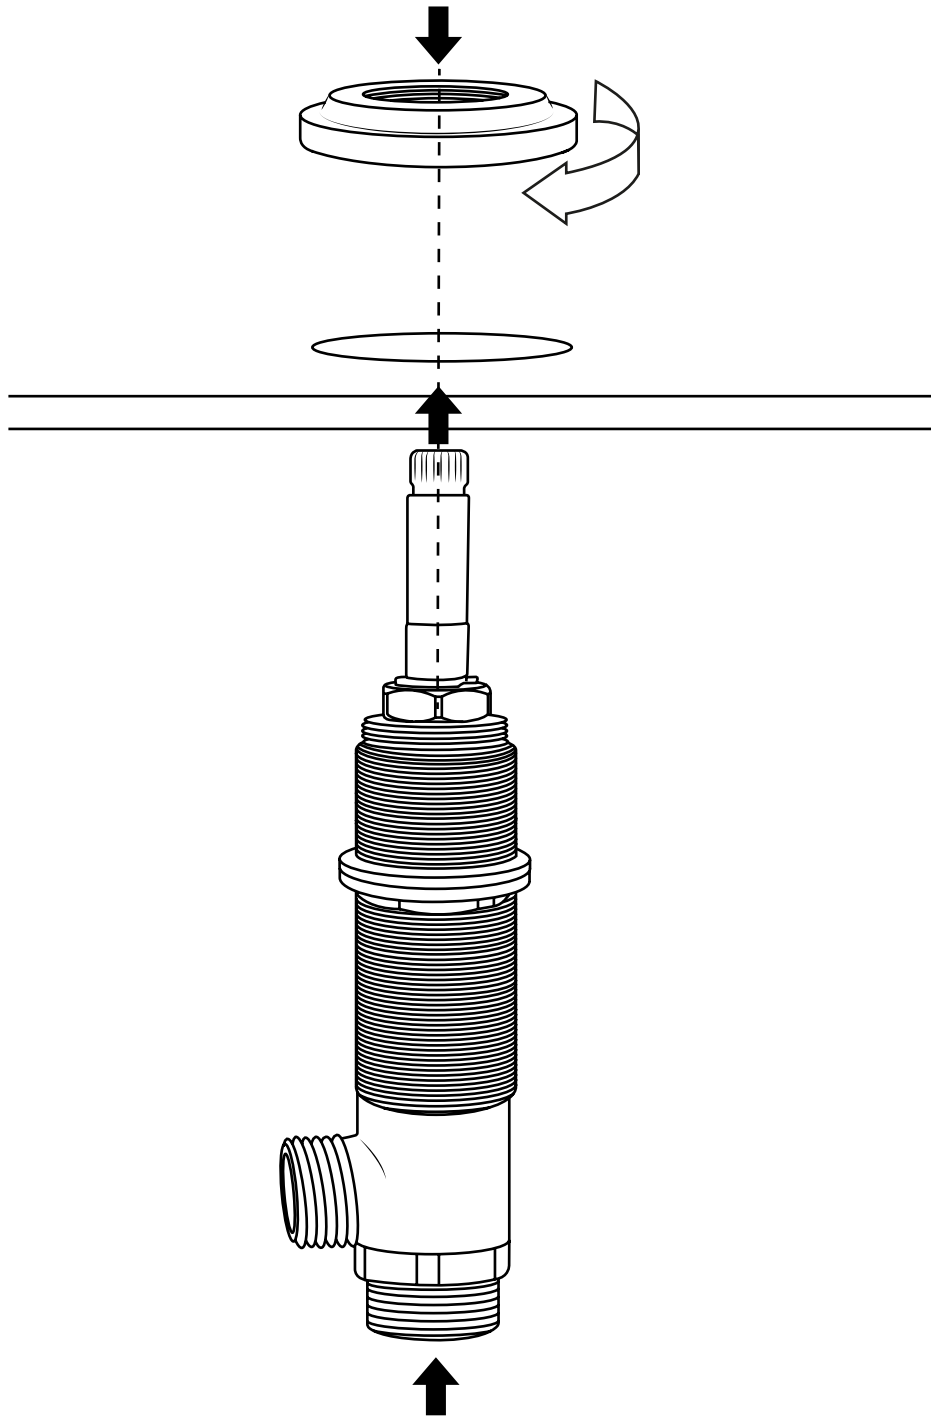


5

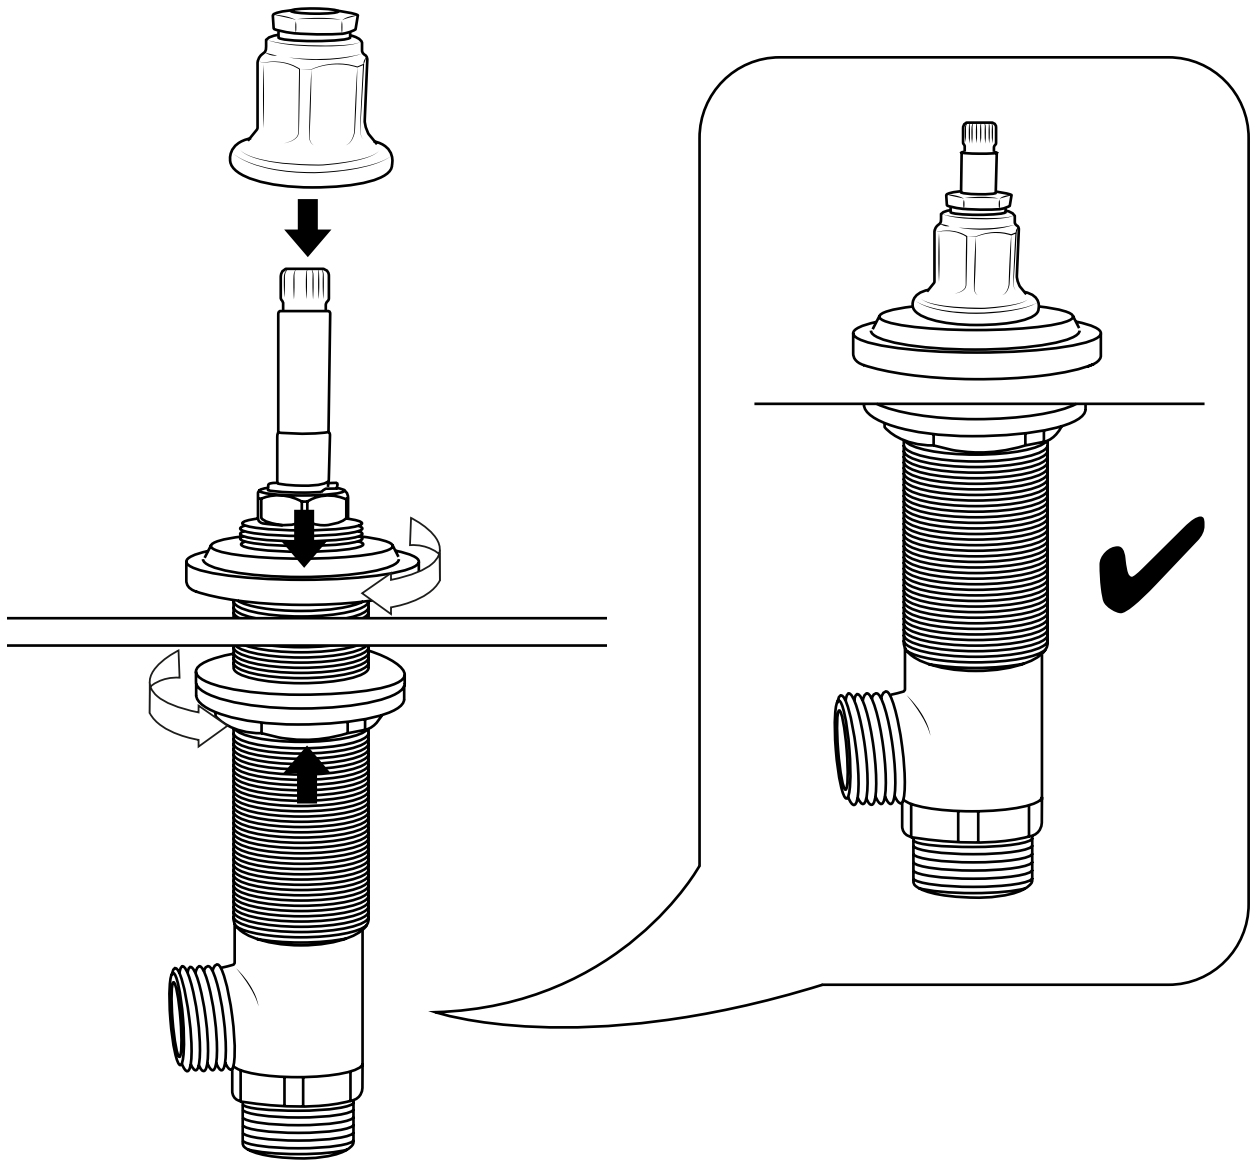



6

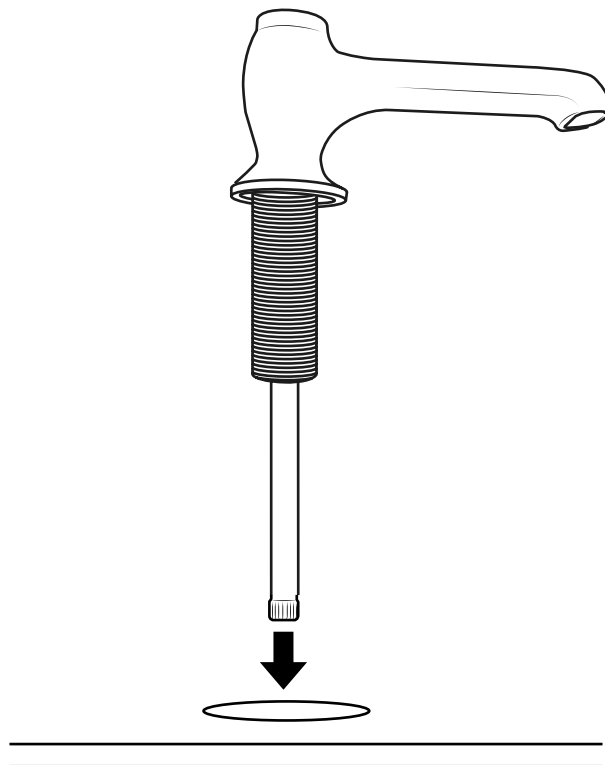



7

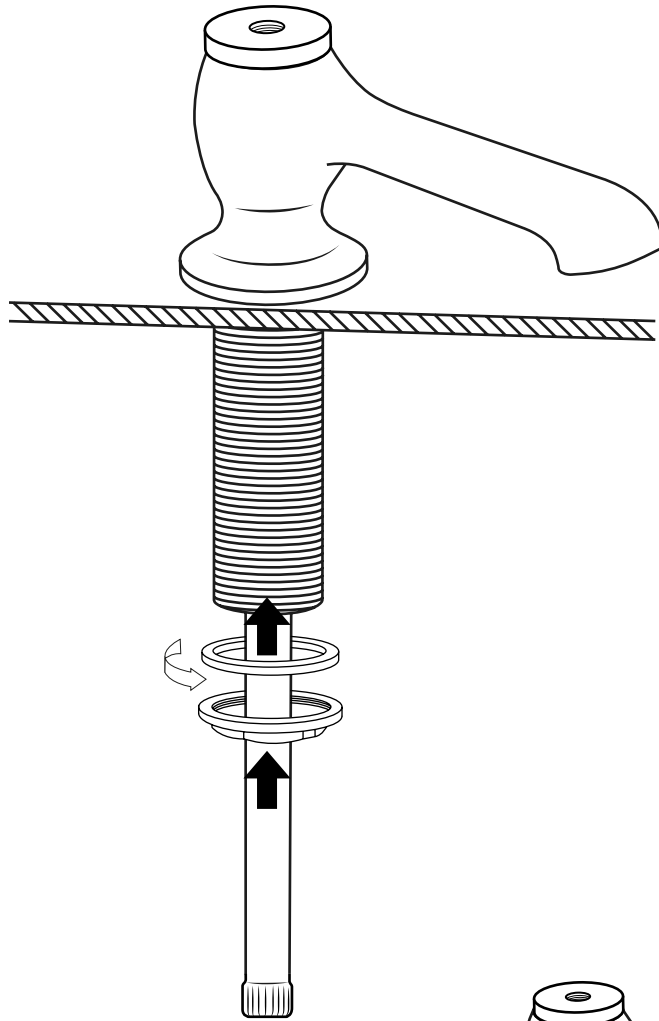



8

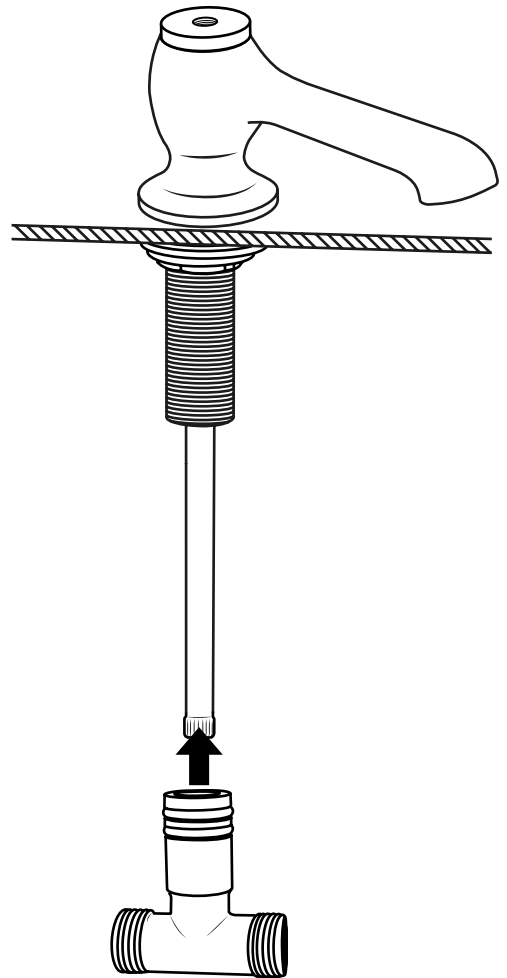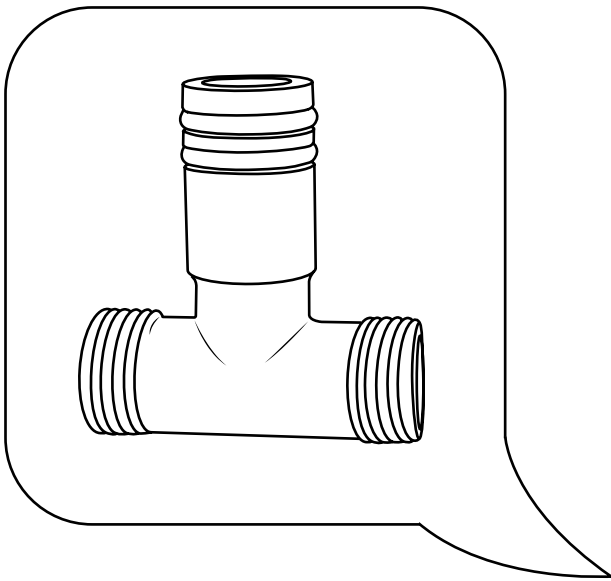

9

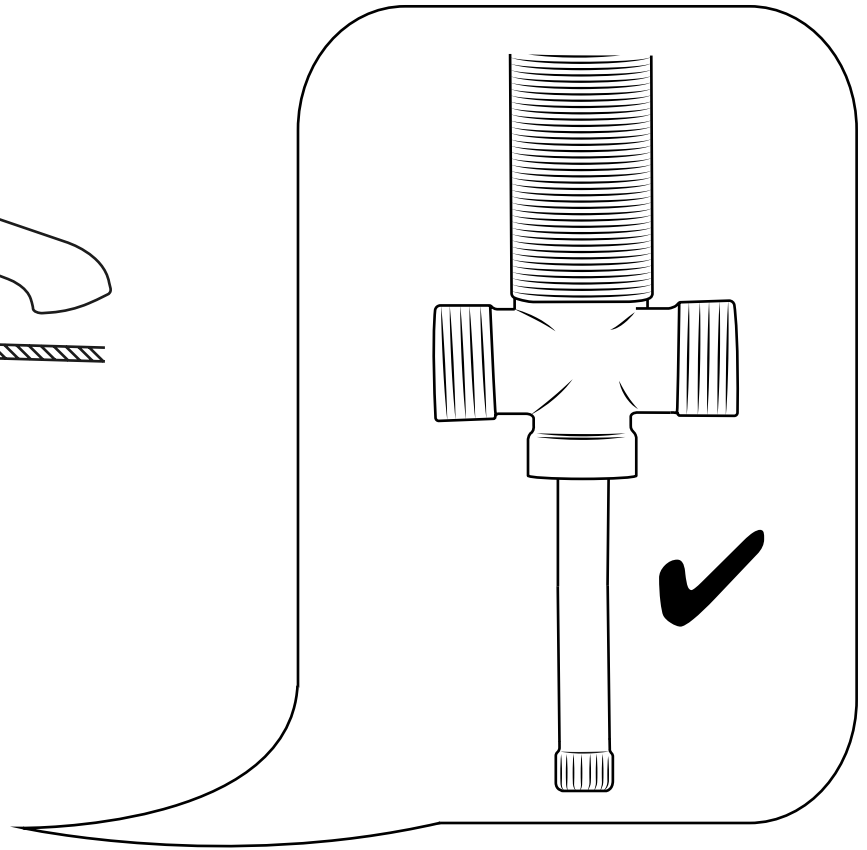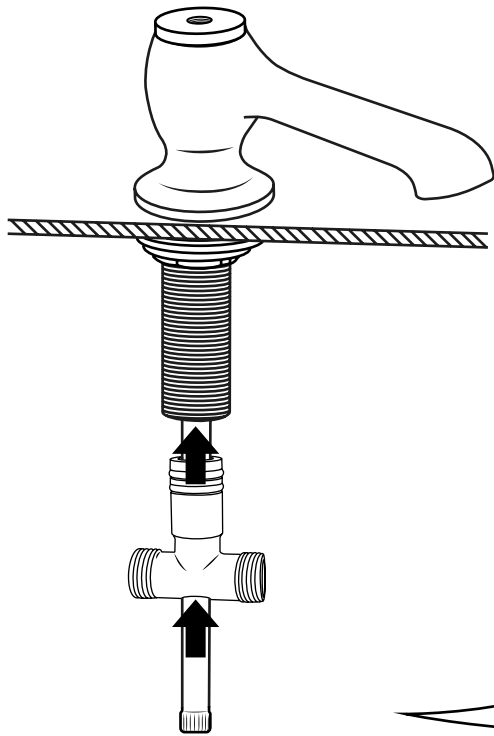


10

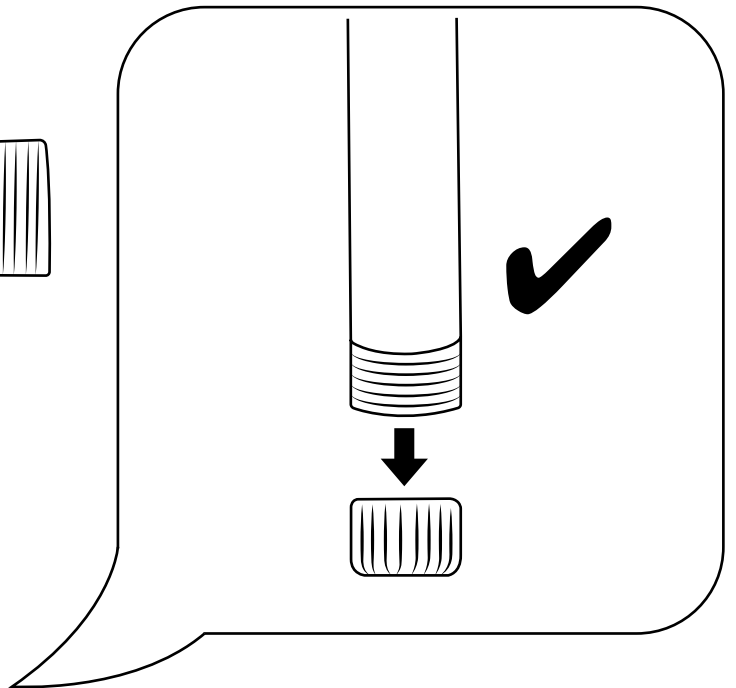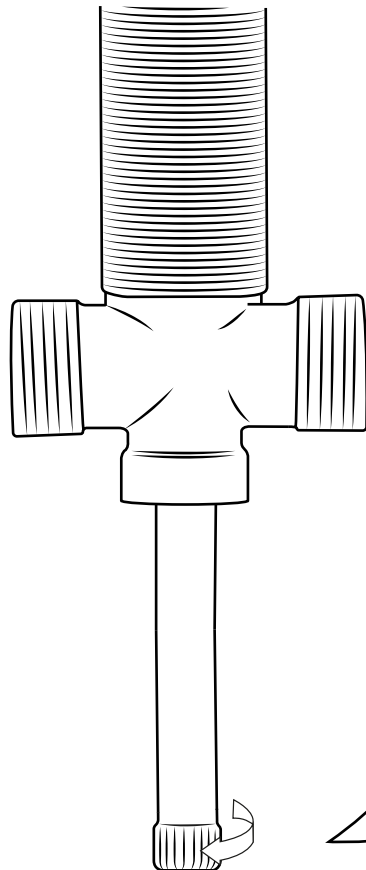






11

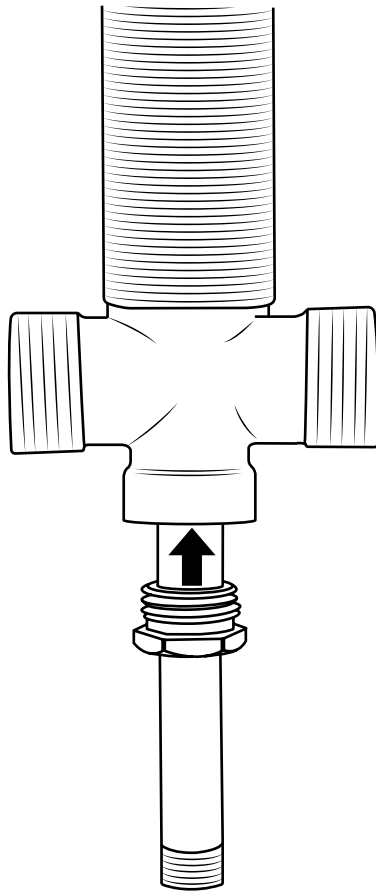


12

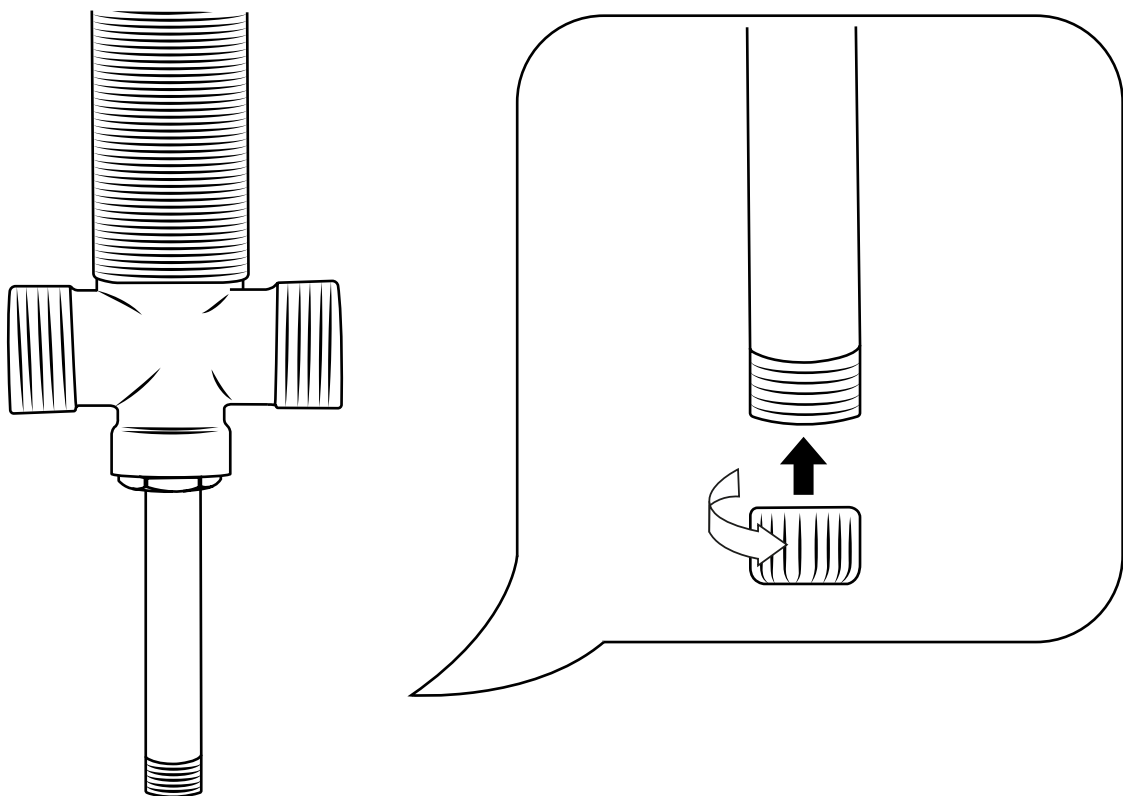


13

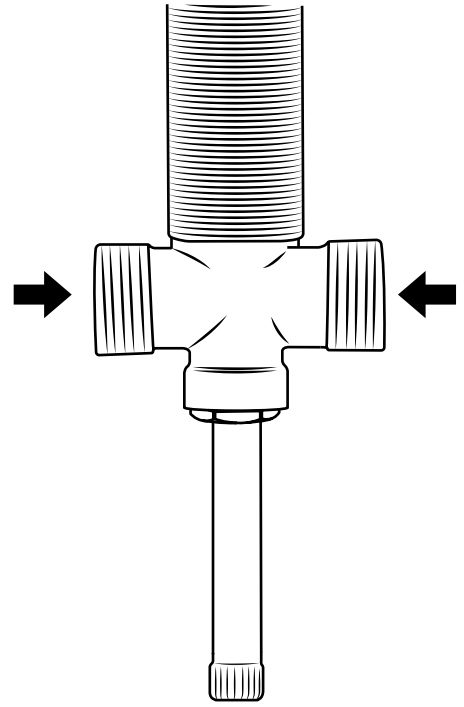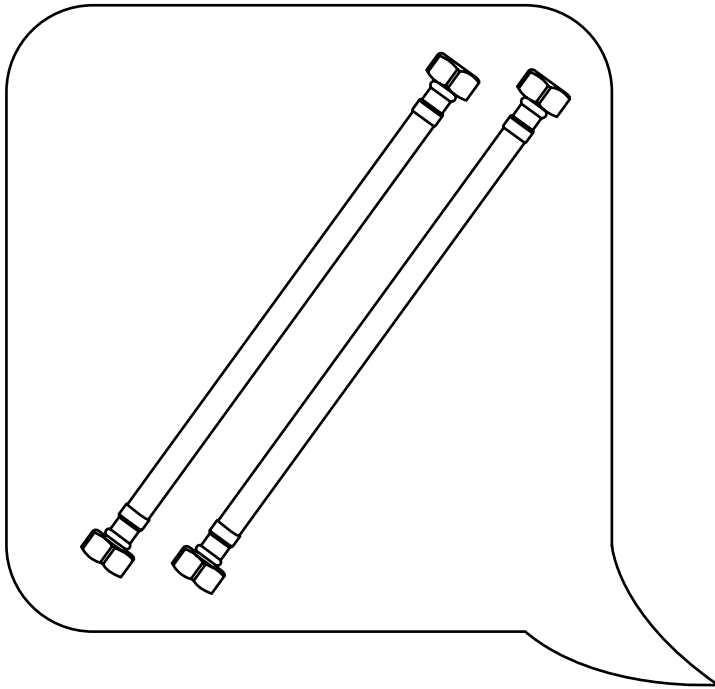


14

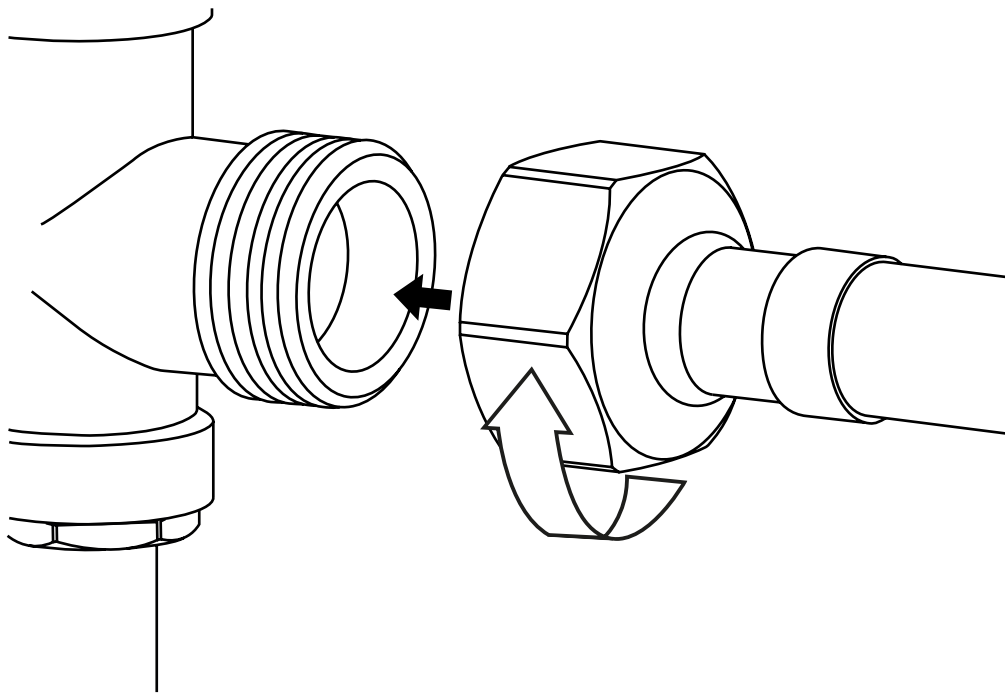


15

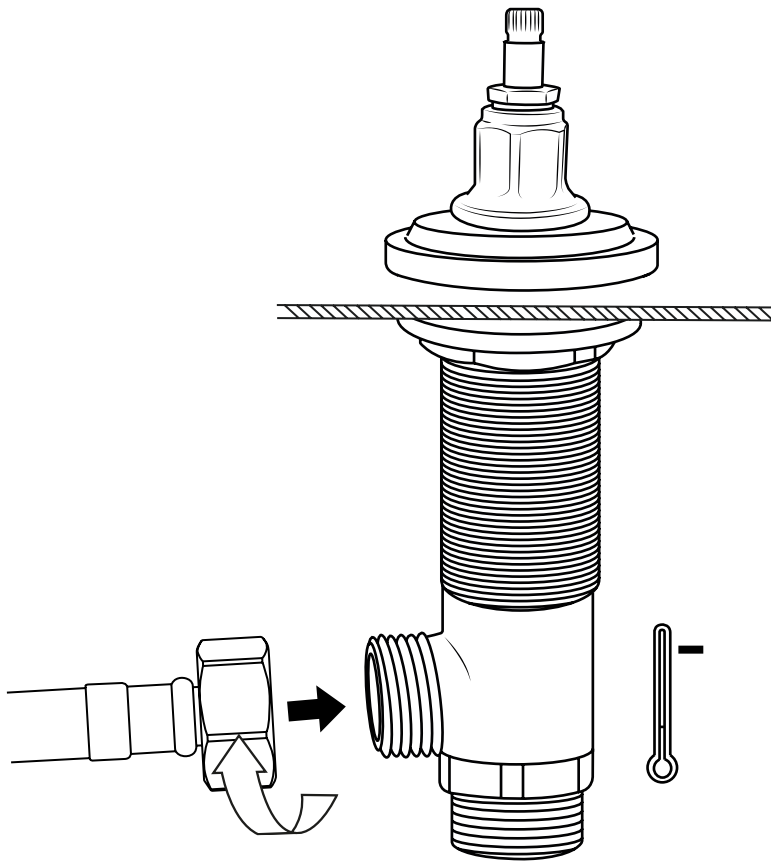


16

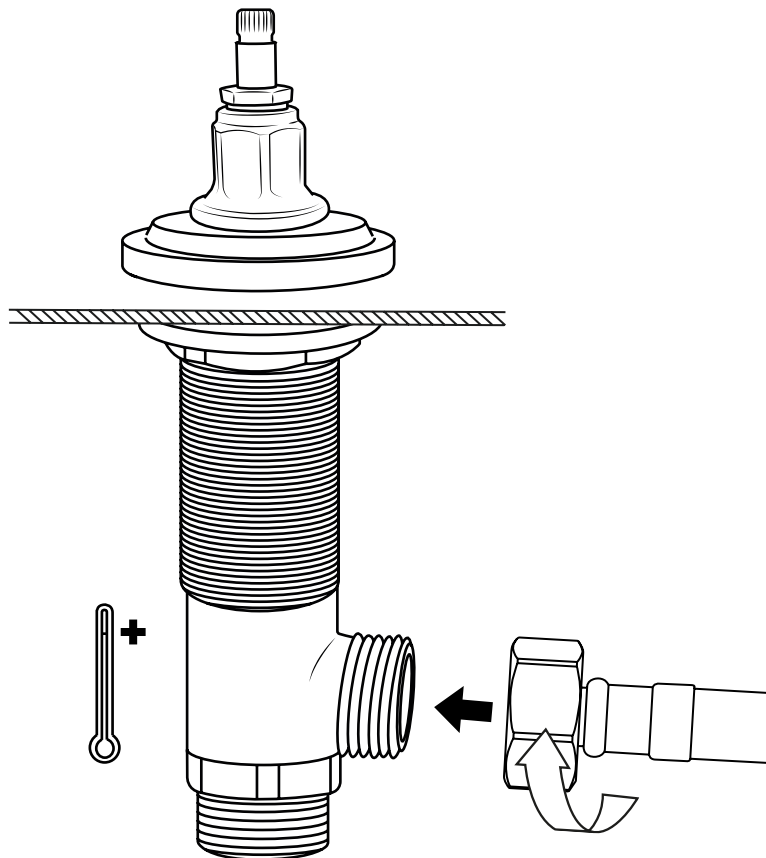


17

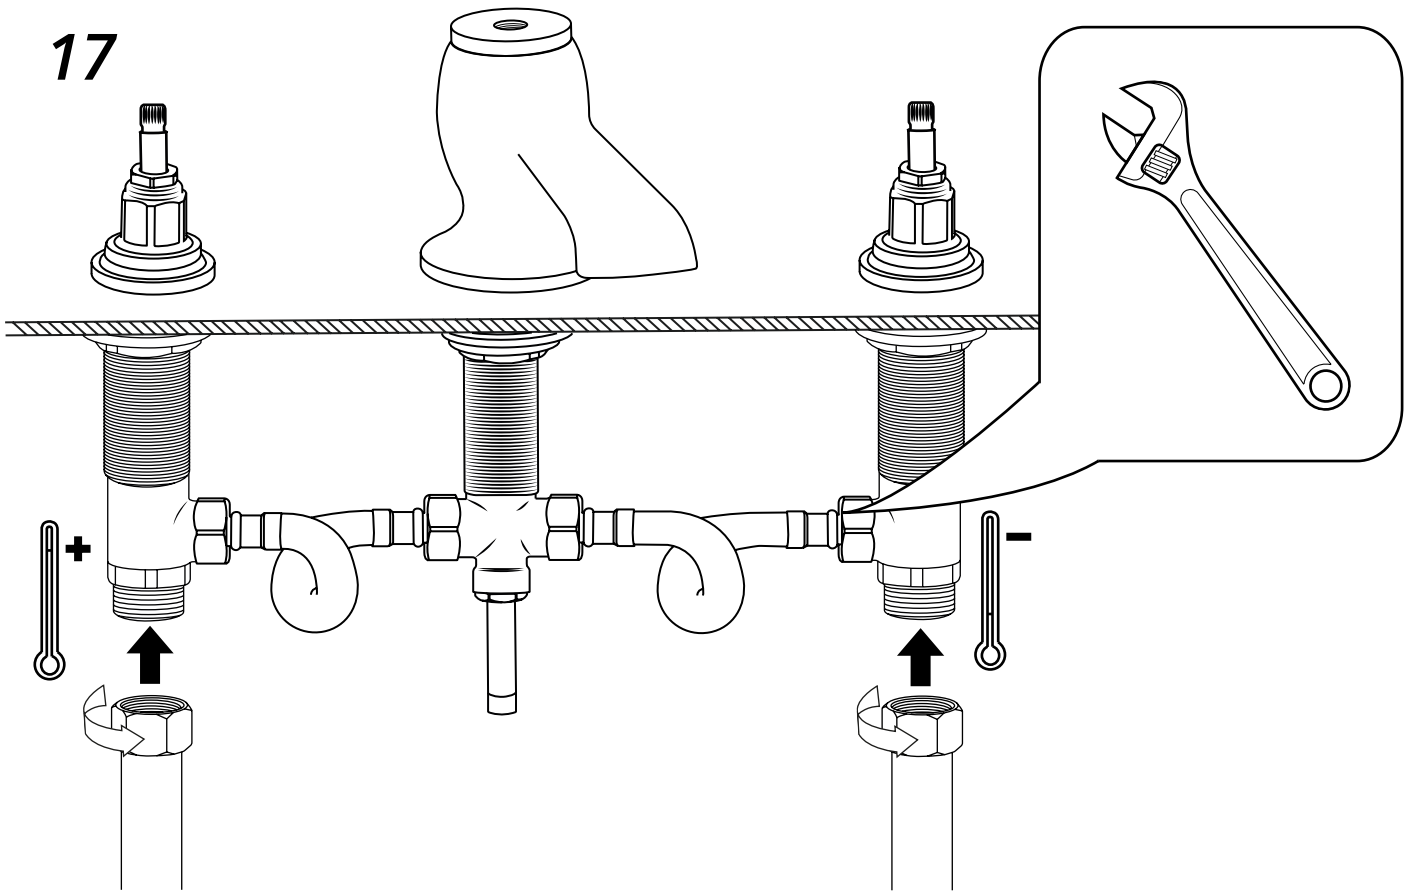


18

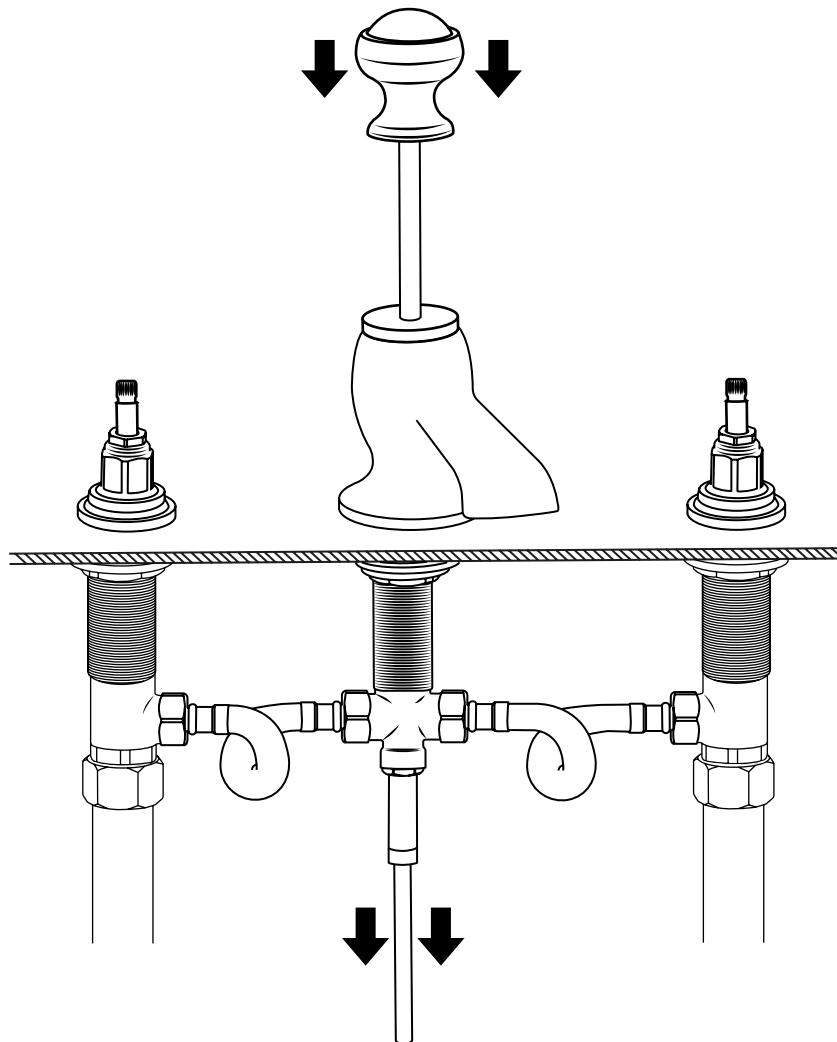


19

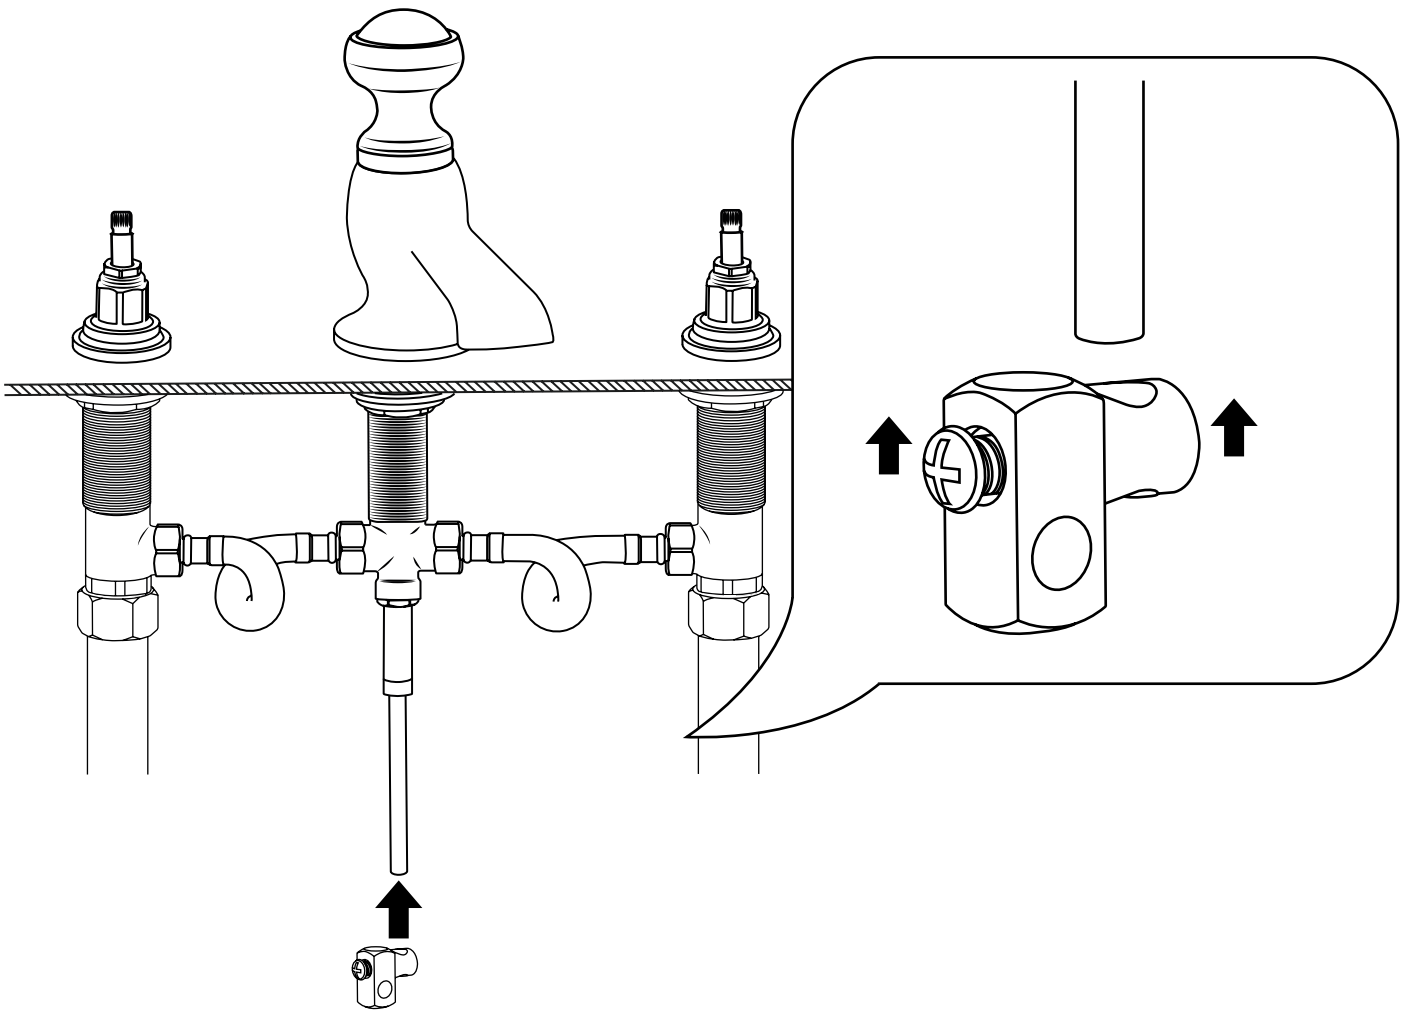


20

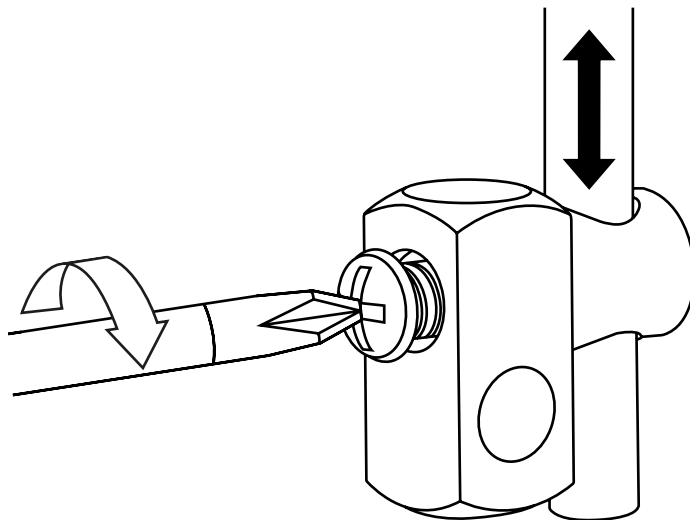


21

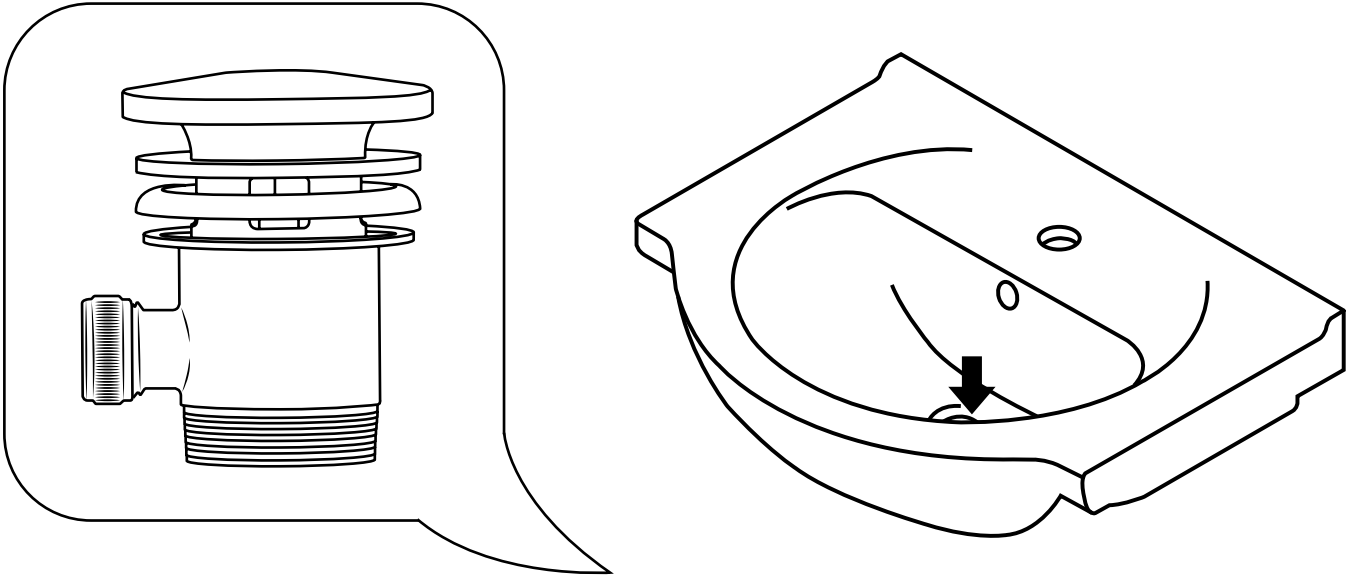


22

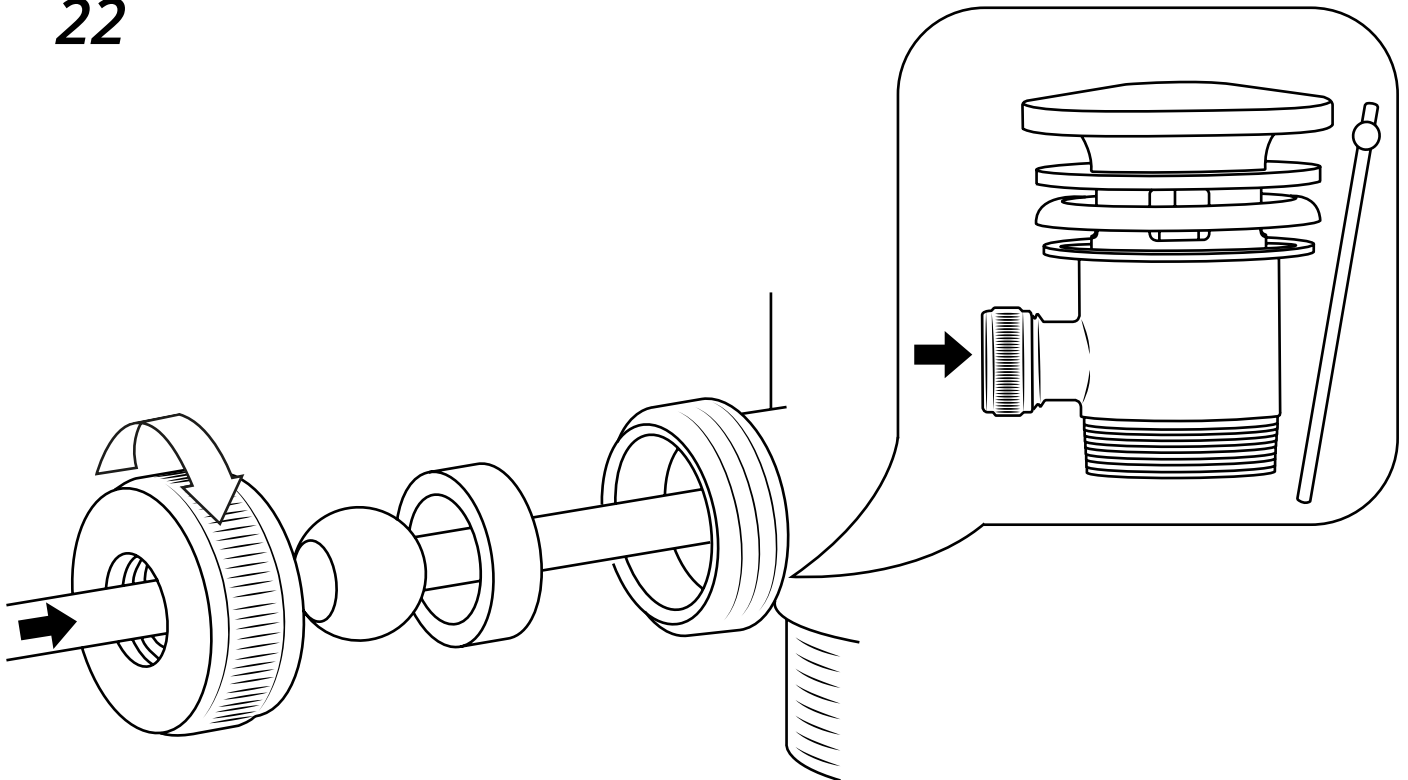


23

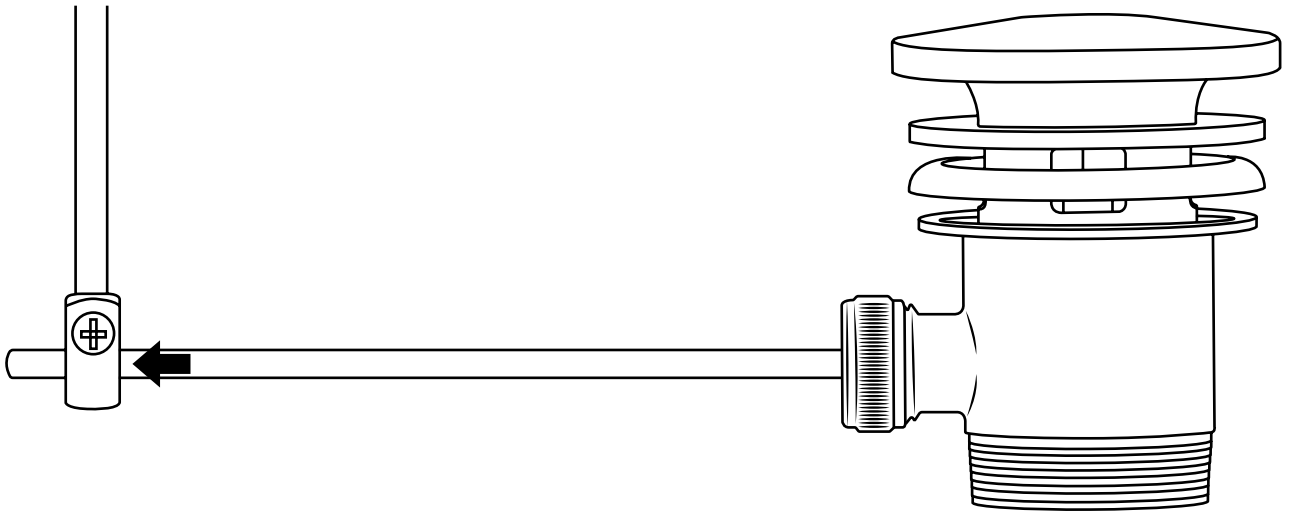

24

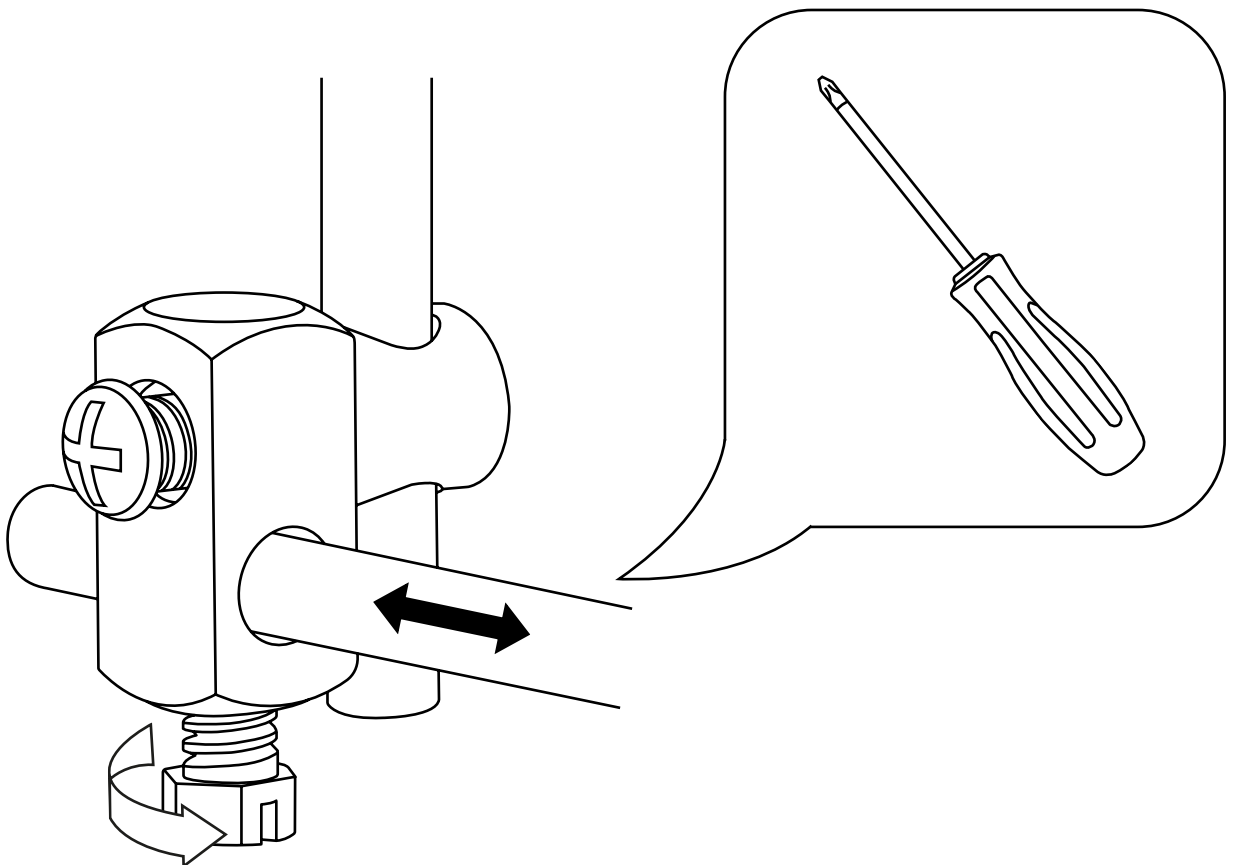

25

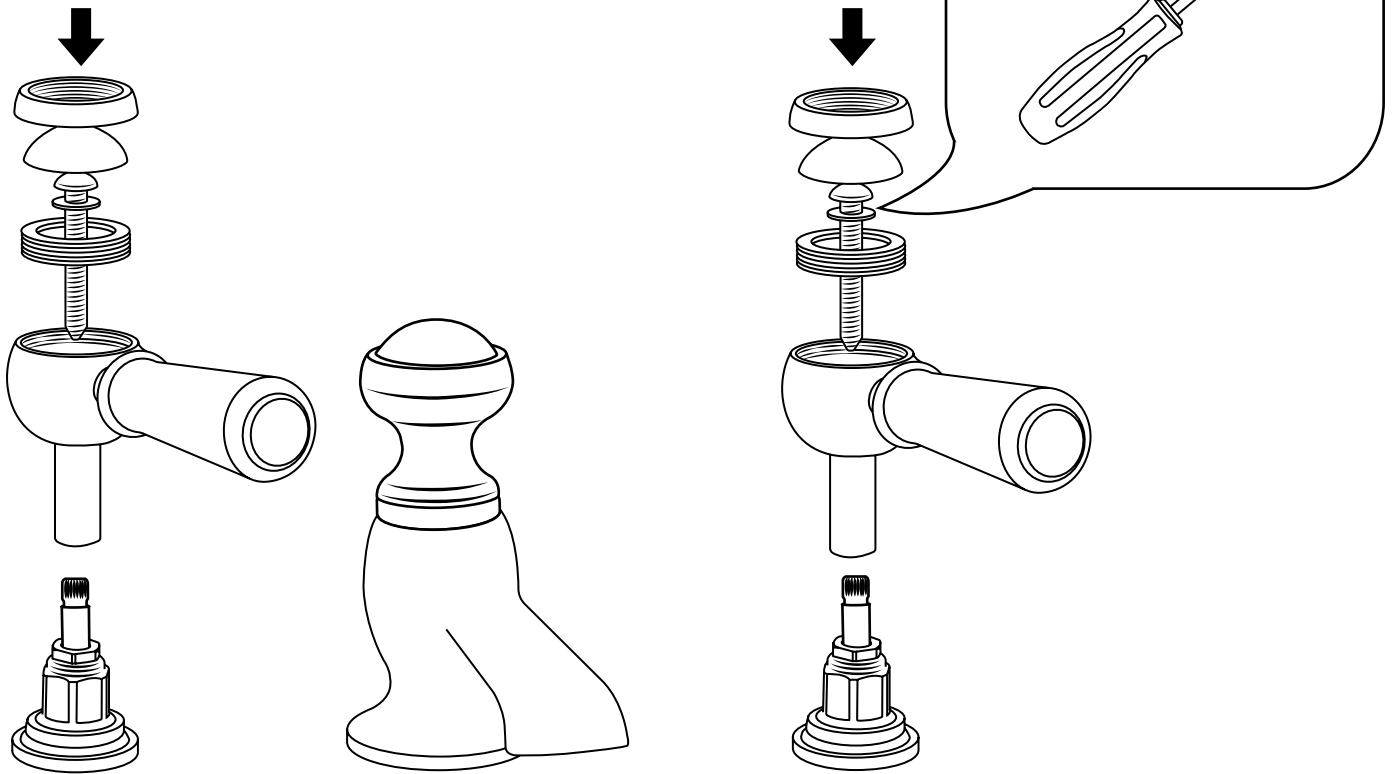

26

