



# Milano

Traditional Floor Mounted Bath Filler

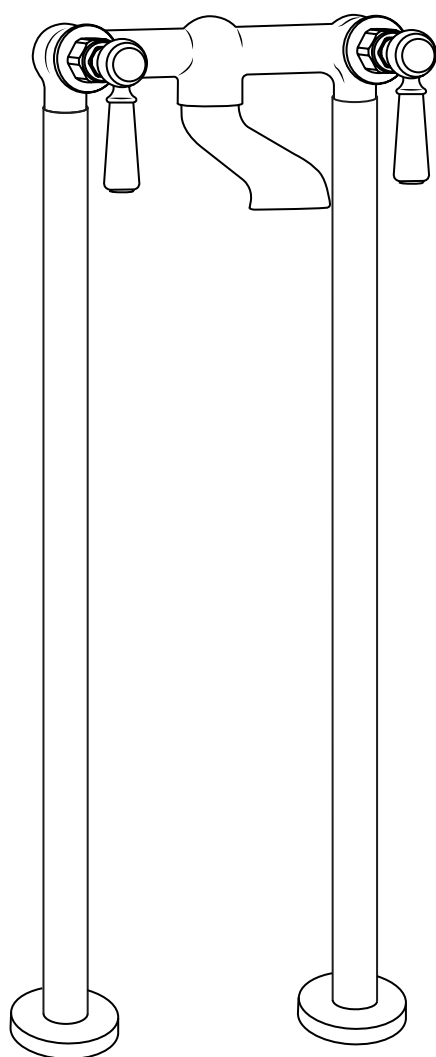







 Style may vary

Installation Guide

# Installation


---

*Tools required for installing:*

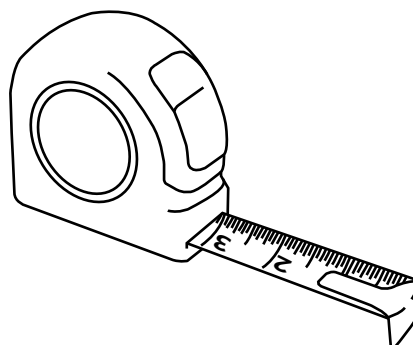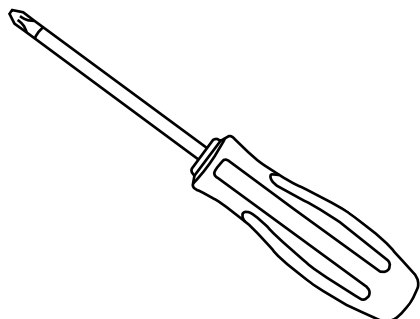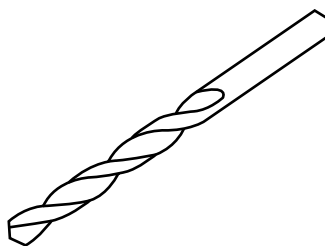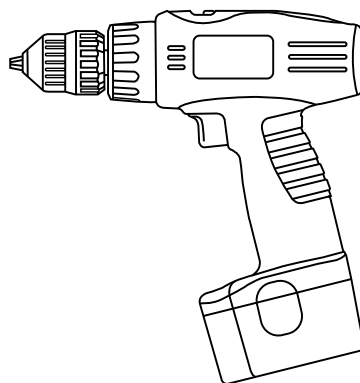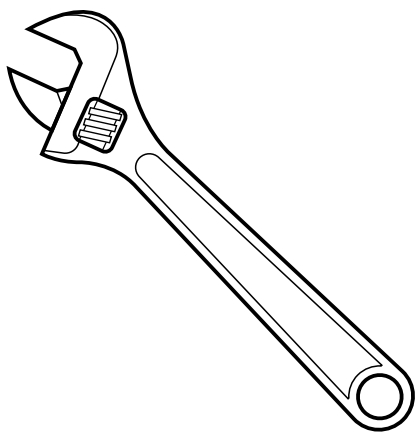


# Installation


**Parts included:**

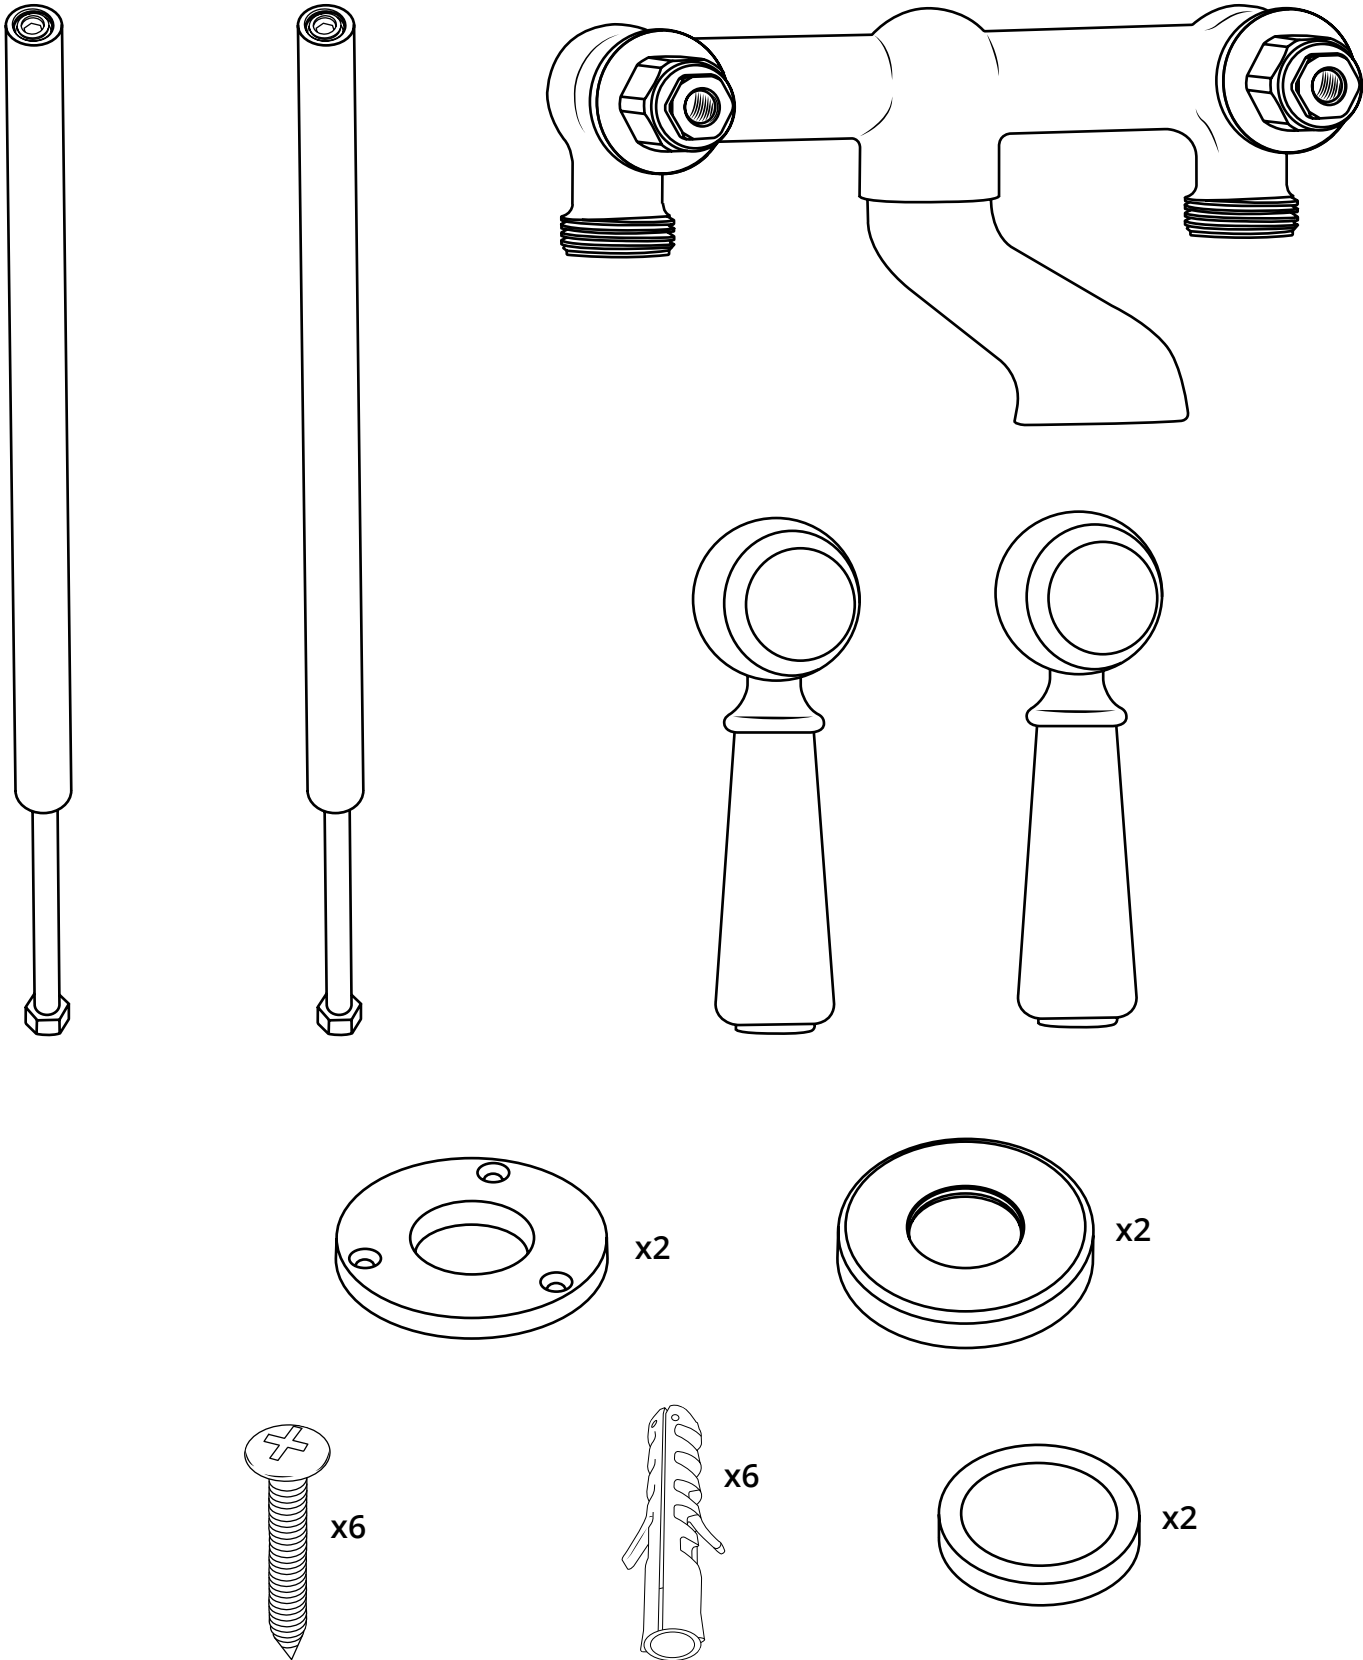


1

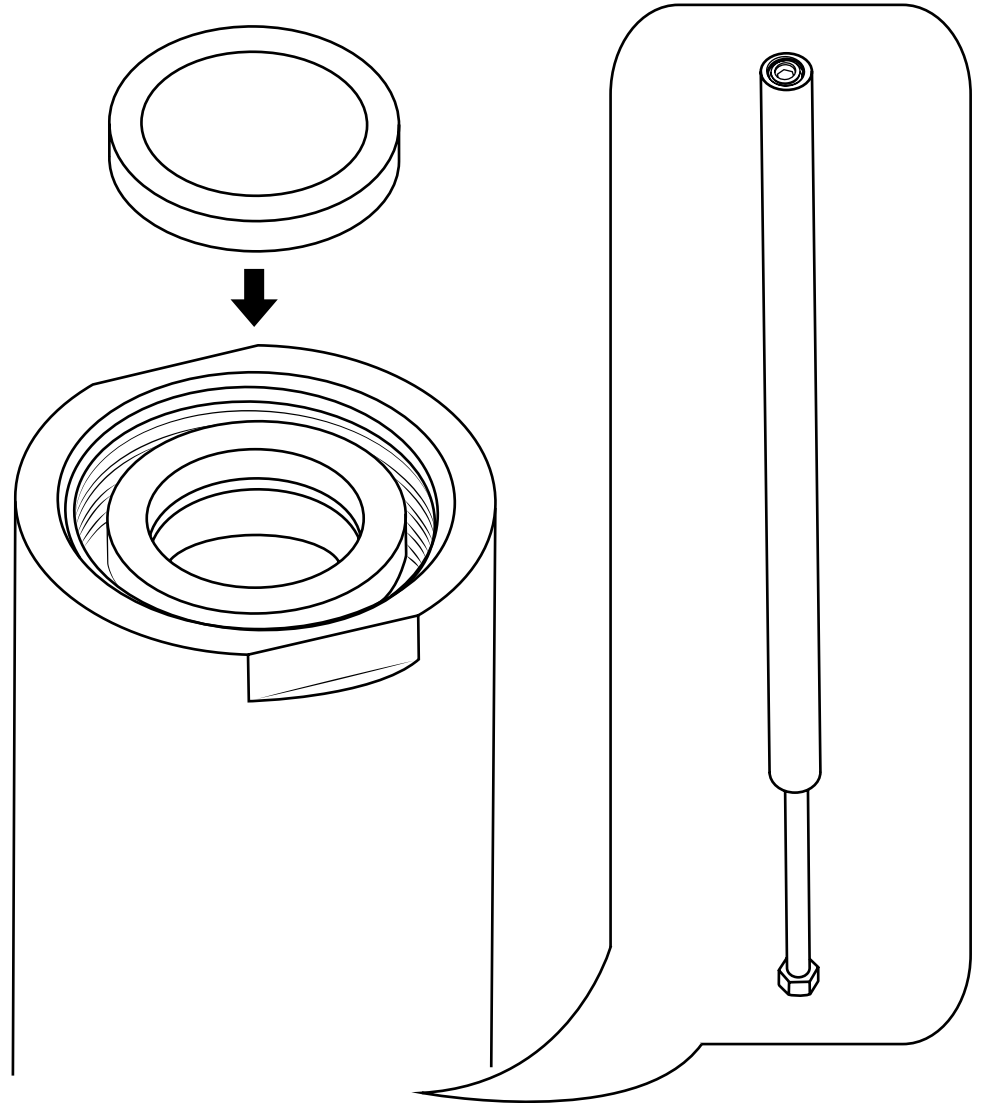


2

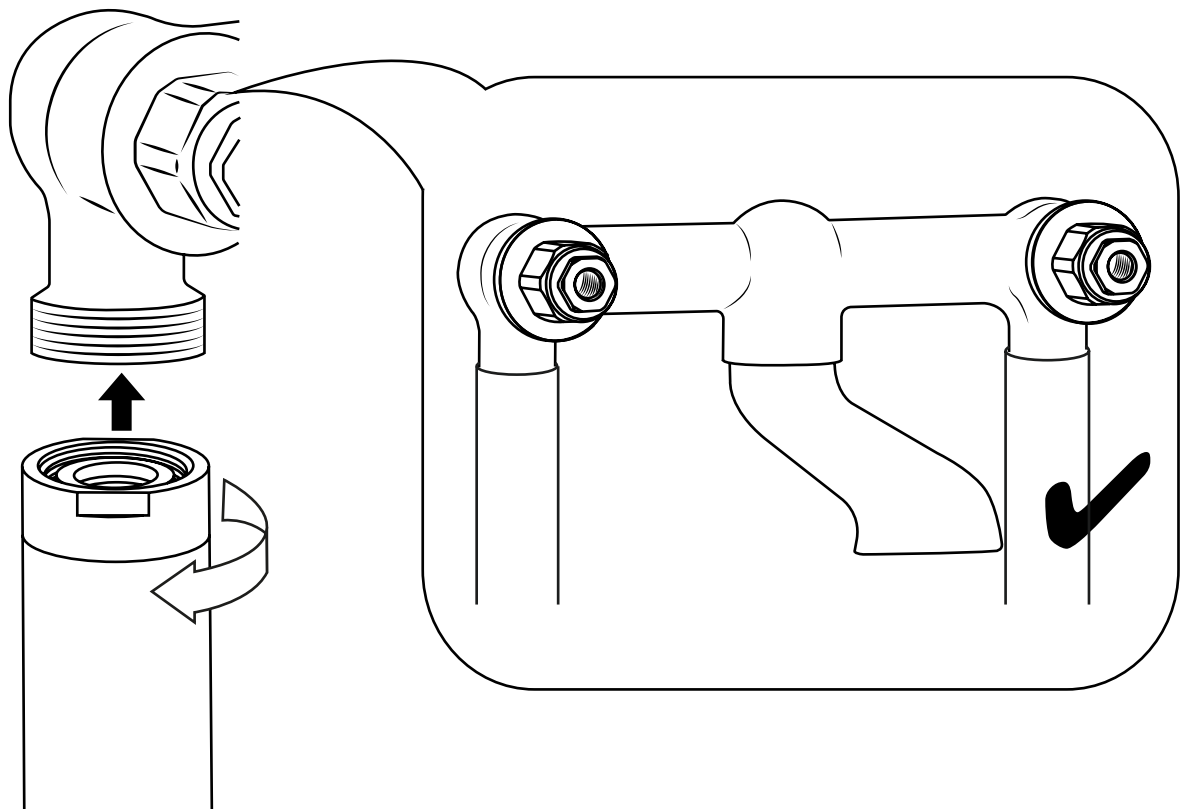


3

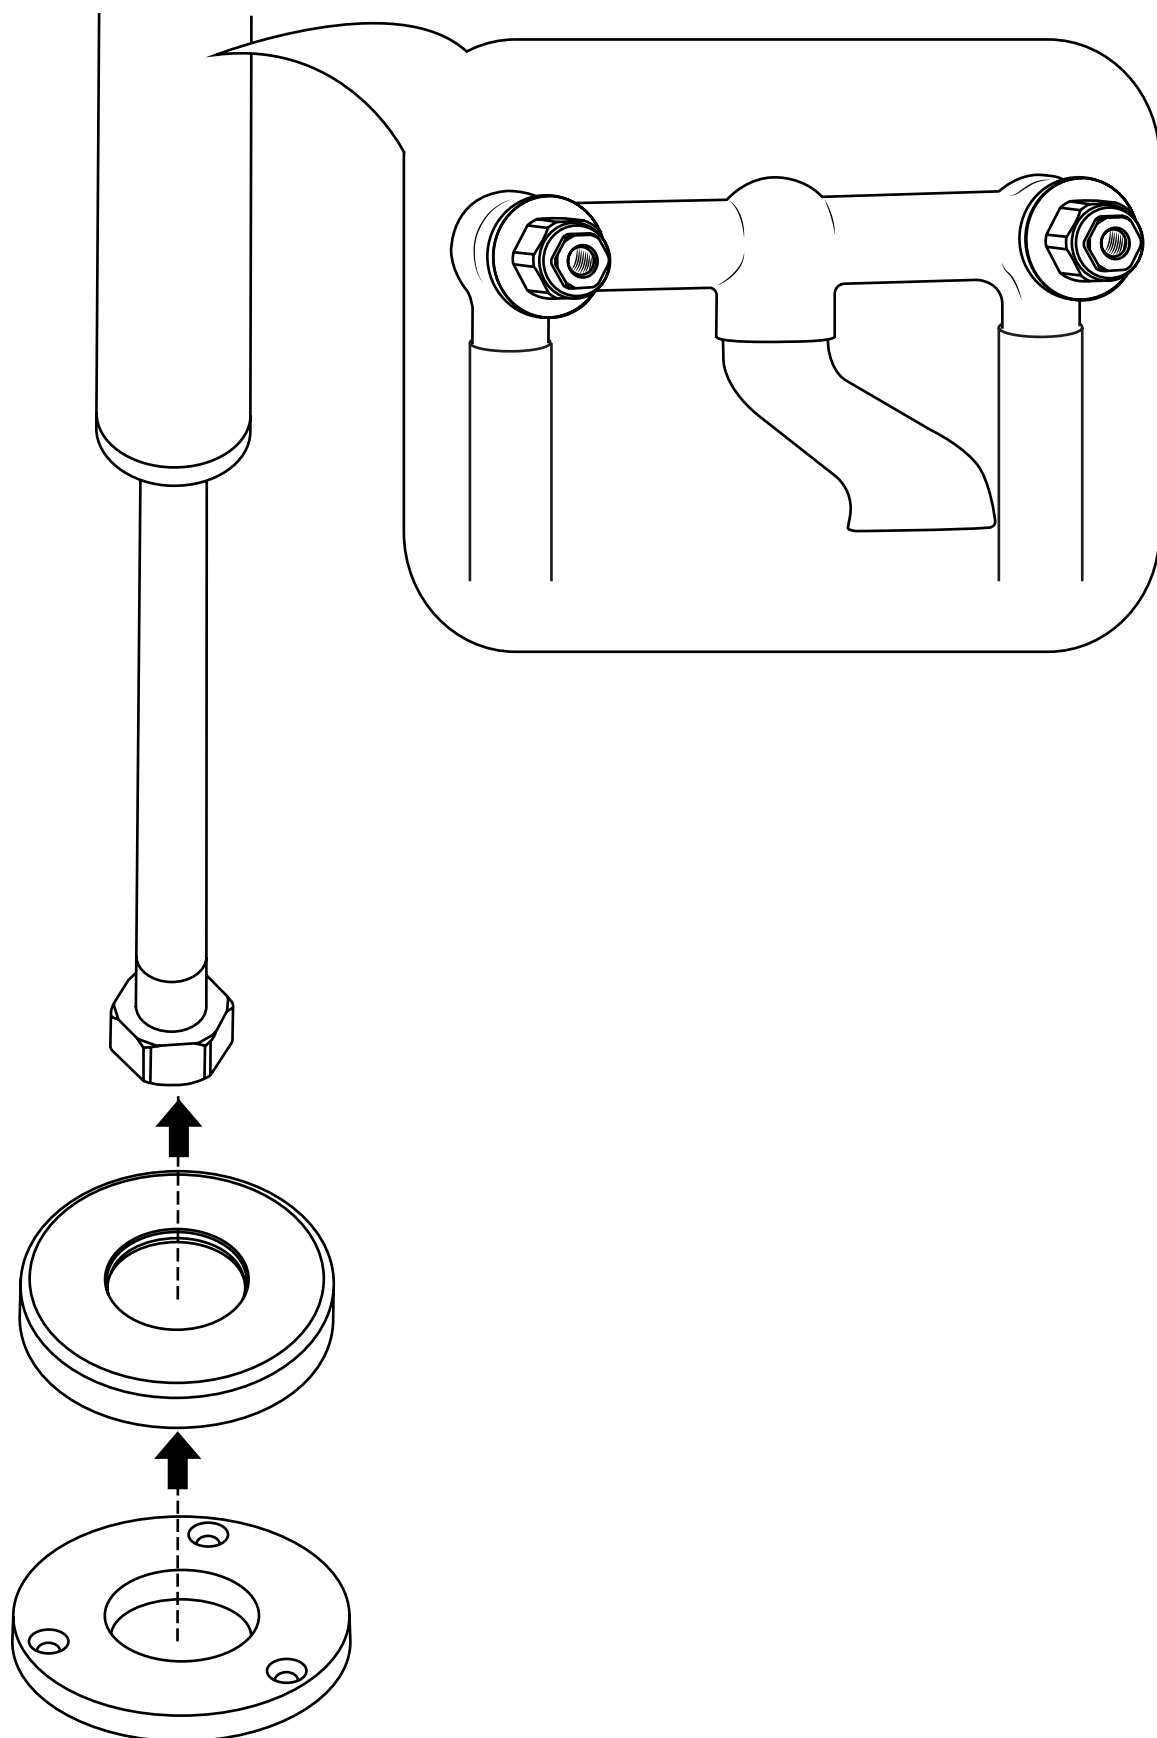


4

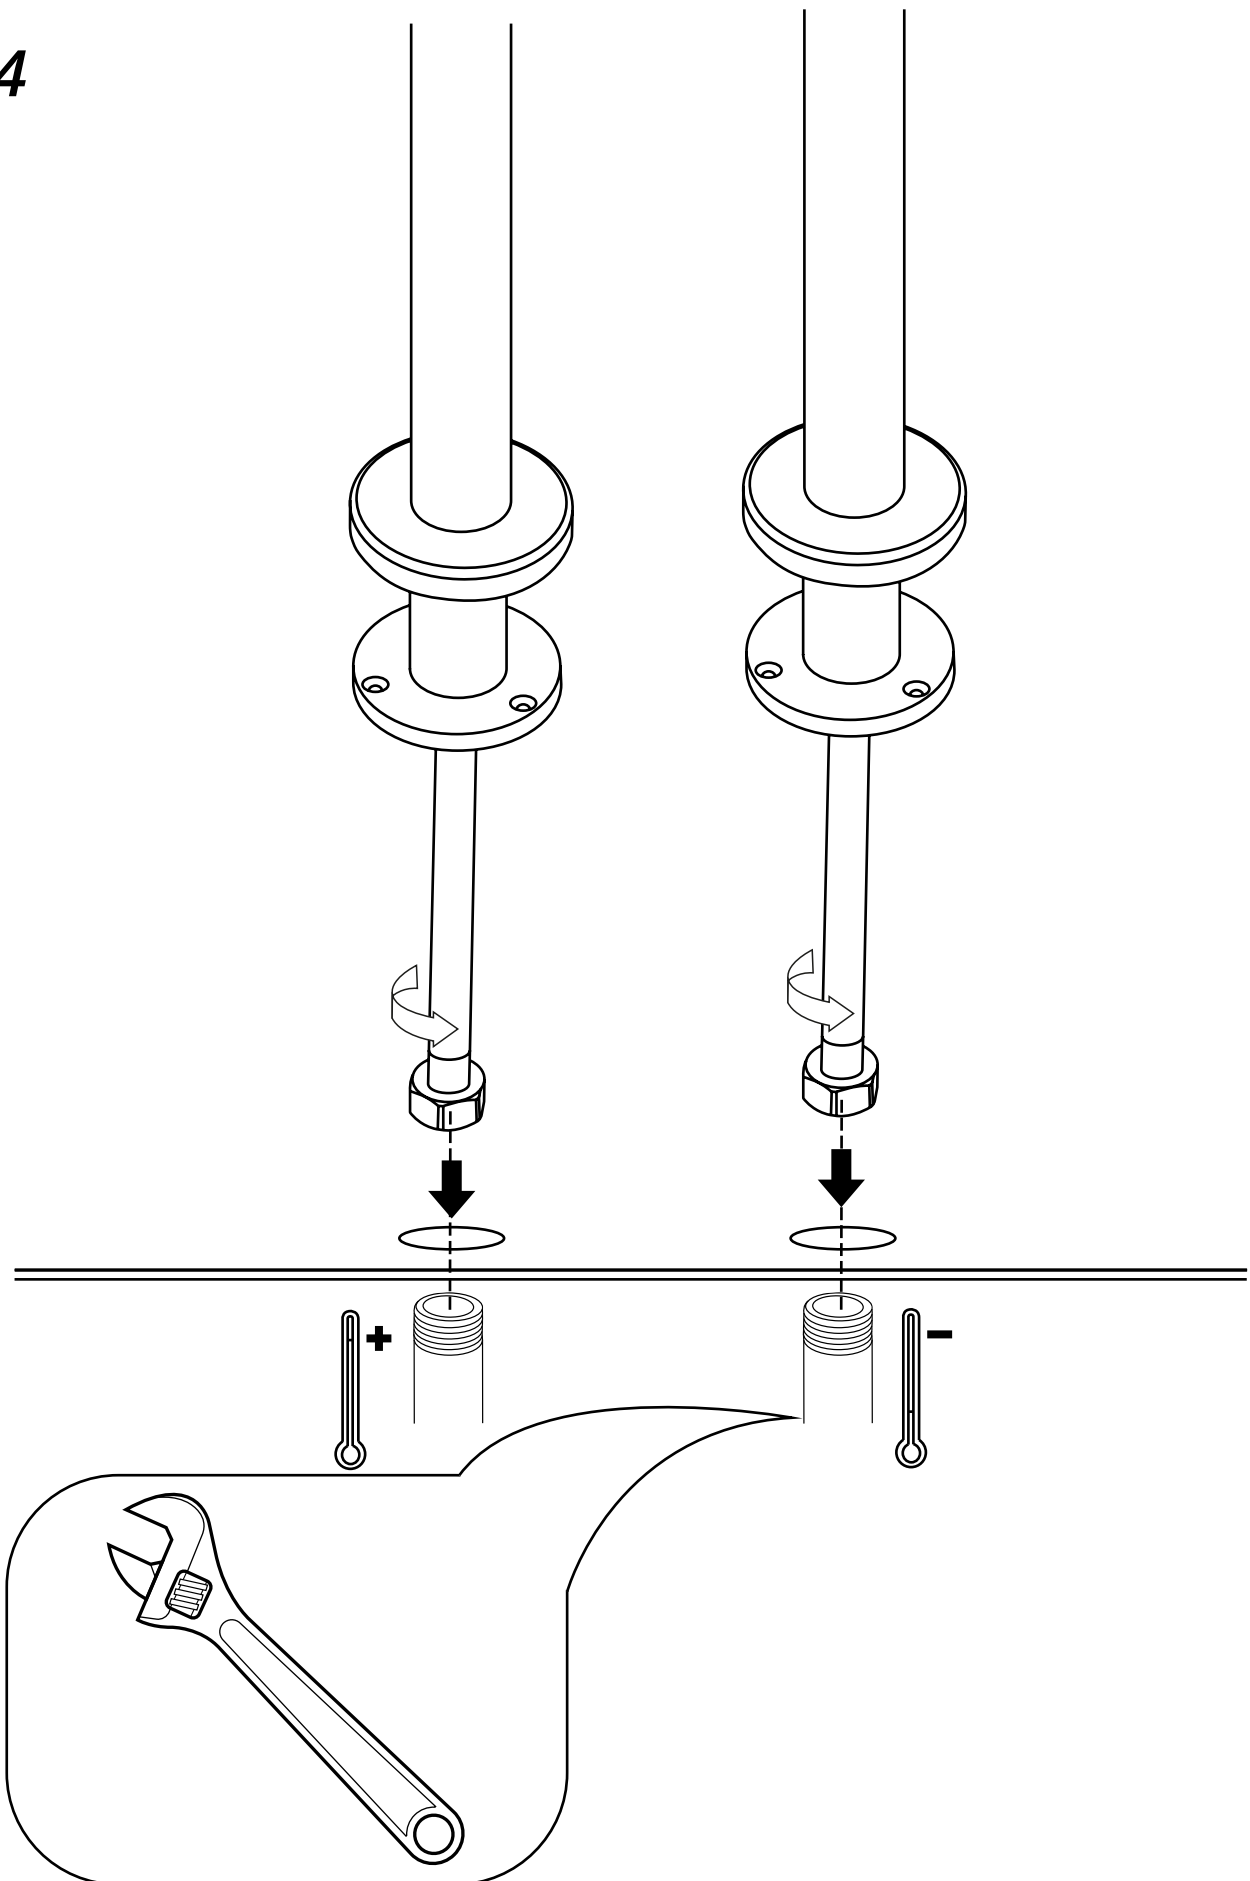


5

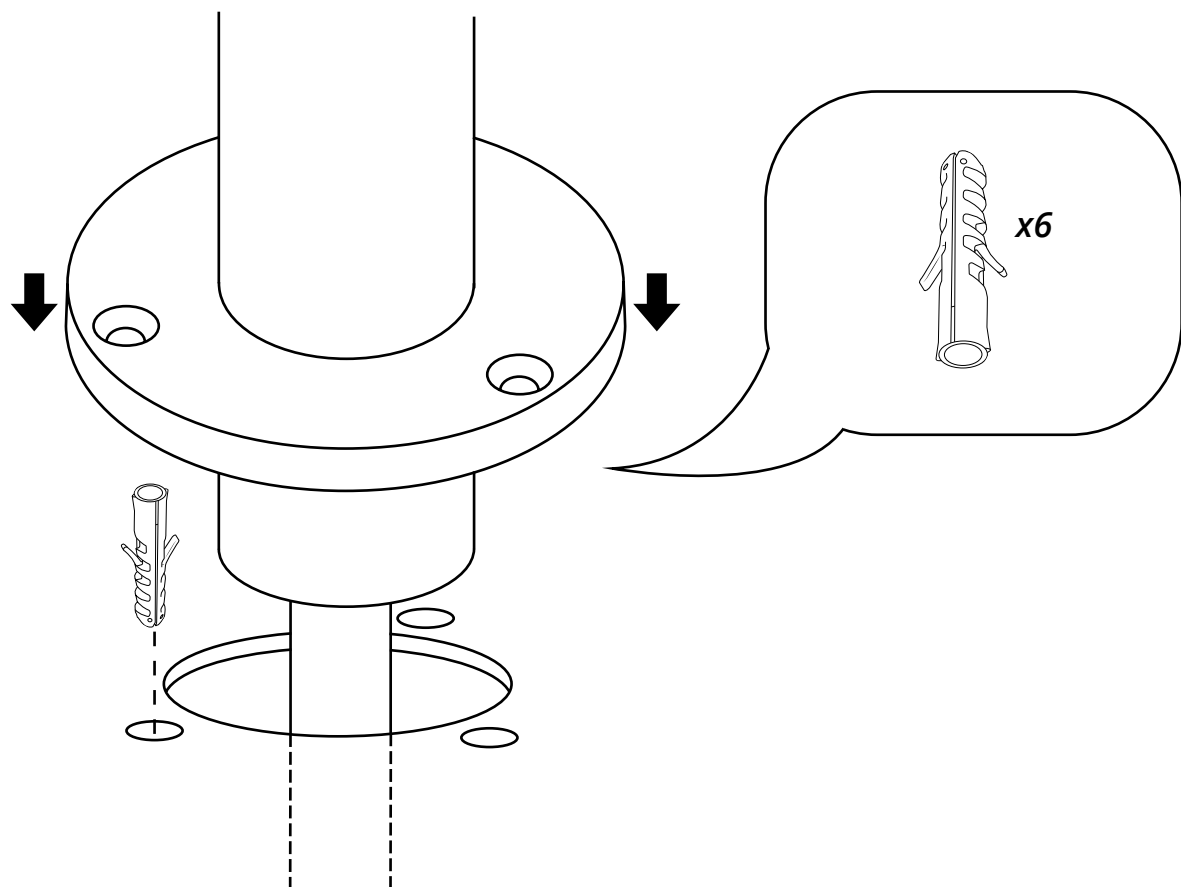


6

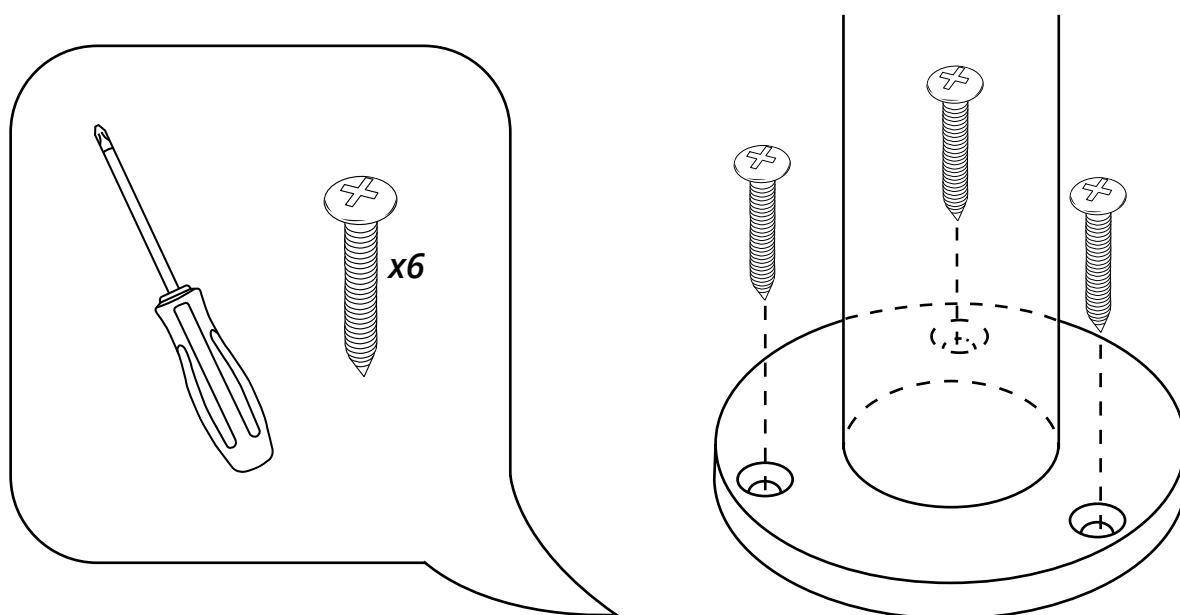

7

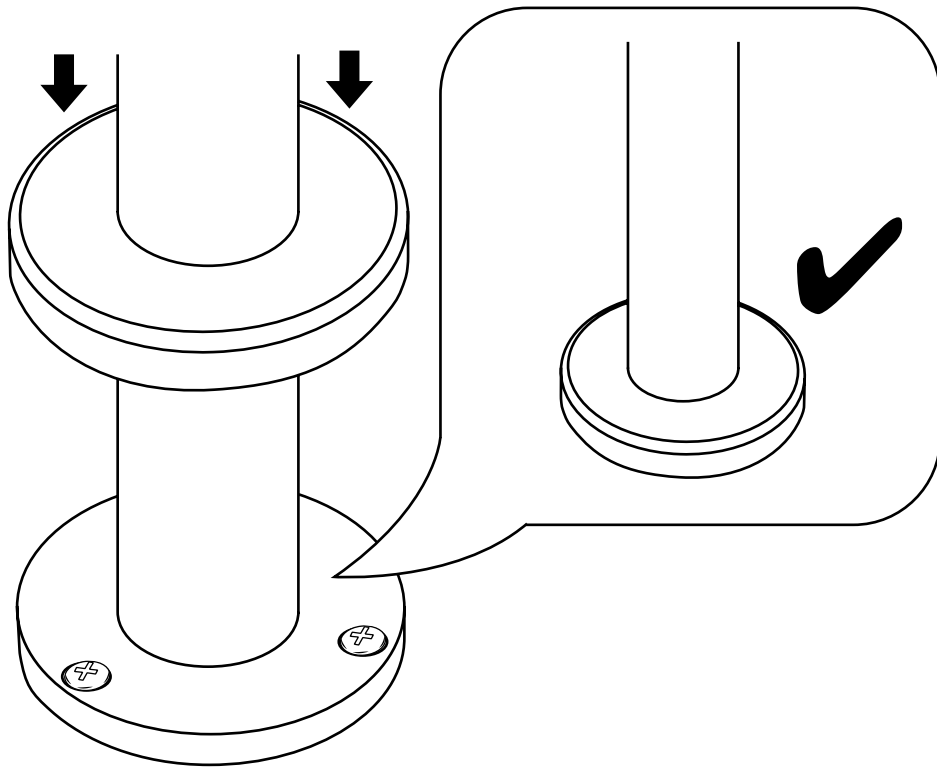


8

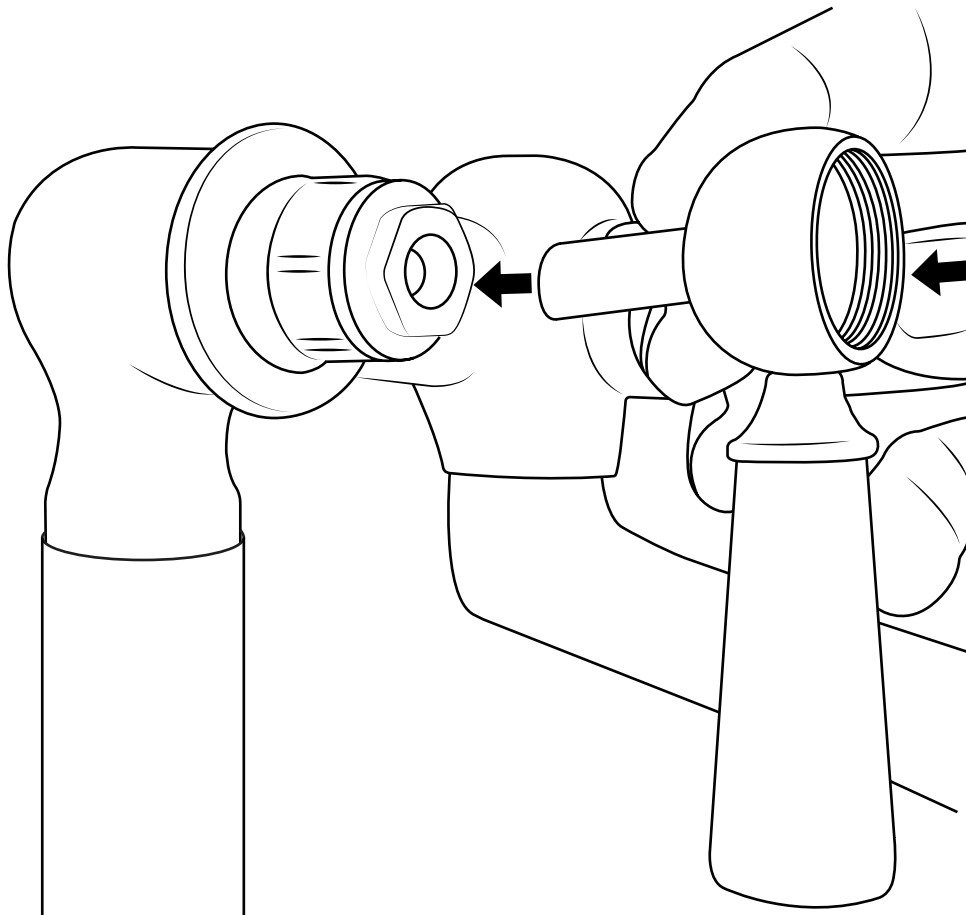






9

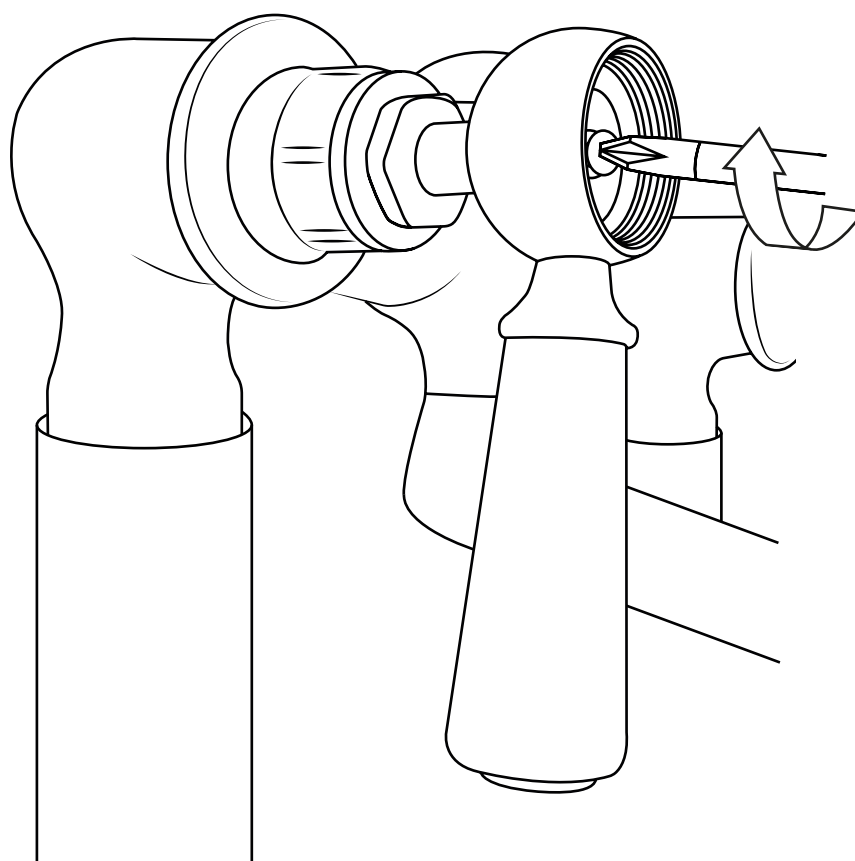

10

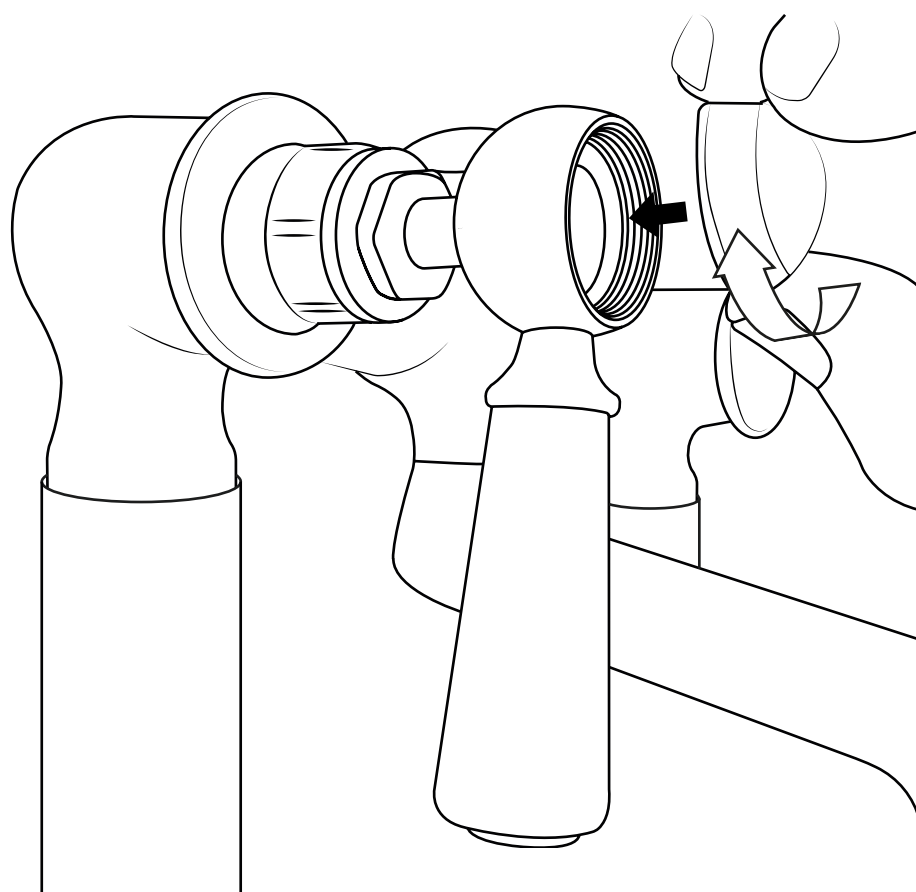

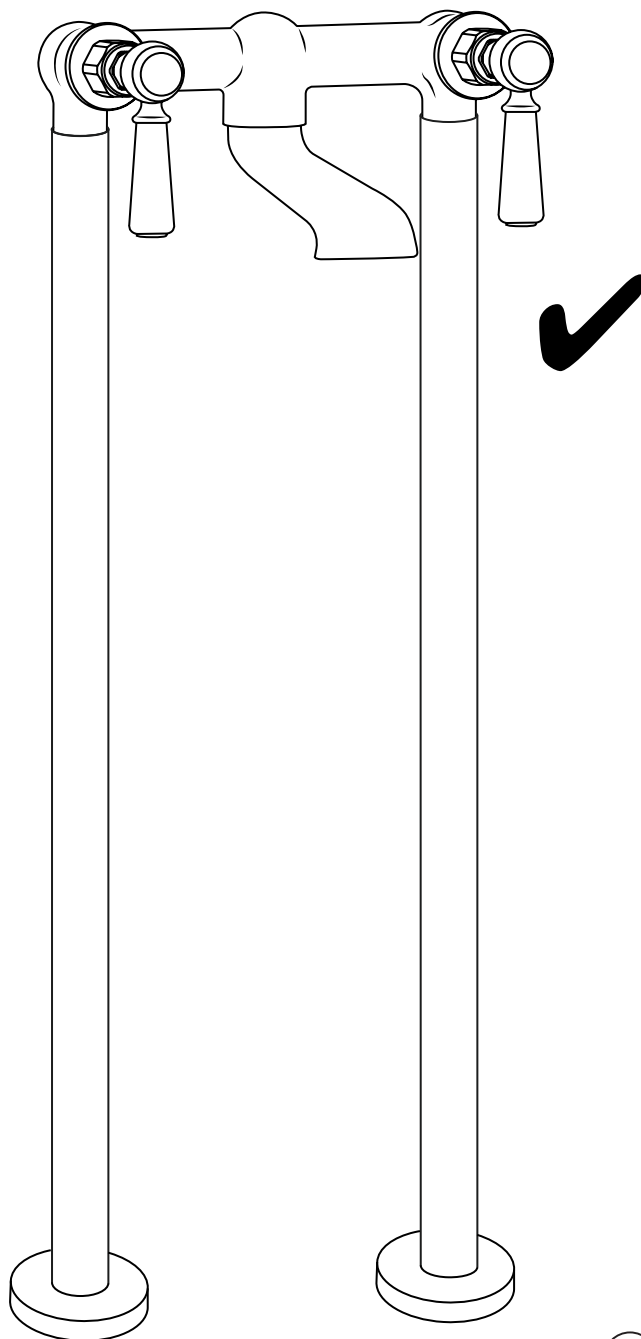

 Style may vary