

Important safety information

- We recommend installation is carried out by a qualified electrician
- Ensure that the electricity supply is switched off while installing this product
- Before installation, check the product thoroughly for signs of damage

Specification

This guide covers the following model numbers

- FDA00110 (PIR)
- FDA00150 (PIR)
- FDA00160 (PIR)
- FDA00190 (PIR)
- FDL04010 (TOUCH)
- FDL04050 (TOUCH)
- FDL04060 (TOUCH)
- FDL04090 (TOUCH)

*Please note, if the provided cable is not long enough for your installation please use the cable extension (FDL1MCAB), these can be chained together to get to the required length. Do not attempt to modify the cable length by any other means.

Components



1 x Under Cabinet Light
2 x Fixing Brackets
2 X Fixing Screws

Additional information

Working Voltage – 12V

Wattage – 8.5w


Operated via PIR sensor
or Touch sensor
(Dependant on model)

Installation


1. Measure and fit the fixing brackets evenly apart. Ensure that the location is free of any obstruction that will cover the PIR sensor.



2. Slide the under cabinet light into the fixing brackets

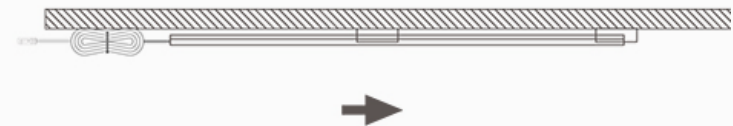

3. Connect the power cable to a suitable 12V LED DRIVER, as mentioned earlier in this guide do not attempt to modify the cable to extend the length, use product FDL1MCAB.

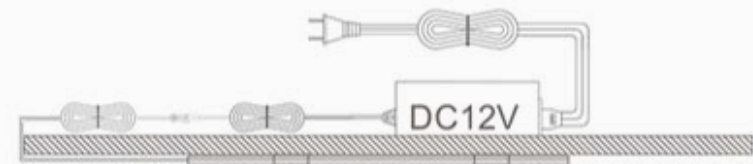

To Operate –

PIR Version – Open the cabinet to activate, the light will deactivate 30 seconds after last detected movement.

Touch Version – Touch the illuminated blue light on the unit to activate, to switch off, touch the blue light again.