


IMPORTANT- Installation advice

**Design of radiator & element may differ.*


Please check the Glycol level before installing, for instruction on how to do this please see step 4 & 5 of the 'Temperature issues after installation' below.

1

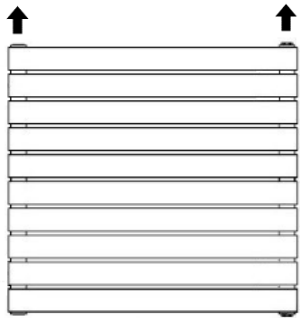


Unbox and stand your radiator with the inlet(s) you will be inserting the element into facing upwards, it is advised to place the radiator on a protective sheet due to potential spillage.

2

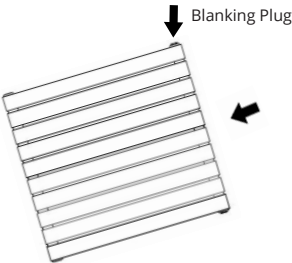


With the radiator still on the protective sheet, position the radiator at an angle and remove the top blanking plug. This will allow you to insert the element into the radiator without losing any glycol and also allow you to check the glycol level is correct. *Please see step 1 of the "temperature issues" for reference on correct glycol levels.

3

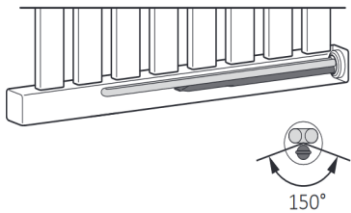


When the element is installed horizontally, the temperature sensor (single probe) must be positioned as low as possible in the bottom collector bar to get the best possible heat output. *Please note, the position of the temperature probe is not fixed and may differ. This can determine which side inlet (left/right) the element is fitted to in order for the element face to be front facing. See step 4 of "Installation advice" for an example of probe positioning.

4

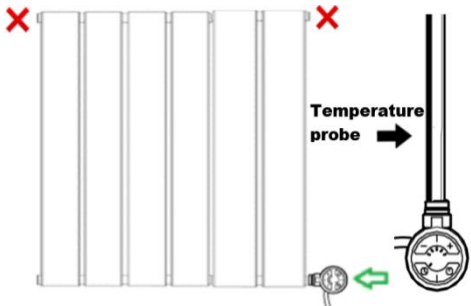


If the temperature probe is positioned on the left side when the element is front facing, the element will need to be installed on the right inlet to allow for the probe to be positioned at the bottom as referenced in step 2. *This will be the opposite if the temperature probe is positioned on the right side of the front facing element.

5

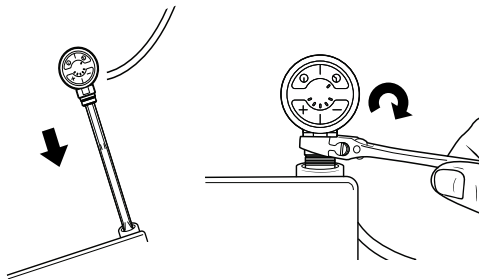

Slowly insert the element into the inlet at an angle to avoid spillage. With an adjustable spanner turn clockwise to tighten the element into the radiator inlet. **DO NOT twist the head by hand as this can damage the element beyond repair.**


6

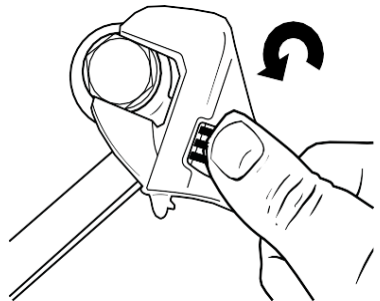

With an adjustable spanner, check all of the inlet/outlet blanking plugs to ensure that they are all secure to avoid any glycol leakage before switching the radiator on. Please take care not to over tighten the blanking plugs.


IMPORTANT - Temperature issues after installation

1

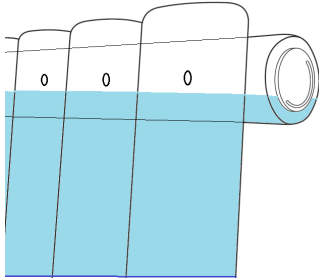


If you have issues with the radiator not heating up, it is possible that the glycol level has dropped due to spillage when installing the unit or trapped air. This prevents the glycol level from reaching the holes in the collector and the heat will not distribute through the unit.

2

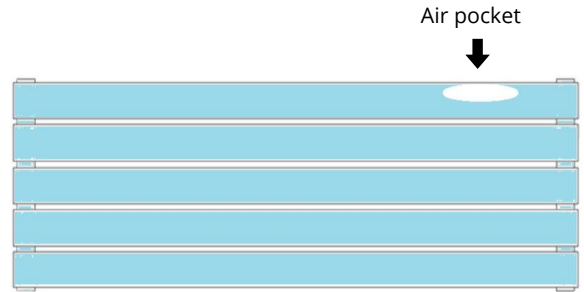


Please remove the radiator from the wall and lie it flat on a flat surface.

3

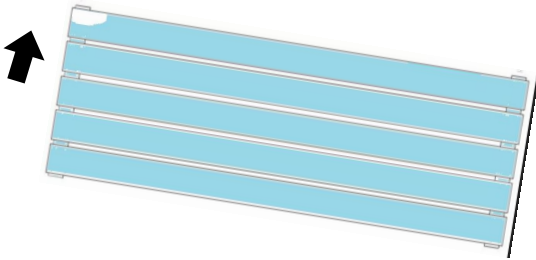


Angle the radiator, this will bring the air up to the highest point of the radiator.

4

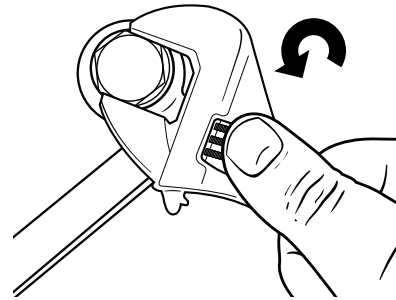


Remove the blanking plug at the highest part of the radiator using an adjustable spanner.

5

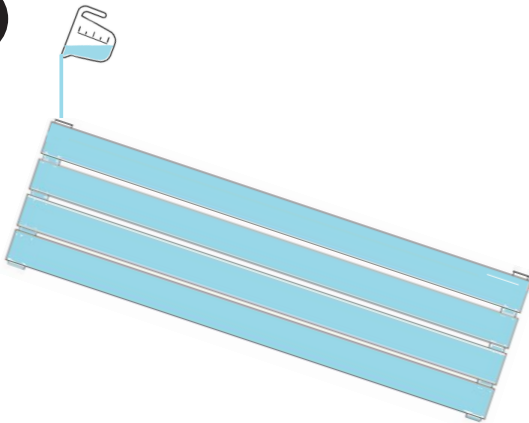

If needed with the radiator angled top up the radiator with water until almost full and re-fit the blanking plug.

6

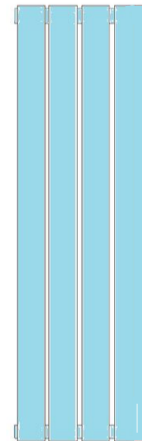

The radiator can now be positioned back on the wall and should heat up without issue.